

Ford Focus ST

Stainless Steel Sports Grille Mesh Lower

Kit Contents: -

1. off Lower Mesh Grille
2. off M4 x 20mm Cap Screw
2. off Retaining Bracket



Tools Required

P2 Screwdriver

Grille Fitting Instructions

1. Removing existing moulding as shown in **fig 1 & fig 2**.
2. Fit masking tape around aperture to protect paint.
3. Locate the new lower grille into position, check that it is central then locate the top 2 brackets (**fig 3**).
4. Push down gently on the lower part of the grille until the lower bracket locate behind the aperture (**fig 4**).
5. Slightly pull corner of grille and bend in slightly to locate retaining bracket behind the aperture (**Fig 5**).
6. Tighten the allen key whilst holding in place with screw driver (**Fig 6**) then repeat to the opposite side.
7. The grille is now complete.



Fig 1



Fig 2



Fig 3



Fig 4



Fig 5

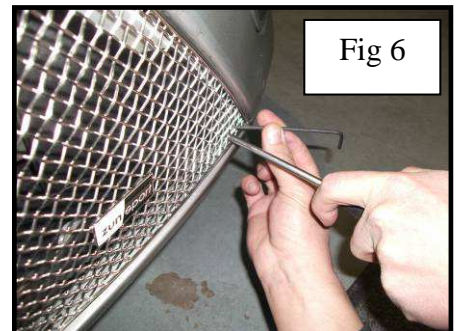


Fig 6