

Ford Focus ST MK3

Stainless Steel Sports Grille Mesh Upper

Kit Contents: -

- 1. off Lower Mesh Grille
- 4. off No.6 x 3/4" Screws

Tools Required

- P2 Screwdriver
- Hacksaw (with Option 2 Only)



Grille Fitting Instructions (Option 1 Without Cutting Out)

1. Fit masking tape around aperture to protect paint (fig 1).
2. Locate the new lower grille into position, check that it is central.
3. Push the Upper spring hooks through the existing grille and then the lower spring hooks (fig 2).
4. Check that the clips have engaged if not, put pressure on the front of the grille, lever the brackets behind the existing plastic grille with a flat screw driver until they lock into position (Fig 3).
5. Screw the pins through the U brackets into existing plastic (Do not over tighten) (Fig 4).
6. Remove the tape and the grilles are now complete.



Fig 1



Fig 2



Fig 3



Fig 4

Grille Fitting Instructions (Option 2 With Cutting Out Solid Plastic)

1. Fit masking tape around aperture to protect paint (fig 1).
2. Using a hacksaw carefully cut out the existing plastic as shown in fig 2, 3 & 4. (Only cut out where shown in fig 4)
3. Locate the new lower grille into position, check that it is central.
4. Push the Upper spring hooks through the existing grille and then the lower spring hooks (fig 5).
5. Check that the clips have engaged if not, put pressure on the front of the grille, lever the brackets behind the existing plastic grille with a flat screw driver until they lock into position (Fig 6).
6. Screw the pins through the U brackets into existing plastic (Do not over tighten) (Fig 7).
7. The grille is now complete.



Fig 1



Fig 2

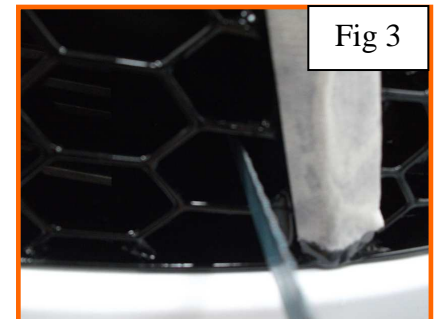


Fig 3

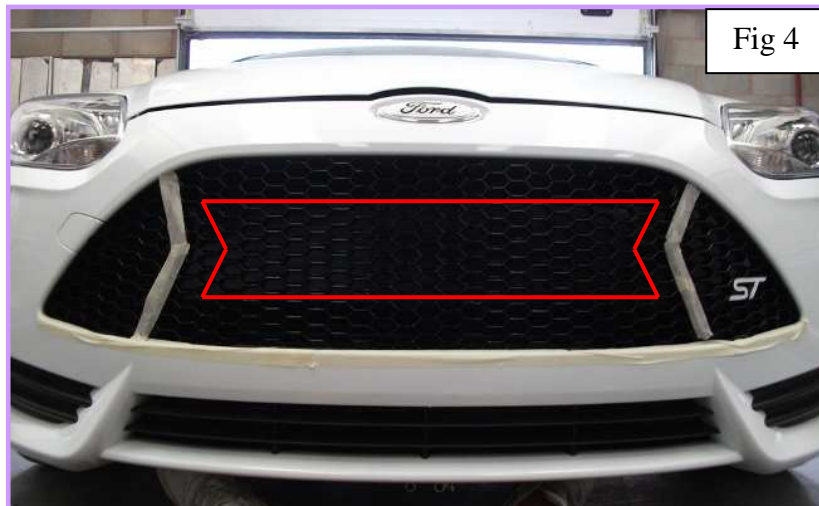


Fig 4



Fig 5



Fig 6



Fig 7