

Ford Puma ST Stainless Steel Lower Sports Grille

Kit Contents: -

1. off Lower Grille
2. off ¾" Screws





YouTube Tutorial-

<https://www.youtube.com/watch?v=pqnuyAQRKu8>



Lower Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Offer the grille to aperture and gently push the grille into position making sure the grille is centralized and all the brackets are clipped behind the aperture (fig 1).
3. Using a thin screwdriver through the mesh lever all the brackets so they are tightly into position (fig 2).
4. Secure the grille in place using the 2 screws provided (fig 3 & 4).
5. Remove the tape and the grilles are now complete.

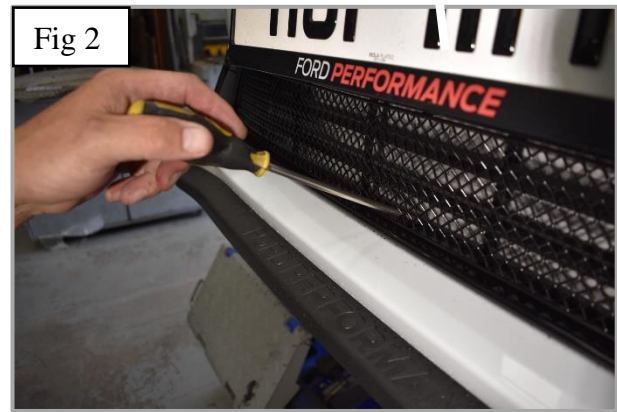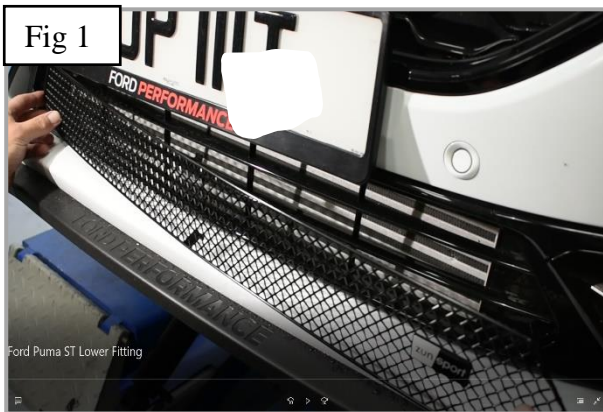

THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.