

# **Ford Transit Connect** **Stainless Steel Sports Lower Grille**

**Kit Contents:**

1 off Lower Grille

**Lower Mesh Grille Fitting Instructions**

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate grille into the aperture making sure to guide the brackets through the aperture as shown in fig 1 & 2.
3. Check that all the brackets have located behind the aperture and check they have engaged properly by using a thin screw driver as shown in fig 3.
4. The Grilles are now complete.



Fig 1



Fig 2

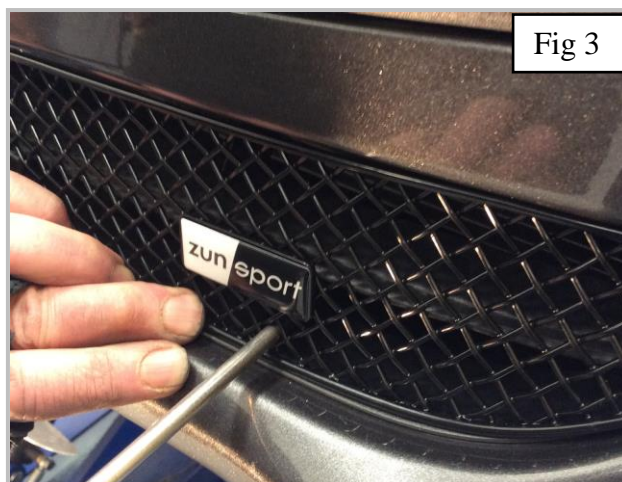


Fig 3

**THANK YOU FOR CHOOSING A ZUNSPORT PRODUCT.**