


# Ford Transit Custom Stainless Steel Sports Upper Grille

## Kit Contents:

- 1 off Upper Grille
- 4 off No 6 x 1 ½" Screws

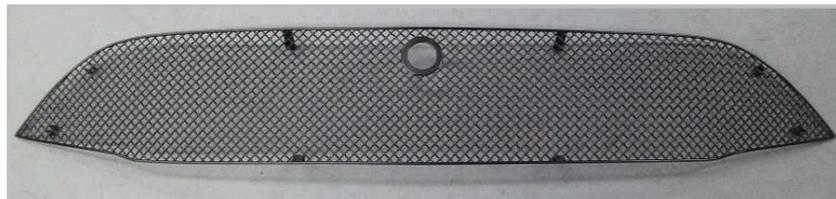

## Upper Mesh Grille Fitting Instructions

1. Fit masking tape around the apertures to protect the paintwork while fitting.
2. Locate grille to the aperture and guide upper centre brackets through the aperture as shown in fig 1.
3. Carefully push and guide the lower centre brackets behind the aperture and check they have engaged properly by using a thin screw driver as shown in fig 5.
4. Once the grille is securely in position fix the grill to the plastic using the 4 screws as shown in fig 3.
5. The Grilles are now complete.

