


ASSEMBLY INSTRUCTIONS



BON BON BUDDY SIDE TABLE

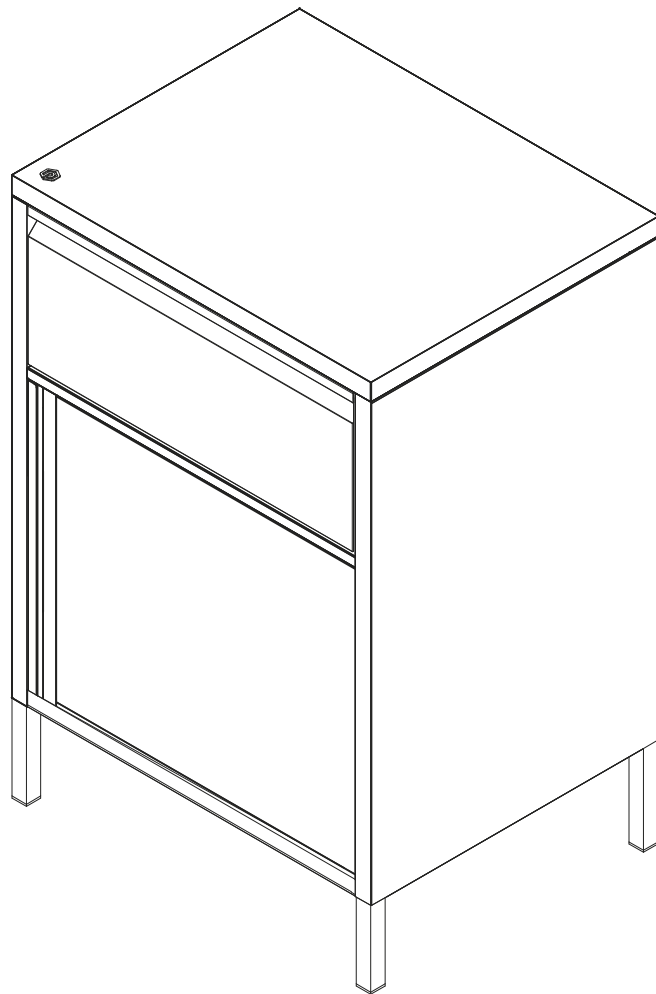

CODE | LD02B



FOR DETAILED ASSEMBLY VIDEOS,
SEARCH POPSTRUKT ON YOUTUBE




WARNING


SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO PREVENT THIS FURNITURE FROM TIPPING OVER IT MUST BE PERMANENTLY FIXED TO THE WALL. BASIC FIXING DEVICES FOR BRICK WALLS ARE INCLUDED. HOWEVER SINCE DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING DEVICES USE FIXING DEVICES SUITABLE FOR THE WALLS IN YOUR HOME. FOR ADVICE ON SUITABLE FIXING SYSTEMS, CONTACT YOUR LOCAL SPECIALIZED HARDWARE DEALER

STEP 1


CONNECT THE MIDDLE FRAME WITH THE SIDE PLATES.

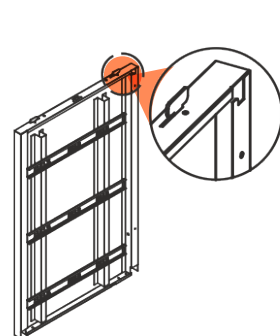


LEFT SIDE PLATE:
1PC

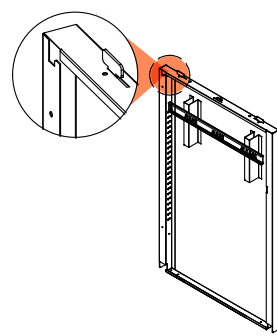


RIGHT SIDE PLATE:
1PC

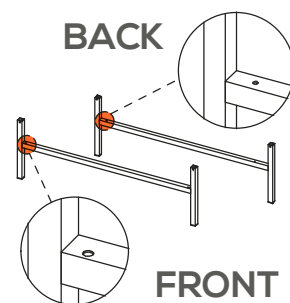


FRONT AND BACK LEGS:
2PCS

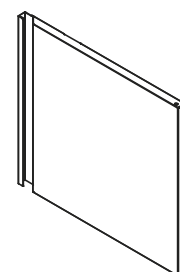


DOOR:
1PC

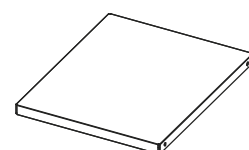


SHELF:
1PC




MIDDLE FRAME:
1PC

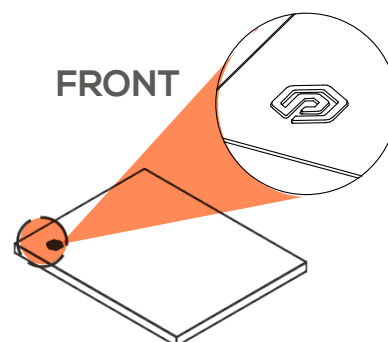

TOP PLATE:
1PC

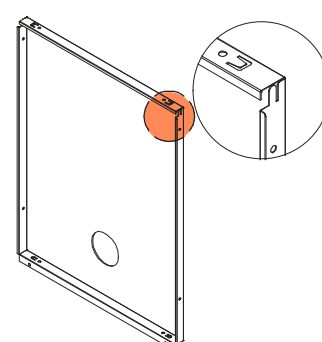


BACK PLATE:
1PC

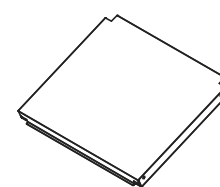


BOTTOM PLATE:
1PC




BACK DRAWER SEAL:
1PC

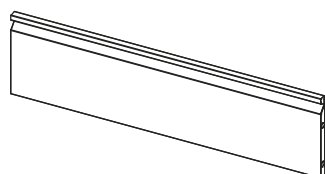




FRONT DRAWER PANEL:
1PC

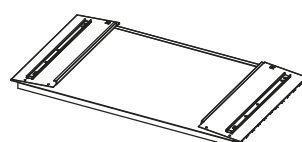

DRAWER BOX:
1PC




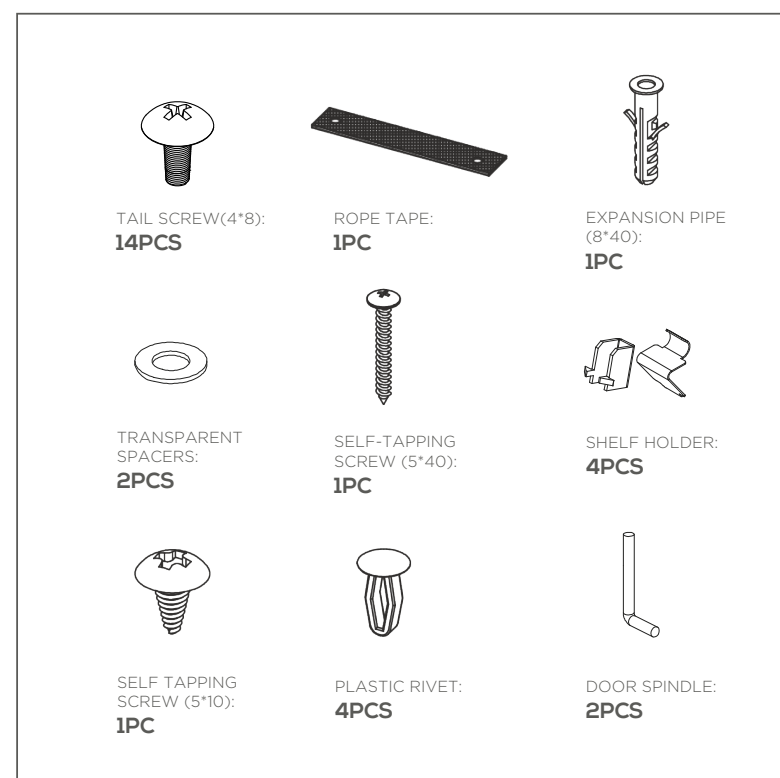


Please visit www.popstrukt.com/instructions section for more information

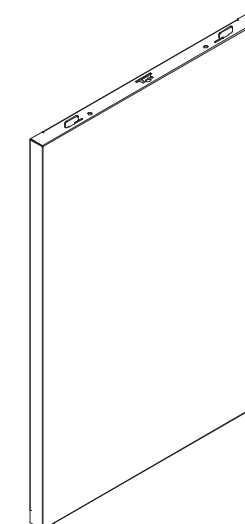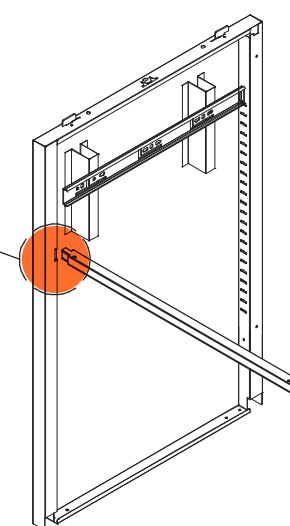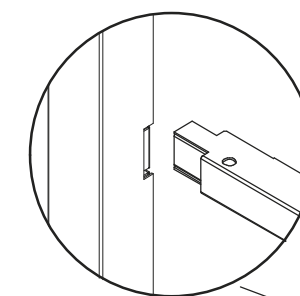

STEP 2


CONNECT THE LEFT AND RIGHT SIDE PLATES WITH THE FRONT AND BACK LEGS.

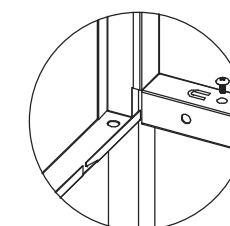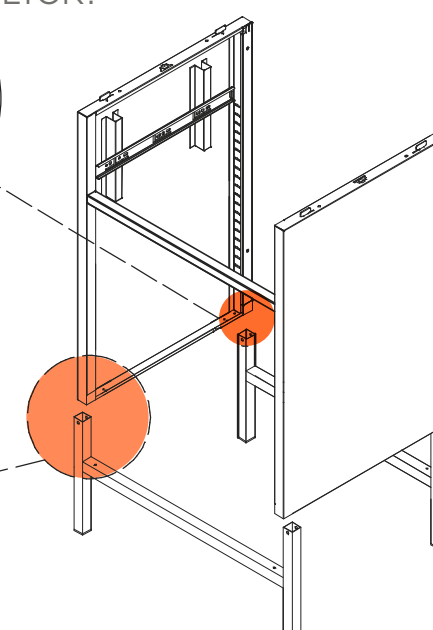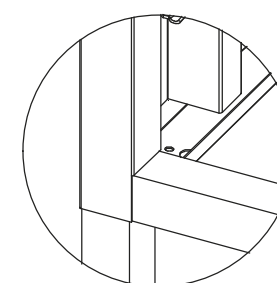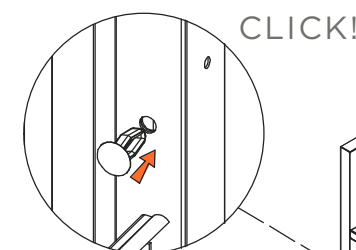

Please visit www.popstrukt.com/instructions section for more information


STEP 3

CONNECT THE BACK PLATE WITH THE SIDE PLATES.

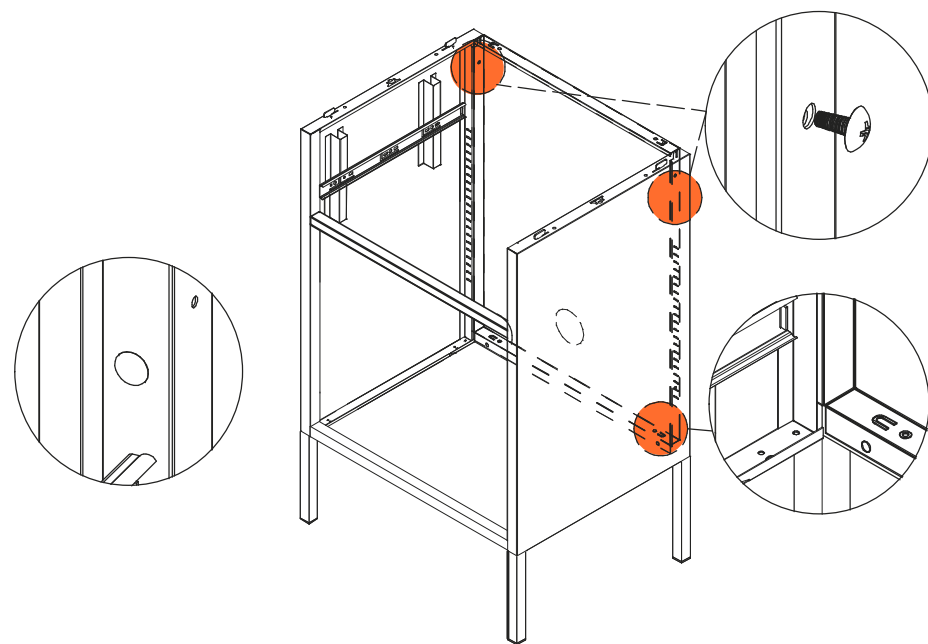


STEP 4

INSTALL THE BOTTOM PLATE AND TOP PLATE.

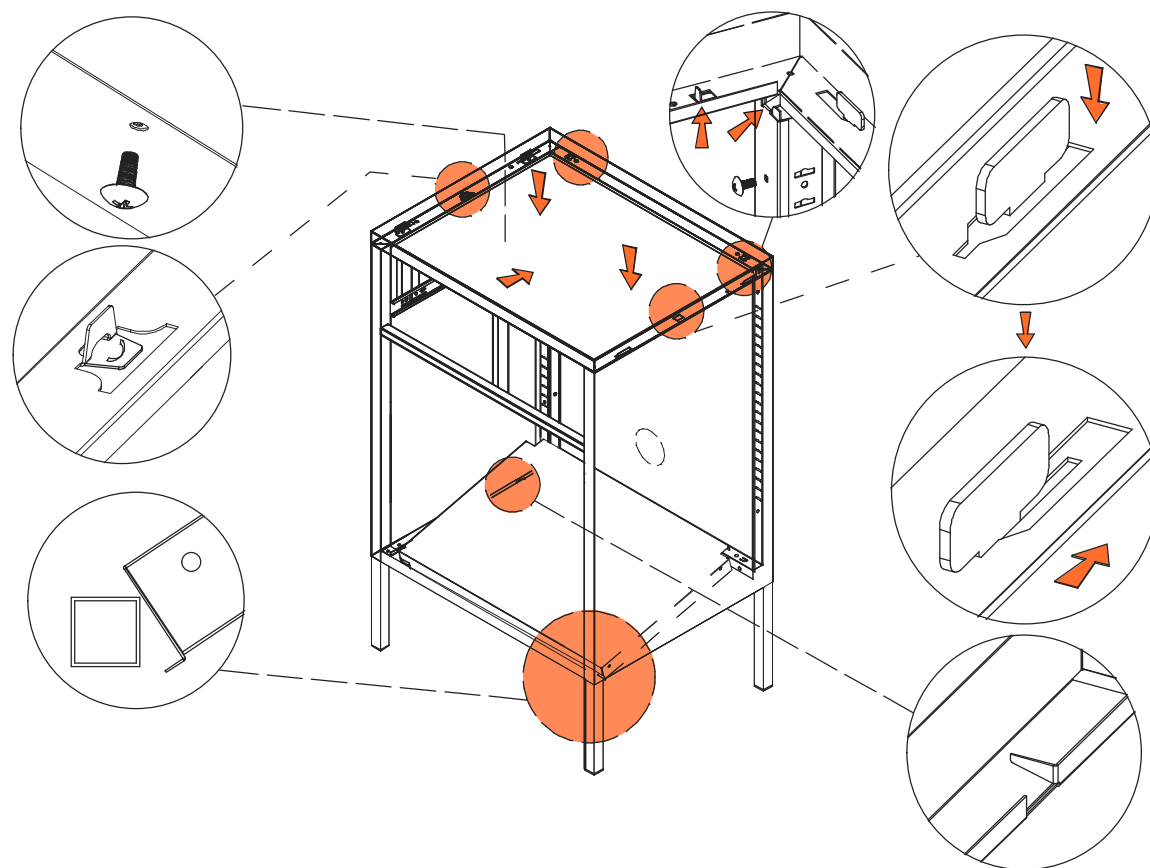


STEP 5

INSTALL THE SHELF AND DOOR.

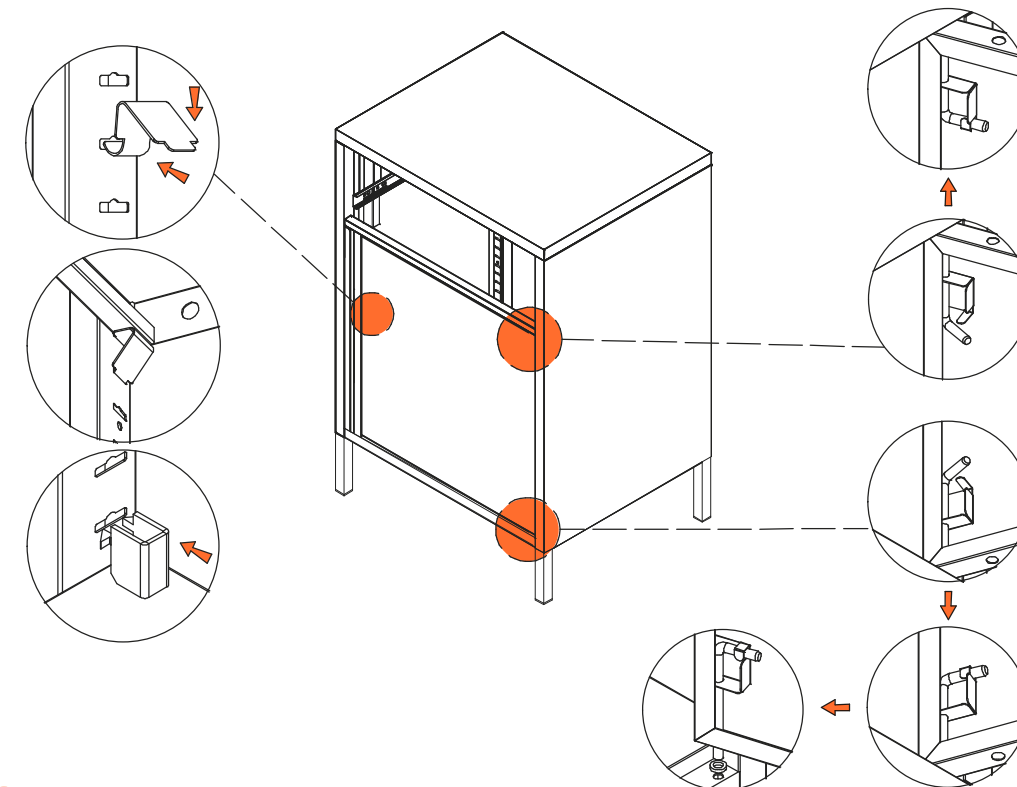


STEP 6

INSTALL THE BACK DRAWER SEAL AS SHOWN IN THE PICTURE.

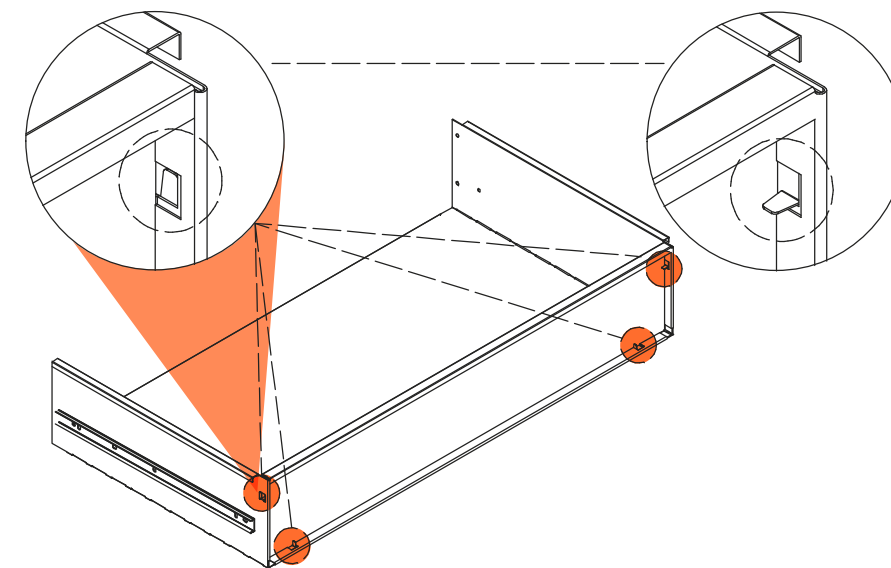


STEP 7

INSTALL THE FRONT DRAWER PANEL WITH SCREWS (M4*8).

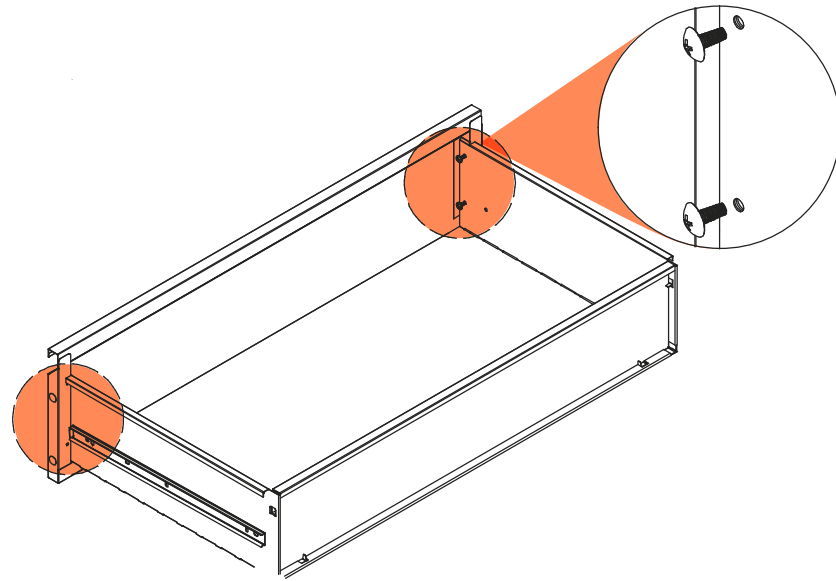

STEP 8

INSTALL THE DRAWER AS SHOWN IN THE PICTURE (RAILS).

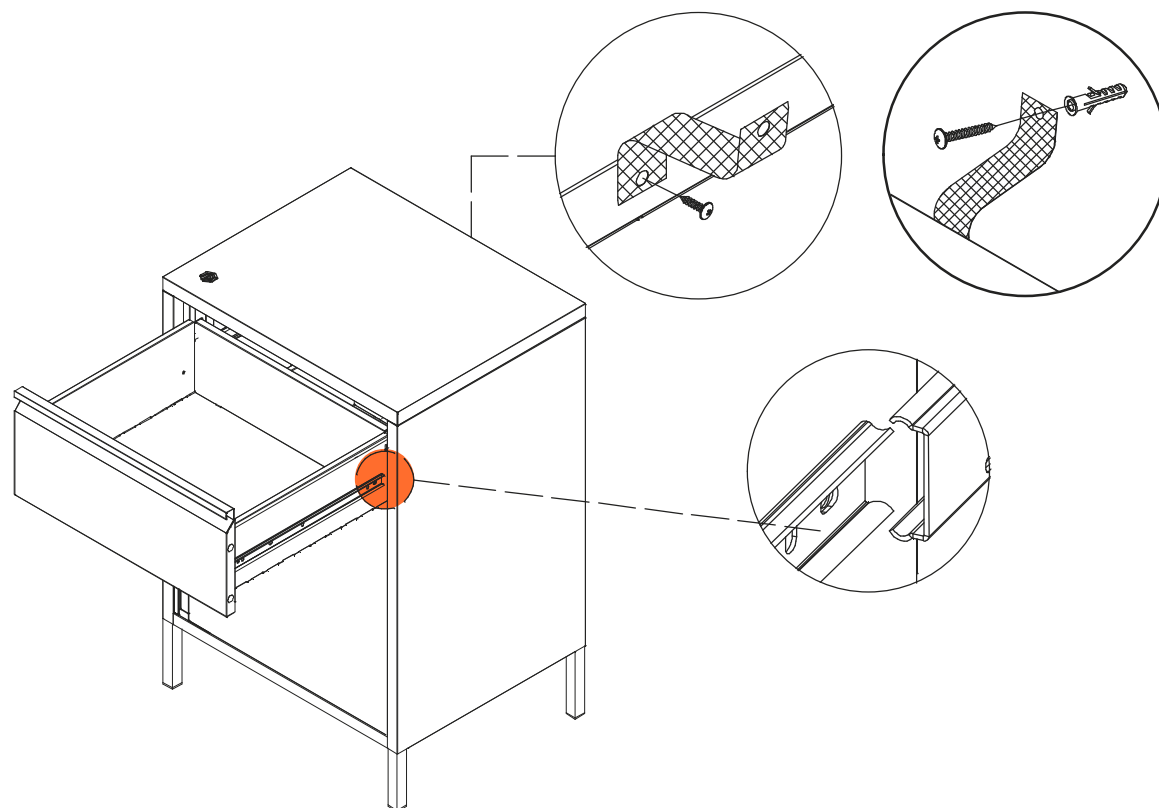


STEP 9


FIX TO WALL

STEP 1

INSERT WALL PLUG INTO THE WALL USING A DRILL.

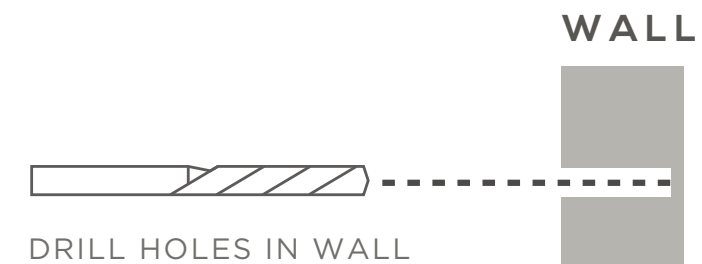


TIP: Blow dirt out of hole.

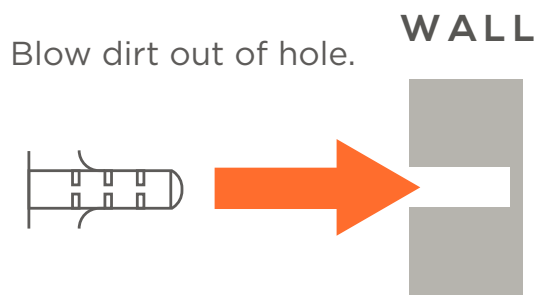


STEP 2

FIX THE MATERIAL STRIP TO THE BACK OF UNIT USING SCREW.

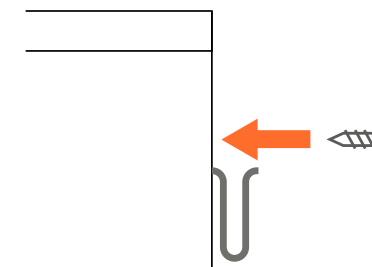



STEP 3

FIX THE UNIT TO THE WALL VIA MATERIAL STRIP.

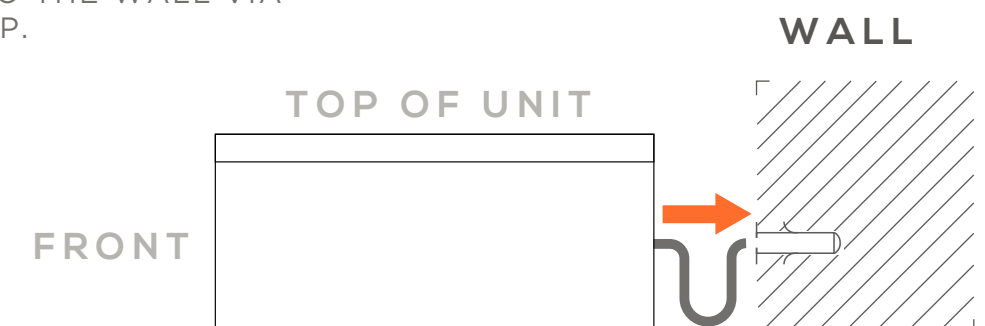

WARNING

SERIOUS OR FATAL CRUSHING INJURIES CAN OCCUR FROM FURNITURE TIP-OVER. TO PREVENT THIS FURNITURE FROM TIPPING OVER IT MUST BE PERMANENTLY FIXED TO THE WALL. BASIC FIXING DEVICES FOR BRICK WALLS ARE INCLUDED. HOWEVER SINCE DIFFERENT WALL MATERIALS REQUIRE DIFFERENT TYPES OF FIXING DEVICES USE FIXING DEVICES SUITABLE FOR THE WALLS IN YOUR HOME. FOR ADVICE ON SUITABLE FIXING SYSTEMS, CONTACT YOUR LOCAL SPECIALIZED HARDWARE DEALER.

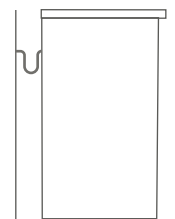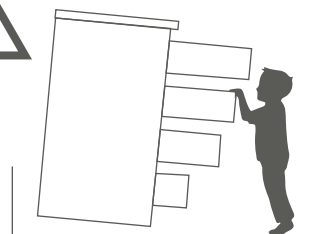

SEE "HOW TO" SECTION ON POPSTRUKT YOUTUBE PAGE FOR PRODUCT ADJUSTMENT TIPS.

Finish en klaar.

NEED HELP?

Please visit

www.popstrukt.com/resources

for assembly instructions & product care tips.

TAG US

Tag us on Instagram

@POPSTRUKT.FURNITURE

and show us your assembly journey.



POPSTRUKT FURNITURE



@POPSTRUKT.FURNITURE



POPSTRUKT FURNITURE