
ASSEMBLY INSTRUCTIONS



BON BON SIDEBOARD

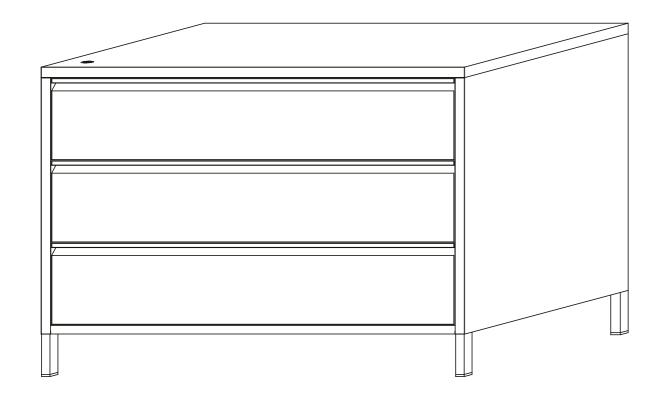




FOR DETAILED ASSEMBLY VIDEOS, SEARCH POPSTRUKT ON YOUTUBE


CODE | LD03W



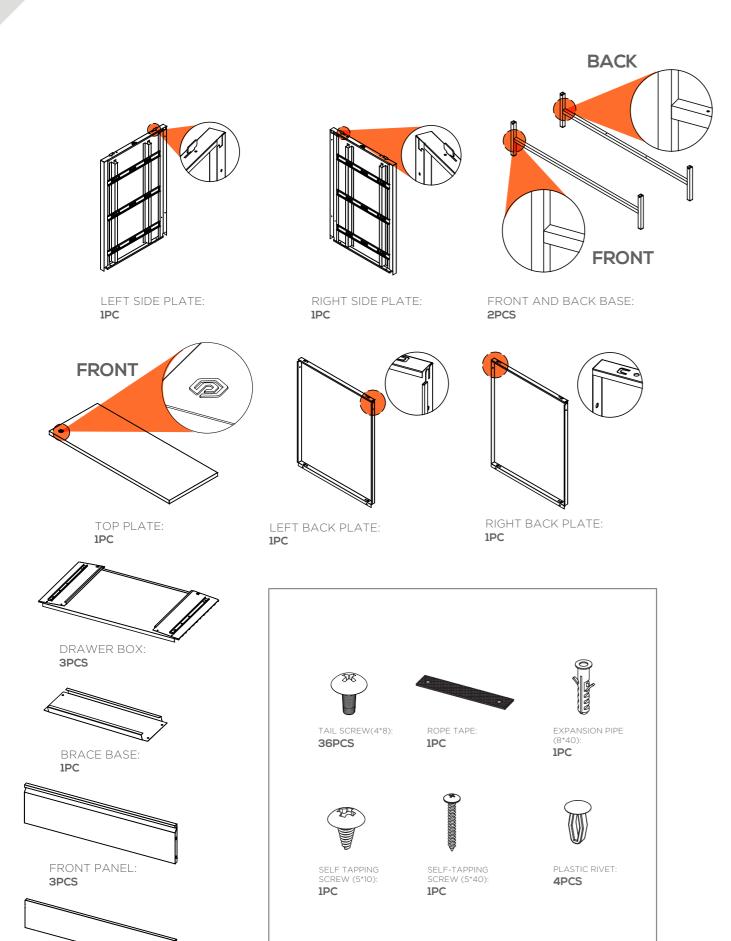


STEP 1

INSTALL THE BACK DRAWER SEAL AS SHOWN IN PICTURE.

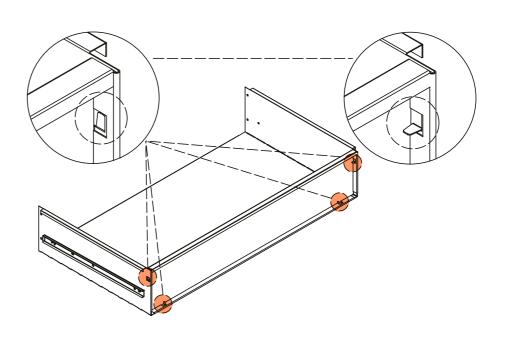

STEP 2

INSTALL THE FRONT PANEL WITH SCREWS (M4*8).

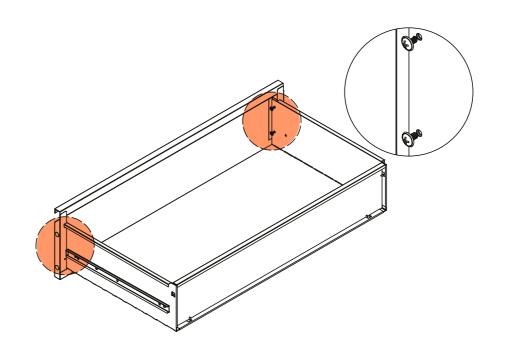


BACK DRAWER SEAL:

3PCS


STEP 3

CONNECT THE LEFT & RIGHT SIDE PLATES WITH FRONT & BACK BASE.

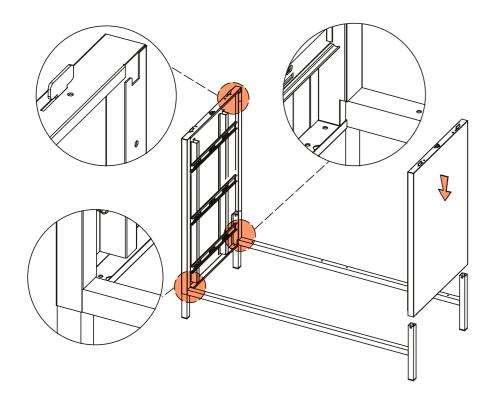


STEP 4

FIX THE LEFT & RIGHT SIDE PLATES WITH FRONT & BACK BASE BY PLASTIC RIVET. INSTALL THE RIGHT BACK PLATE.

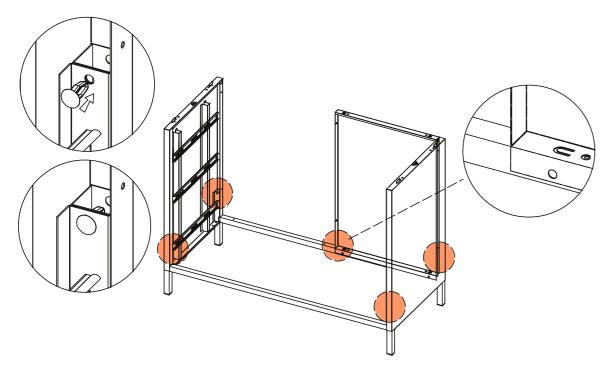


STEP 5

INSTALL THE LEFT BACK PLATE, & FIX THE LEFT & RIGHT BACK PLATES BY TAIL SCREWS.

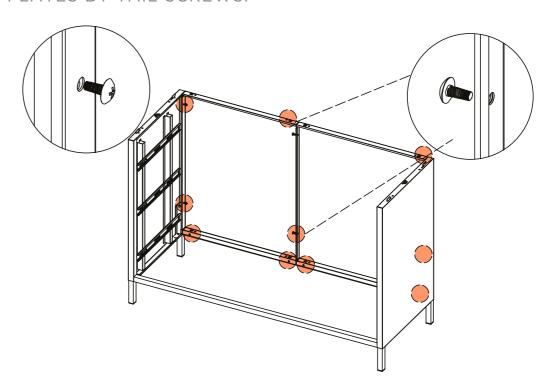


STEP 6

INSTALL THE TOP PLATE.

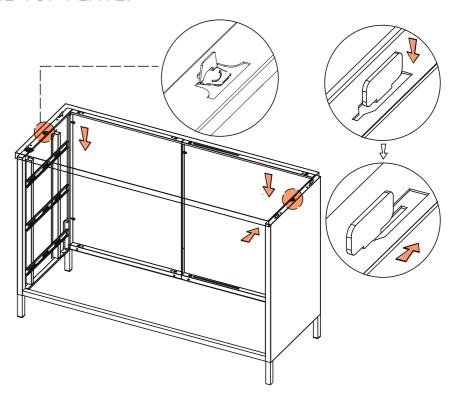


STEP 7

INSTALL THE BRACE BASE & FIX IT BY TAIL SCREWS.
ALSO FIX THE TOP PLATE WITH LEFT & RIGHT BACK PLATE
BY TAIL SCREWS AS IN PICTURE.

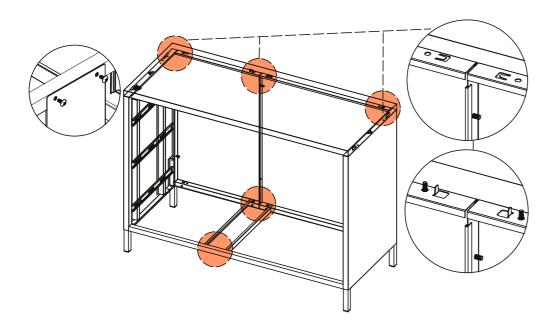

STEP 8

INSTALL THE DRAWERS AS SHOWN IN THE PICTURE (RAILS).

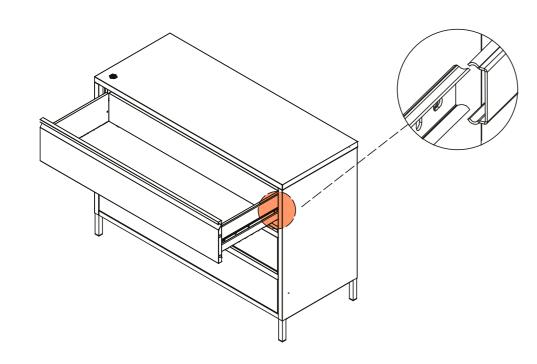


STEP 9


FIX TO WALL

STEP 1

INSERT WALL PLUG INTO THE WALL USING A DRILL.

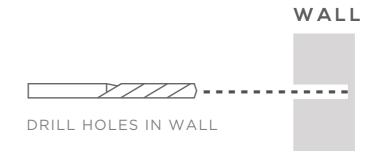






STEP 2

FIX THE MATERIAL STRIP TO THE BACK OF UNIT USING SCREW.

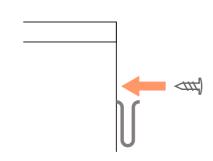


STEP 3

FIX THE UNIT TO THE WALL VIA MATERIAL STRIP.



WARNING

SERIOUS OR FATAL CRUSHING INJURIES
CAN OCCUR FROM FURNITURE TIP-OVER. TO
PREVENT THIS FURNITURE FROM TIPPING
OVER IT MUST BE PERMANENTLY FIXED TO
THE WALL. BASIC FIXING DEVICES FOR
BRICK WALLS ARE INCLUDED. HOWEVER
SINCE DIFFERENT WALL MATERIALS
REQUIRE DIFFERENT TYPES OF FIXING
DEVICES USE FIXING DEVICES SUITABLE
FOR THE WALLS IN YOUR HOME. FOR
ADVICE ON SUITABLE FIXING SYSTEMS,
CONTACT YOUR LOCAL SPECIALIZED
HARDWARE DEALER.

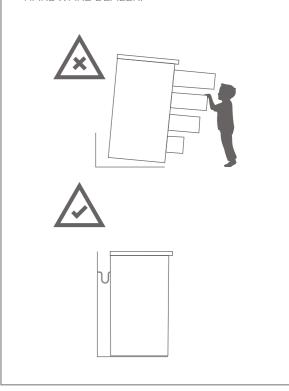

WALL







Finish en klaar.

NEED HELP?

Please visit

www.popstrukt.com/resources

for assembly instructions & product care tips.

TAGUS

Tag us on Instagram

@POPSTRUKT.FURNITURE

and show us your assembly journey.







@POPSTRUKT.FURNITURE POPSTRUKT FURNITURE