
ASSEMBLY INSTRUCTIONS



WAFER SHELF WIDE

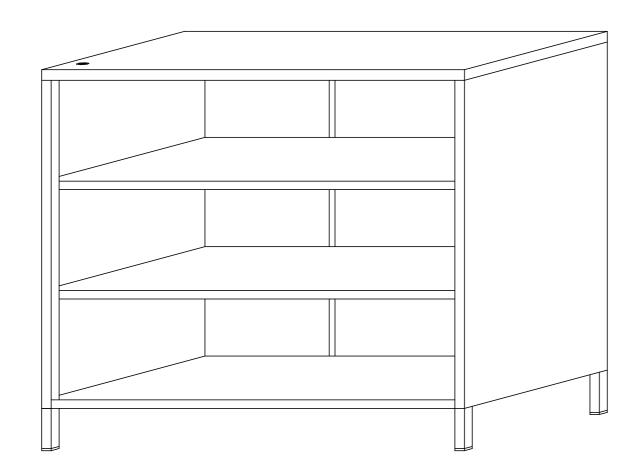




FOR DETAILED ASSEMBLY VIDEOS, SEARCH POPSTRUKT ON YOUTUBE


CODE | SH18A



FRONT TOP PLATE: IPC RIGHT SIDE PLATE: PRONT AND BACK BASE: 2PCS RIGHT BACK PLATE: IPC RIGHT BACK PLATE: IPC RIGHT BACK PLATE: IPC

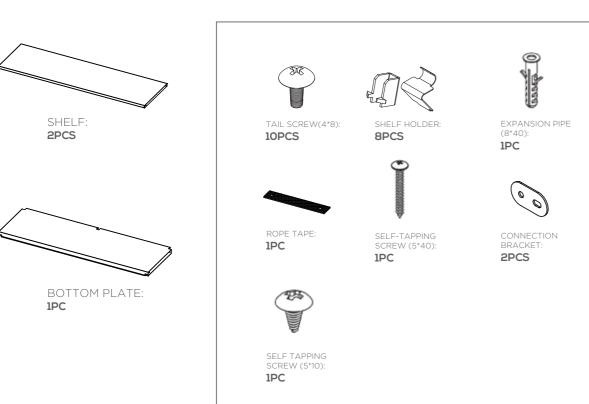


ALL THE PIECES

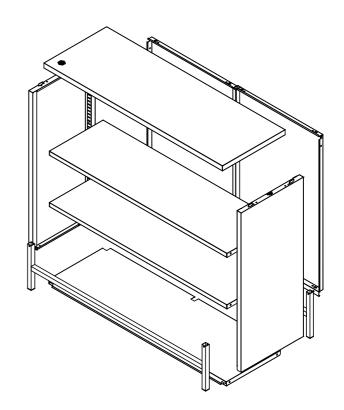


STEP 1

CONNECT THE LEFT AND RIGHT SIDE PLATES WITH FRONT AND BACK BASE.

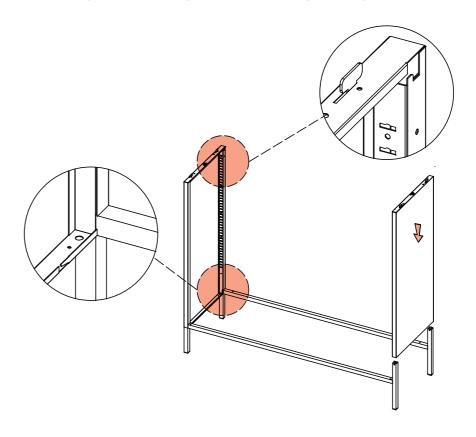


STEP 2

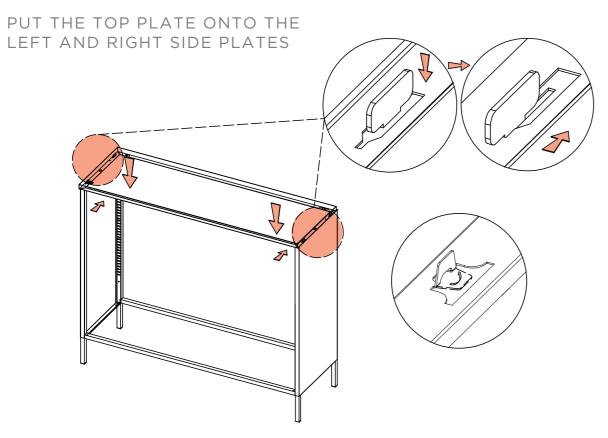


STEP 3

INSTALL THE RIGHT BACK PLATE BY TAIL SCREWS.

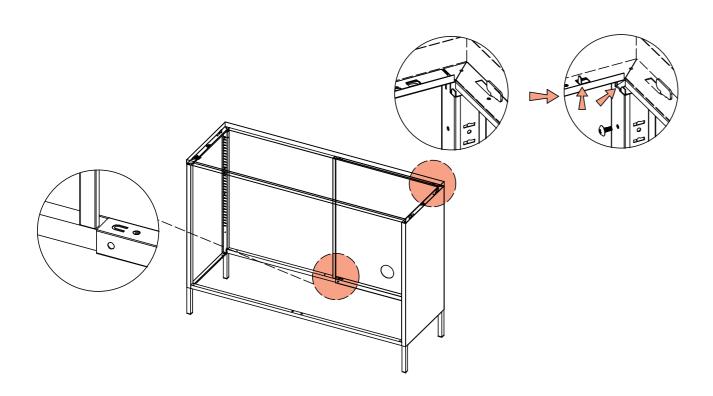


STEP 4

INSTALL THE LEFT BACK PLATE BY TAIL SCREWS.

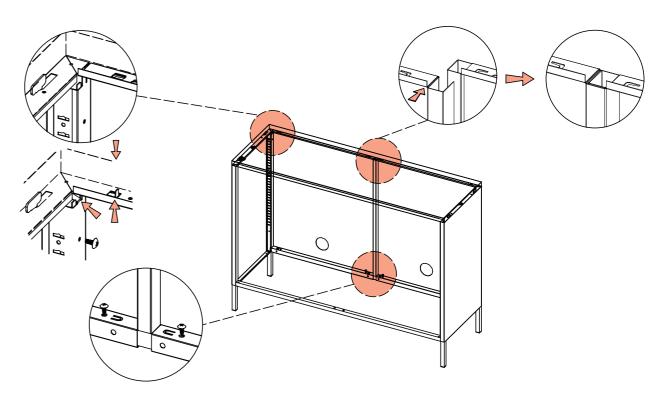


STEP 5

INSTALL THE BOTTOM PLATE.

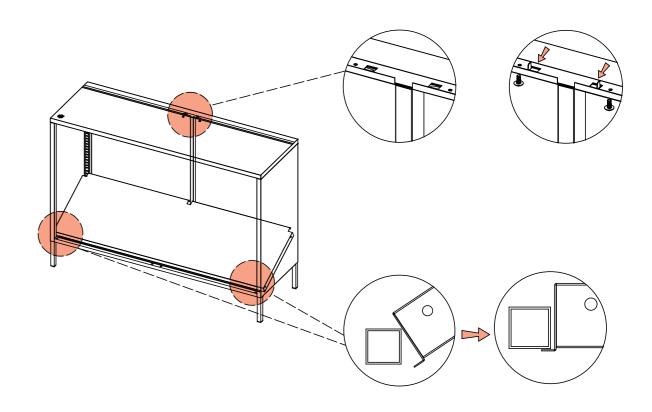


STEP 6


FIX THE BOTTOM PLATE WITH THE BUCKLE OF THE BOTTOM SIDE PLATE .

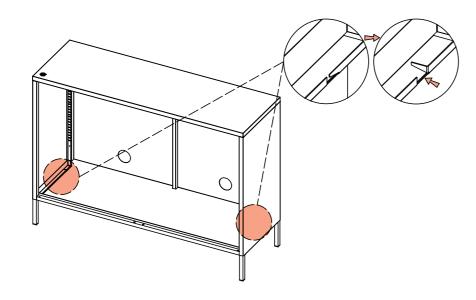

STEP 7

INSTALL THE SHELF.

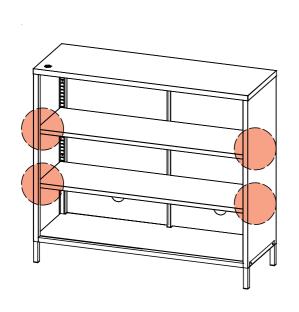

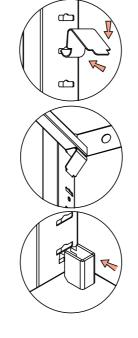


STEP 8


FIX TO WALL

STEP 1

INSERT WALL PLUG INTO THE WALL USING A DRILL.

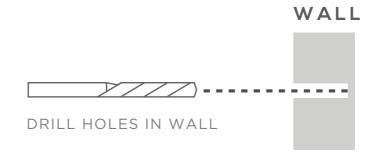


TIP: Blow dirt out of hole. WALL



STEP 2

FIX THE MATERIAL STRIP TO THE BACK OF UNIT USING SCREW.

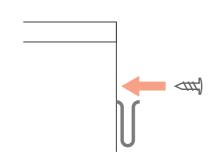


STEP 3

FIX THE UNIT TO THE WALL VIA MATERIAL STRIP.



WARNING

SERIOUS OR FATAL CRUSHING INJURIES
CAN OCCUR FROM FURNITURE TIP-OVER. TO
PREVENT THIS FURNITURE FROM TIPPING
OVER IT MUST BE PERMANENTLY FIXED TO
THE WALL. BASIC FIXING DEVICES FOR
BRICK WALLS ARE INCLUDED. HOWEVER
SINCE DIFFERENT WALL MATERIALS
REQUIRE DIFFERENT TYPES OF FIXING
DEVICES USE FIXING DEVICES SUITABLE
FOR THE WALLS IN YOUR HOME. FOR
ADVICE ON SUITABLE FIXING SYSTEMS,
CONTACT YOUR LOCAL SPECIALIZED
HARDWARE DEALER.

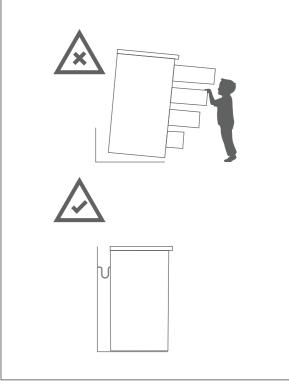

WALL







Finish en klaar.

NEED HELP?

Please visit

www.popstrukt.com/resources

for assembly instructions & product care tips.

TAG US

Tag us on Instagram

@POPSTRUKT.FURNITURE

and show us your assembly journey.







@POPSTRUKT.FURNITURE POPSTRUKT FURNITURE