

Fast Set Round Metal Grommets


- 1-9/16" Diameter - 8 Sets
- Requires HSD Fast Set Grommet Setter
- Wear safety glasses when setting grommets

1. Place grommet on top of setting die bottom.




Setting Die Top

2. Place fabric face down over the grommet so that grommet neck goes through the hole in fabric.



Washer

3. Be sure the teeth on the washer point toward the fabric.

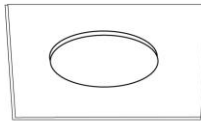

Fabric

4. Use the hammer and strike the center surface of the setting die top (never strike grommet directly with hammer).



Grommet

5. It may take a few strikes until edge of the grommet crimps over the washer.



Setting Die Bottom



Home Sewing Depot



Home Sewing Depot
Peoria, AZ



Grommet Tape 22-STW37-6

Use Grommet tape to create evenly spaced grommet panels simply and easily. Because of the tape's structure, no buckram is required.

Gathers in back keep consistent spacing and improve traversing.

White Polyester, 3 1/2" width.

10 grommet holes for every 44 inches of tape.

Fits our #12 EZ Set Metal and #10 Two Sided Plastic Grommets.



22-GSP12-1 Grommet Setter

623-878-7350

HomeSewingDepot.com

homesewingdepot@gmail.com