



1-3/8" Square Plastic Grommets

- 1-3/8" Diameter - 8 Sets
- No Tools Required
- Easy Snap Together Installation


1. To separate front from back of grommet, insert the tip of a flat screwdriver into the notch and pry apart.
2. To install, place grommet front face down, then place hole in fabric over the neck of grommet as shown. Snap grommet into place.



Washer

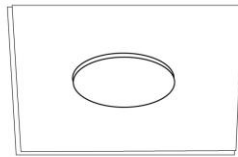

Fabric



Grommet



Home Sewing Depot



Cut out this circle and trace for cutting correct size holes for grommets

Home Sewing Depot
Peoria, AZ



Grommet Tape 22-STW37-6

Use Grommet tape to create evenly spaced grommet panels simply and easily. Because of the tape's structure, no buckram is required.

Gathers in back keep consistent spacing and improve traversing.

White Polyester, 3 1/2" width.

10 grommet holes for every 44 inches of grommet tape.

Fits our #12 EZ Set Metal and #10 Two Sided Plastic Grommets.

623-878-7350

HomeSewingDepot.com

homesewingdepot@gmail.com