

www.evotech-performance.com
Honda X-ADV
Beeline / Action Camera Mount

## Installation Instructions








- A 1 x Main Plate
- B 1 x Pivot Plate
- © 1 x Sub Mounting Bracket
- D 1 x M5 Silver Washer
- **E** 2 x Lobe Screw
- © 2 x Locking Washer
- © 1 x M5 x 20mm Caphead Bolts
- (H) 2 x M5 x 12 Caphead Bolt
- ① 2 x P-clips (No.1)
- ① 2 x P-clips (No.2)
- K 2 x P-clips (No.3)


- L 2 x P-clips (No.4)
- M 2 x M5 x 8mm Caphead


- (A) 1 x Rubber Bung
- BB 2 x M6 x 30 Black Button Head Bolt
- © 2 x M5 x 25 Black Button Head Bolt
- D 2 x Spacer

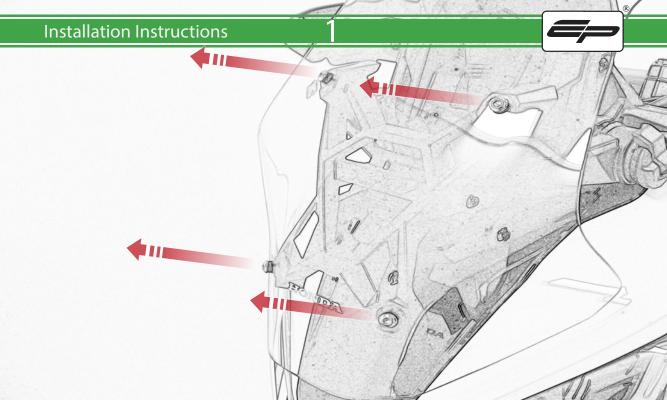


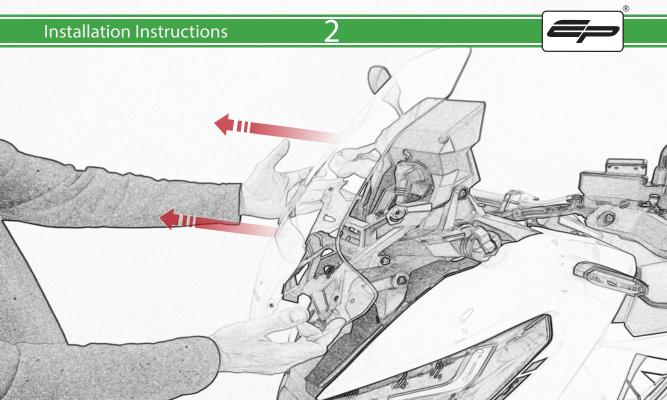


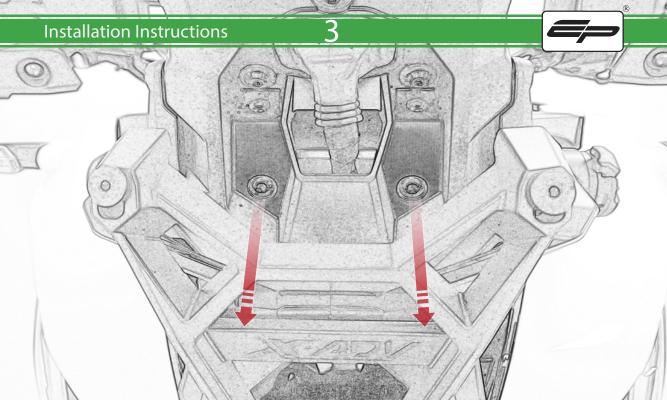


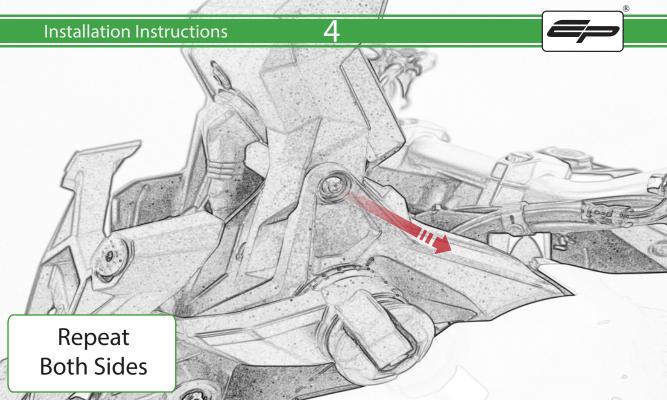


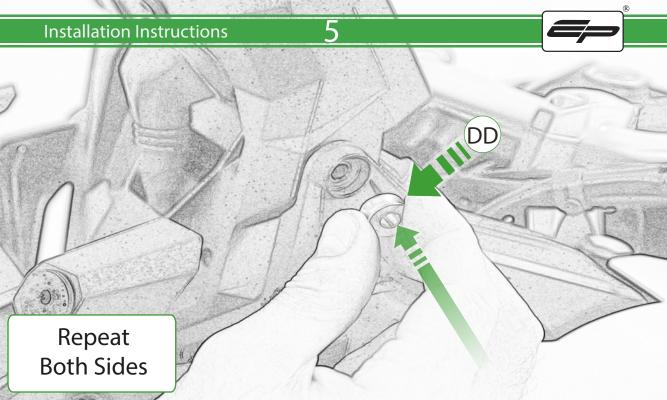


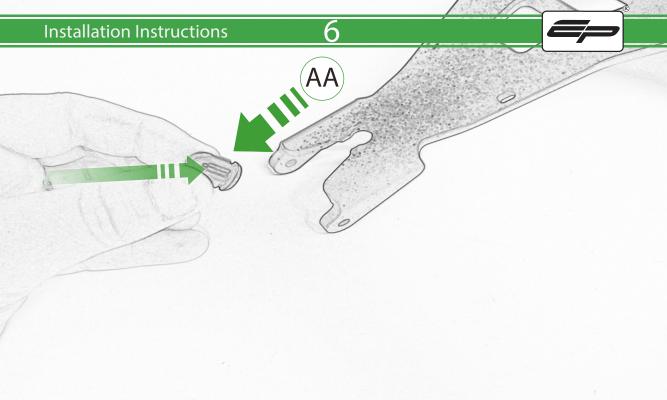

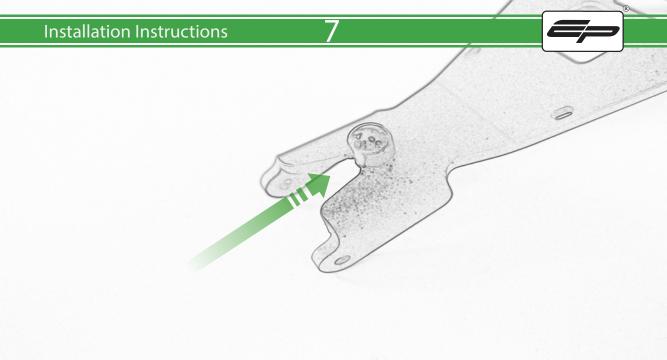


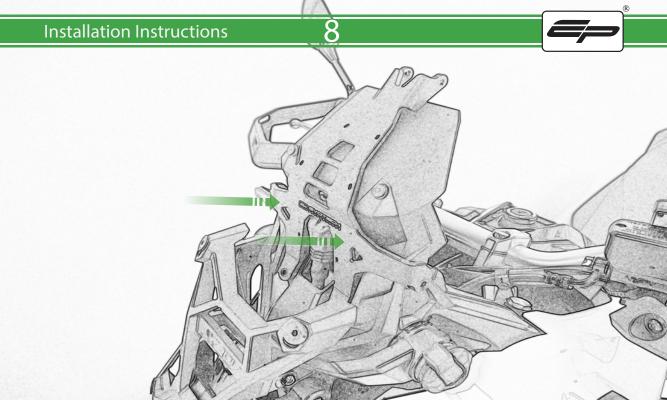

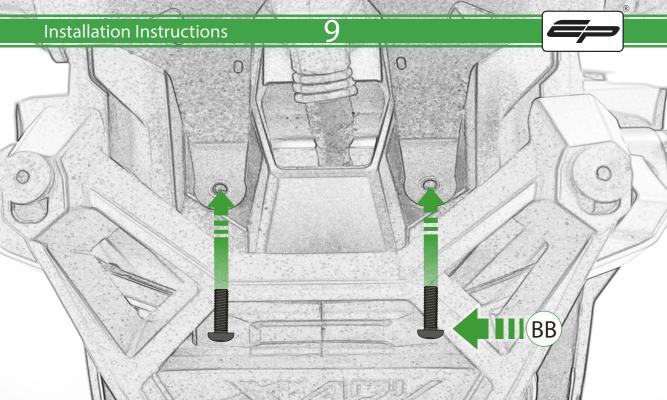


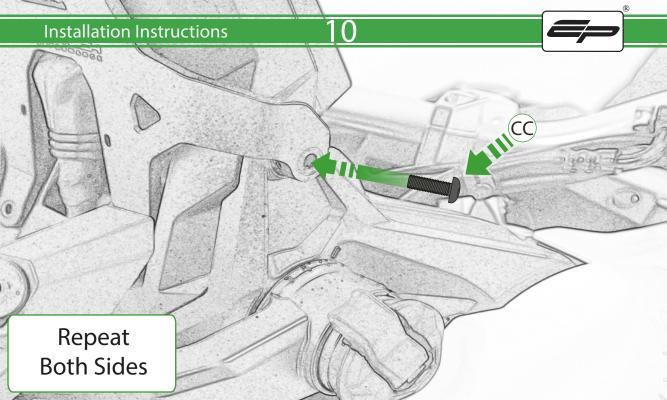




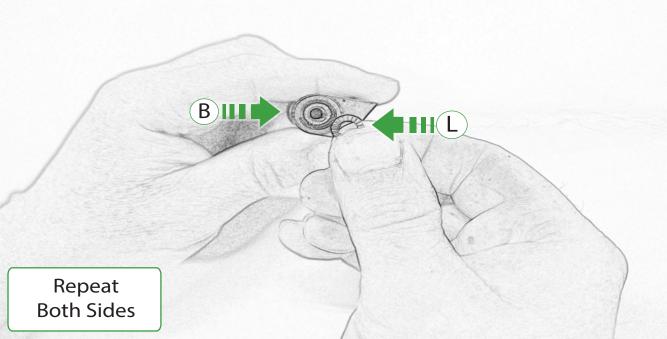





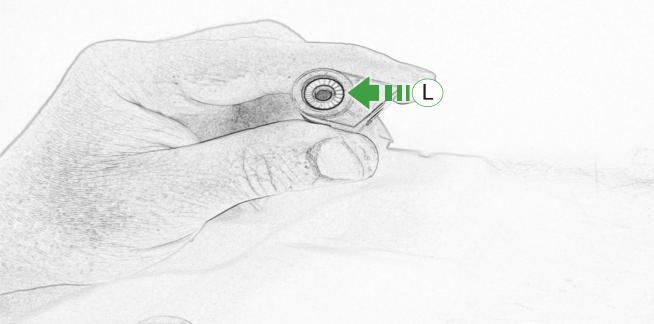


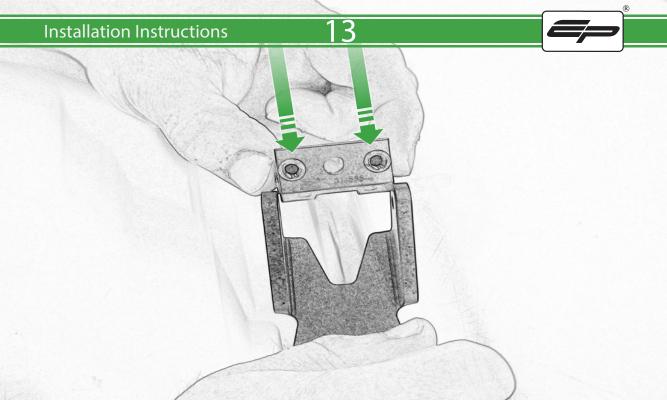





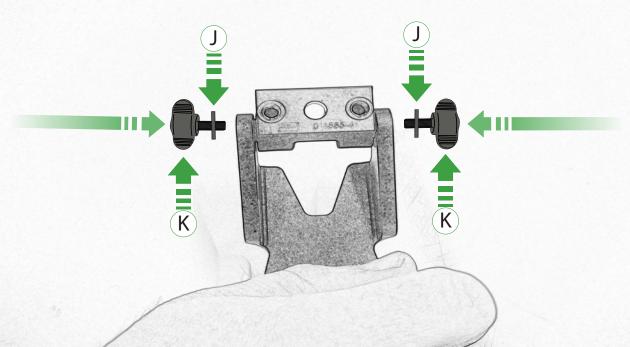

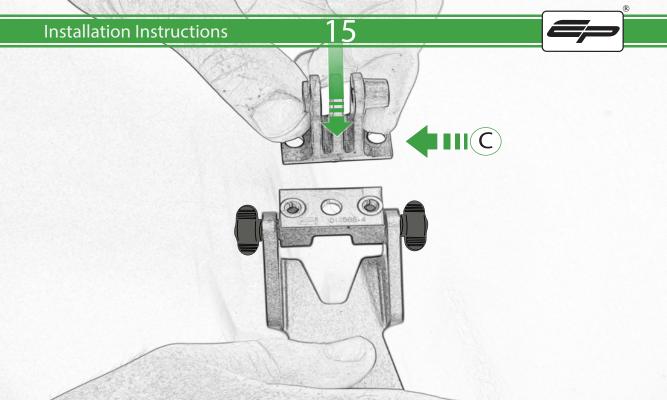


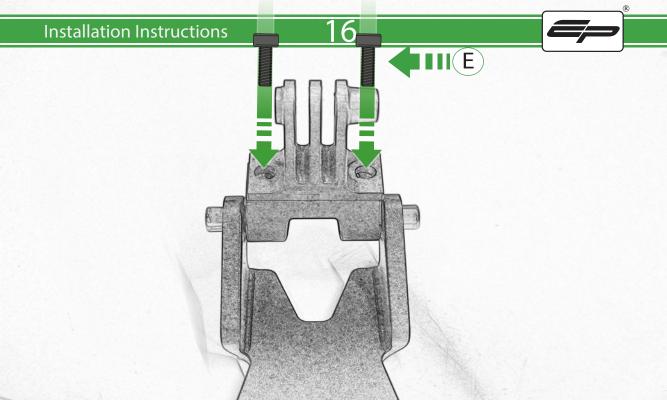

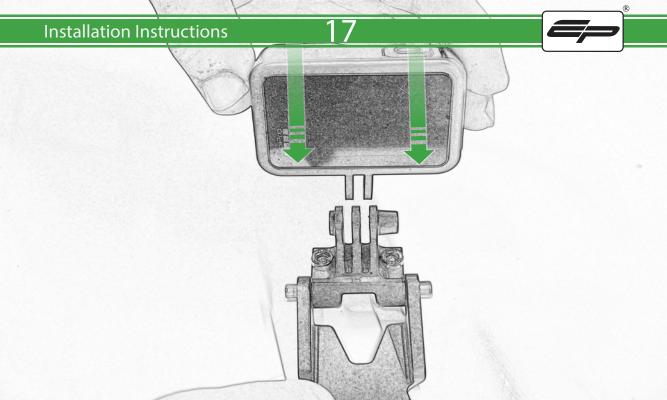

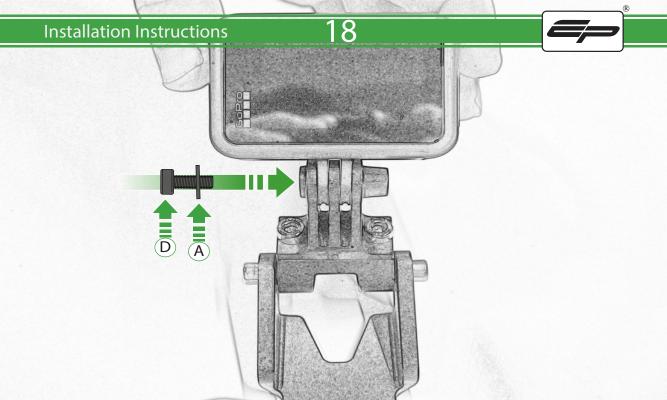











## ESSENTIAL CHECKS 🔨



It is recommended that periodic inspections are made to ensure that all bolts are tightend to the specified torque settings.

Should the bike be involved in an accident a thorough inspection should be made and any components that have taken an impact, no matter how small, be replaced





www.evotech-performance.com