

iKeyFree Key Pad Installation Notes:

Three step process:

- Step 1. Keypad windshield installation
- Step 2. The main body to the key pad attachment
- Step 3. Installation test

- Attach to clean surface.
- Avoid trapping air bubbles.
- Attach at the desired position in first try.

Step 1. Keypad Windshield Installation

1. Remove any tinting film before installation
2. Clean the windshield. Clean surface is required.
3. Position the key pad firmly against the windshield. Looking from the outside, #1 should be on the left side and #9 should be on the right side.



Good



Not Good

4. Attaching,

- a. Peel off the top portion red protection film and attach to windshield


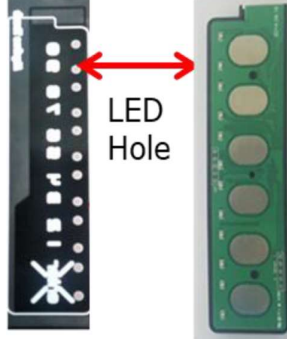



- b. Peel off the red protection film downward slowly – little by little.



- c. On complete removal, remove any air bubble by pressing back side with a towel.

Step 2. The main body to the key pad attachment

1. Remove red protective film	2. Line up LED holes Slightly touch the main body to the key pad and line-up	3. Once lined-up, press firmly on the back of the main unit. Up-down 10 positions and left-right 10 times
		

Step 3. Installation test

1. Plug-in the connector = Connect the lines
2. Press keys randomly; Touch button position = center between the numbers; press lightly.



For each button pressed, there must be LED response. If light does not response, then unplug and re-plug in the connector.

Troubleshooting:

- Is connector is firmly plugged in?
- Is window tinted?
- Is there air bubble?
- Is it reinstallation? The double sided clear tape between the keypad and the windshield must be replaced with the new tape.