



TRUFIG

212 Avenida Fabricante
San Clemente, CA 92672
(949) 492 - 7777

TRUFIG and the TRUFIG Logo
are trademarks of Dana In-
novations. © 2012 Dana In-
novations. All rights reserved.

APPLICATION NOTE

E-02

Baseboard Install - Single Gang Electrical Enclosure

Overview:

This application note will give instructions on how to install a single gang TRUFIG mounting platform in wood baseboards. Note that the install process outlined in the TRUFIG Install Guide can be used to install TRUFIG into wood baseboard. The process outline below is similar and maybe useful in certain applications.

Below are detailed instructions and required materials.

TRUFIG parts needed:

-TRUFIG Solid Surface Mounting Platform, trim component, & fascia (Single Gang, 1/2", 5/8", or without the panel)

Installation Instructions:


Use either the TRUFIG router templates, or a CNC machine to cut a precise fascia opening. See the TRUFIG Install Guide for more specific details on a solid surface install.



Remove the enclosure from the panel and fasten it directly to the framing in its approximate location. Leave it in this location until all wiring has been terminated in the opening. Be sure to terminate wiring through the rear plate only unless a deep box accessory is being used.



When the opening in the baseboard has been routed - use either the TRUFIG router templates, or a CNC machine to cut a precise fascia opening. See the TRUFIG Install Guide for more details on a solid surface install - remove the back plate from the enclosure and unscrew the enclosure from the framing.

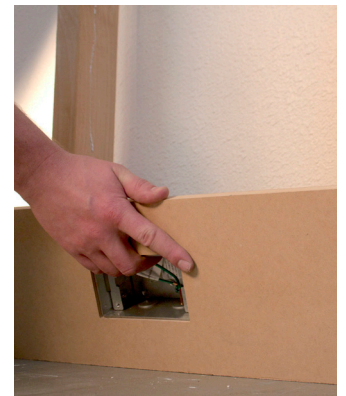

Attach the enclosure to the baseboard - per TRUFIG Install Guide procedures for Solid Surface (wood) - and reattach the back plate to the enclosure. The baseboard is now ready to secure to the wall.