

A124


ULTRA DENT

DESK MOBILE

TRAINING MODULE

ASSEMBLY

INSTRUCTIONS

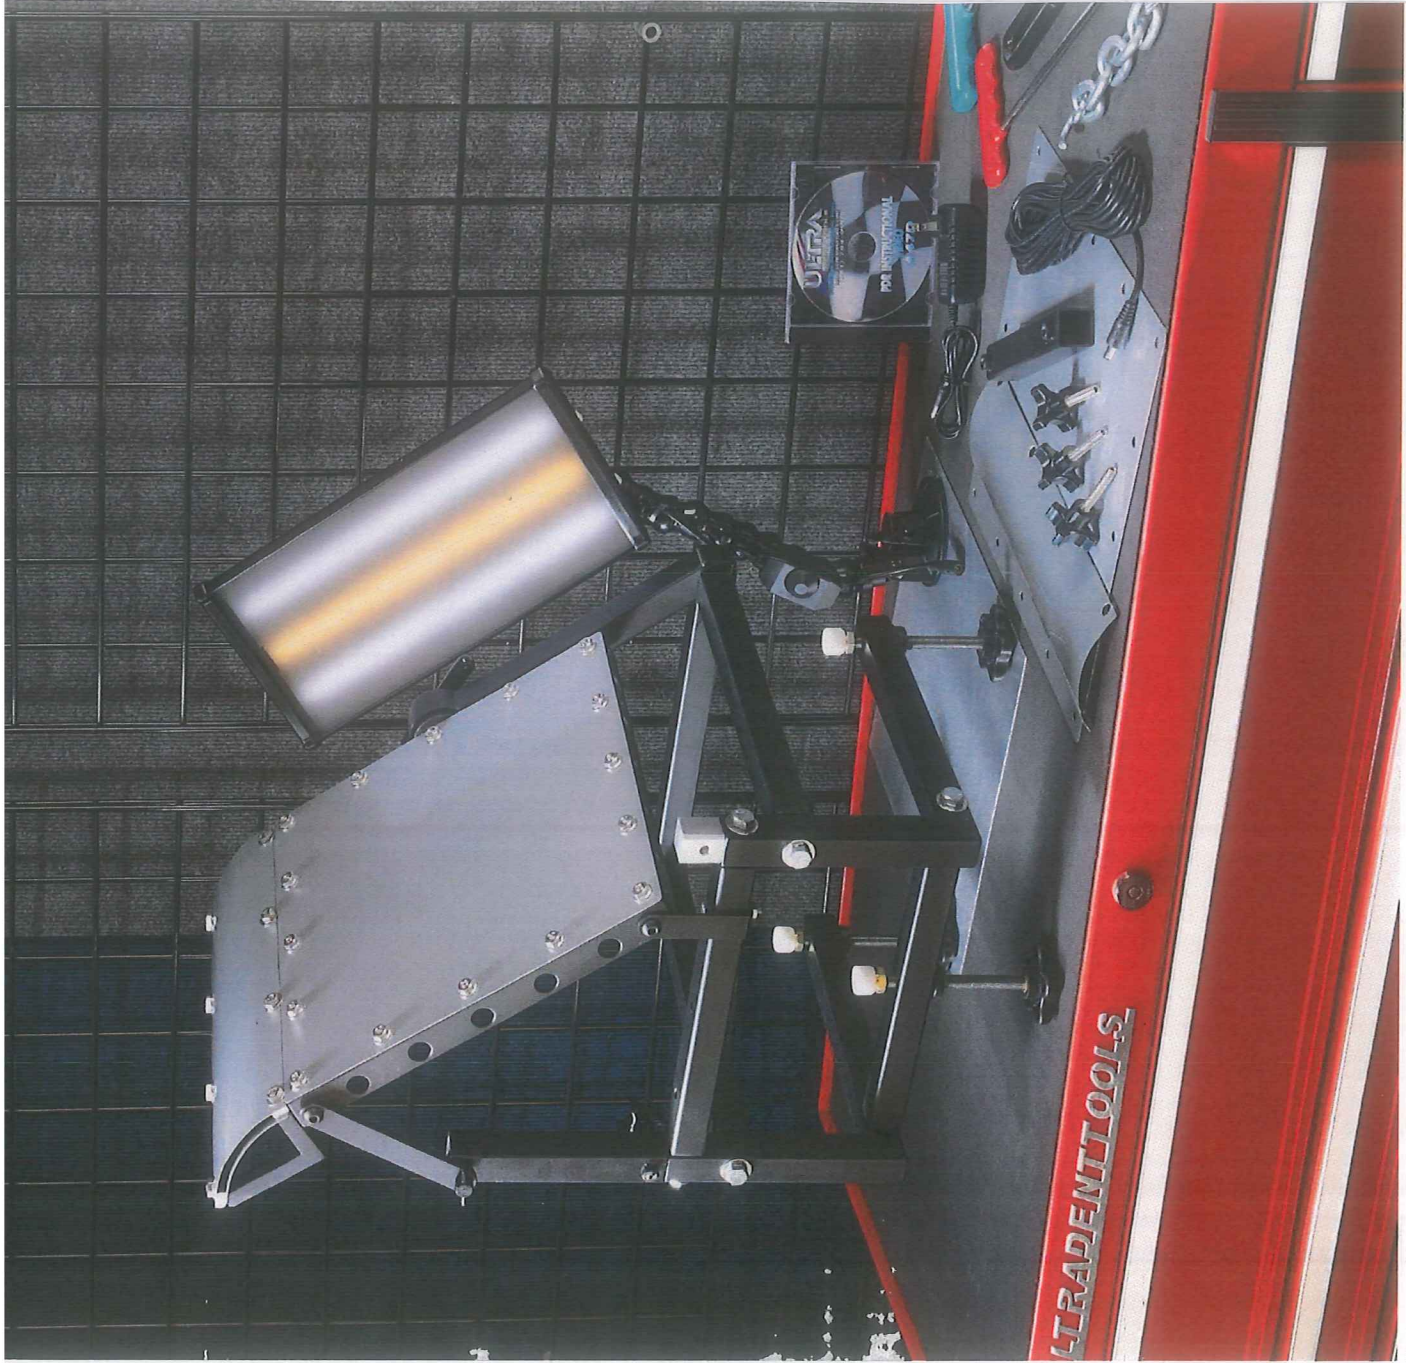

STEP ONE

TAKE AFRAME AND INSTALL
LTUBES WITH RUBBER FEET
OPPOSITE OF AFRAME
FACING DOWN USING 5/16-
18 BOLTS HAND TIGHTEN.



STEP TWO

INSTALL 90° TUBES
ONTO LTUBES USING
5/16-18 BOLTS HAND
TIGHTEN



STEP THREE

INSTALL LCTUBE WITH
THREADED BUNG FACING
DOWN HAND TIGHTEN .





STEP FOUR

INSTALL UCTUBE USING
5/16-18 BOLTS HAND
TIGHTEN

STEP FIVE

INSTALL 3/8-16 THUMB
SCREWS INTO THREADED
BUNGS . THEN SCREW
SWIVELS ONTO
THUMBSCREWS AND
TIGHTEN THUMB ONTO
THUMB SCREW



STEP SIX

INSTALL LARGE WASHER
ONTO AFRAME PIVOT



STEP SEVEN

INSTALL VTUBE USING $\frac{1}{4}$ -20
THUMB SCREWS




STEP EIGHT

INSTALL UFRAME
STARTING WITH THE
ROUND PIVOT TAB THEN
TIGHTEN 3/8-16 THUMB
SCREW



STEP NINE

INSTALL 1/4-20 THUMB
SCREWS INTO VTUBES

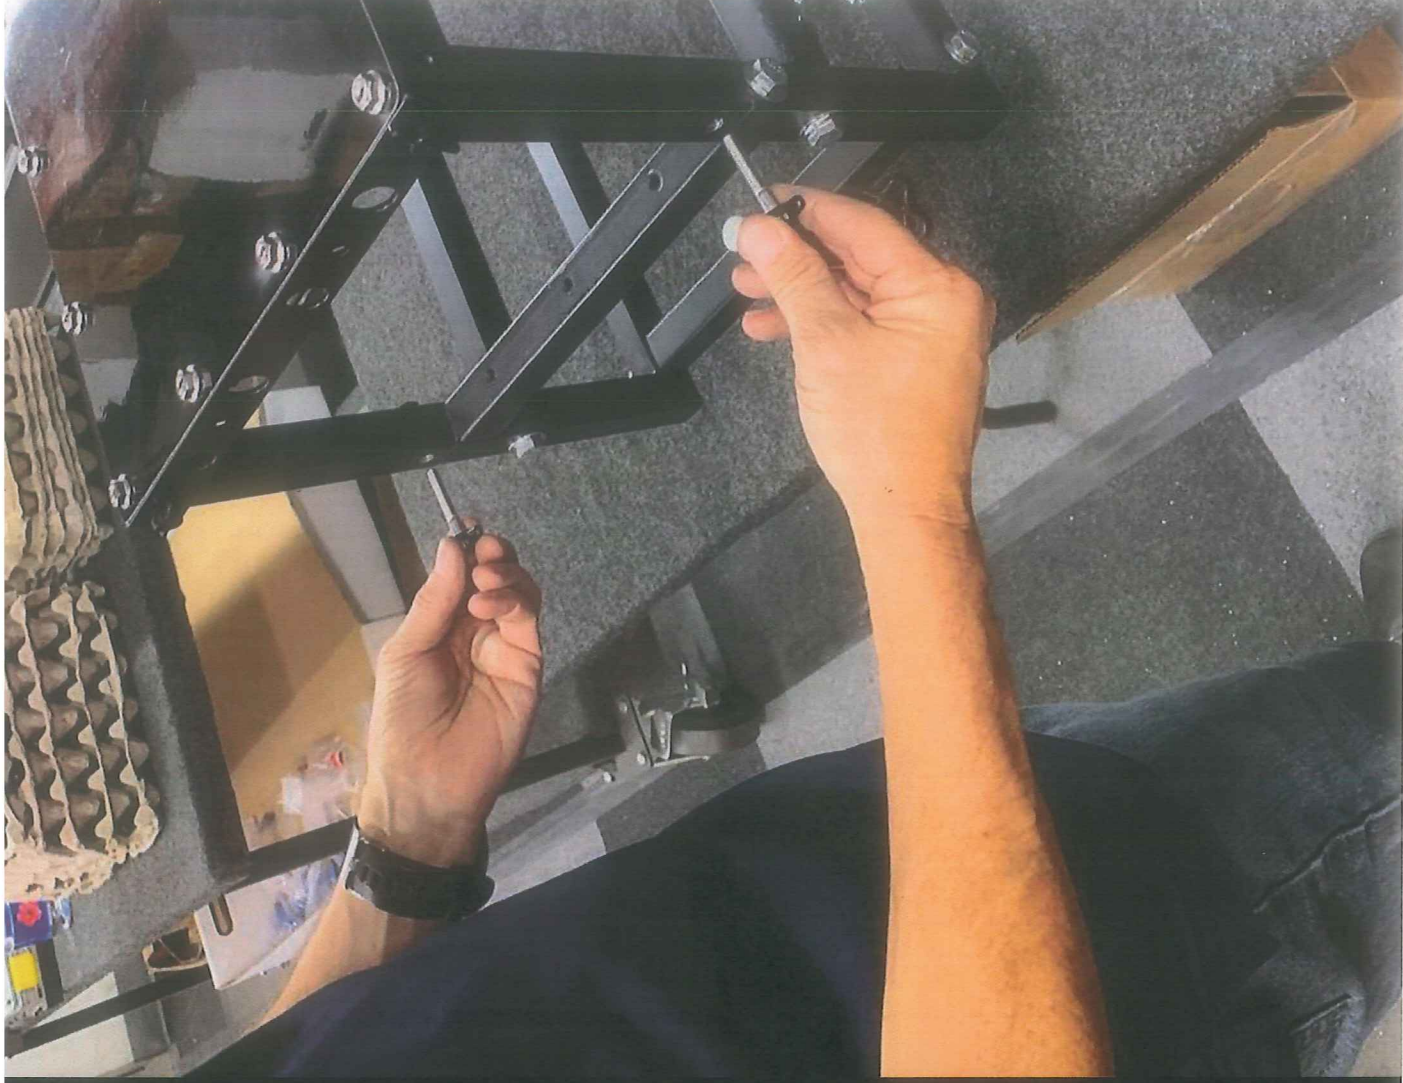

STEP TEN

INSTALL RFRAME TO
DESIRED SIDE USING 1/4-20
SHCS'S TIGHTEN WITH
ALLEN WRENCH .



STEP ELEVEN

INSTALL BRACE UNDER TEST
PLATE INTO ONE OF THE
FOUR DESIRED POSITIONS



STEP TWELVE

TO POSITION DENT DESK AT 55° CHOOSE RIGHT OR LEFT POSITION THEN USE 90° BRACE AND 55° BRACE TO SECURE USING 1/4-20 THUMB SCREWS AND 5/16-18 THUMB SCREWS AS SHOWN .



STEP THIRTEEN

TO POSITION DENT DESK
VERTICAL , CHOOSE RIGHT
OR LEFT POSITION THEN
BOLT UFRAME DIRECT TO
UCTUBE USING 1/4-20 THUMB
SCREW AND NUT.

NOW SNUG ALL 5/16 BOLTS
TO WITH 9/16 WRENCH .

