



# ARMABOT


## Backshafter P/N A0044 Installation Instructions

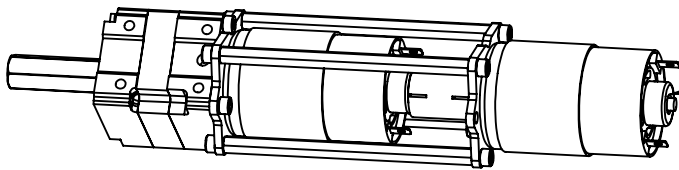

Option 1 (1 Versa Planetary,  
2 775pro or 775 Redline  
motors (not included))

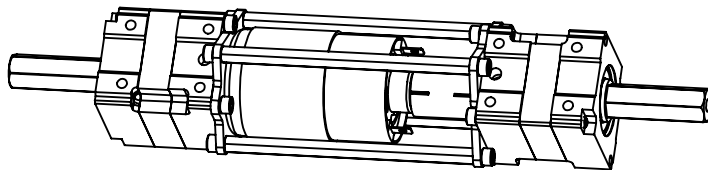

Option 2 (2 Versa Planetary,  
1 775pro or 775 Redline  
motors (not included))

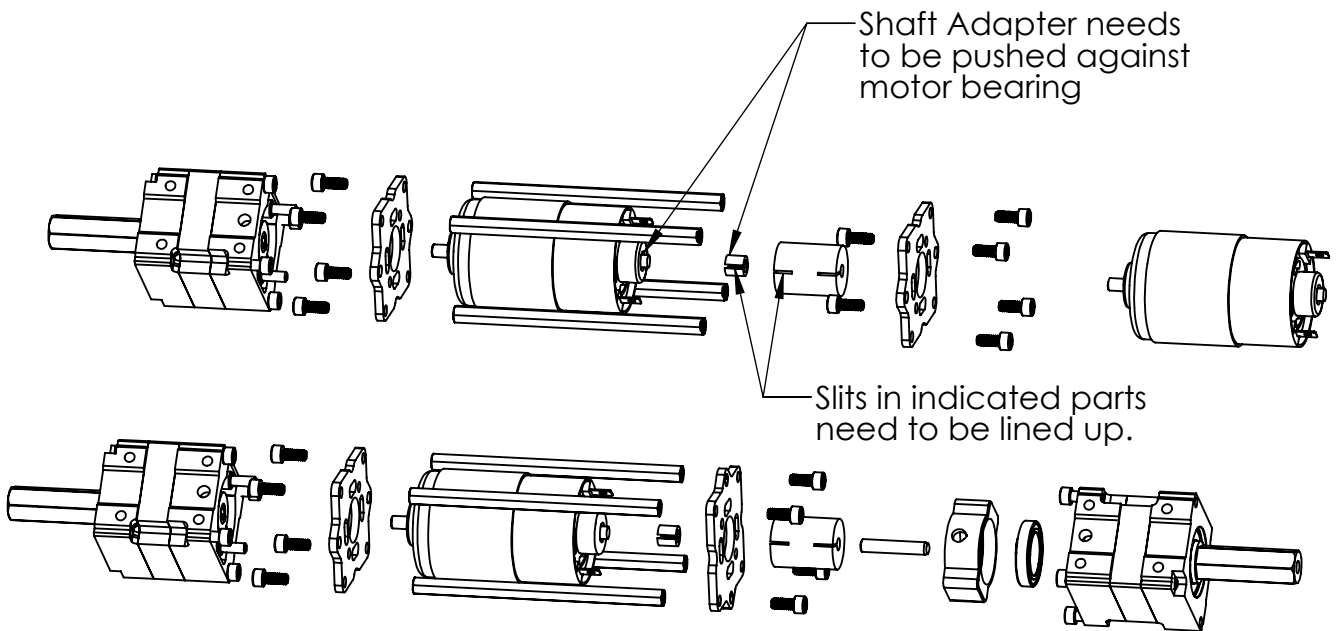

Use Loctite on all screws