

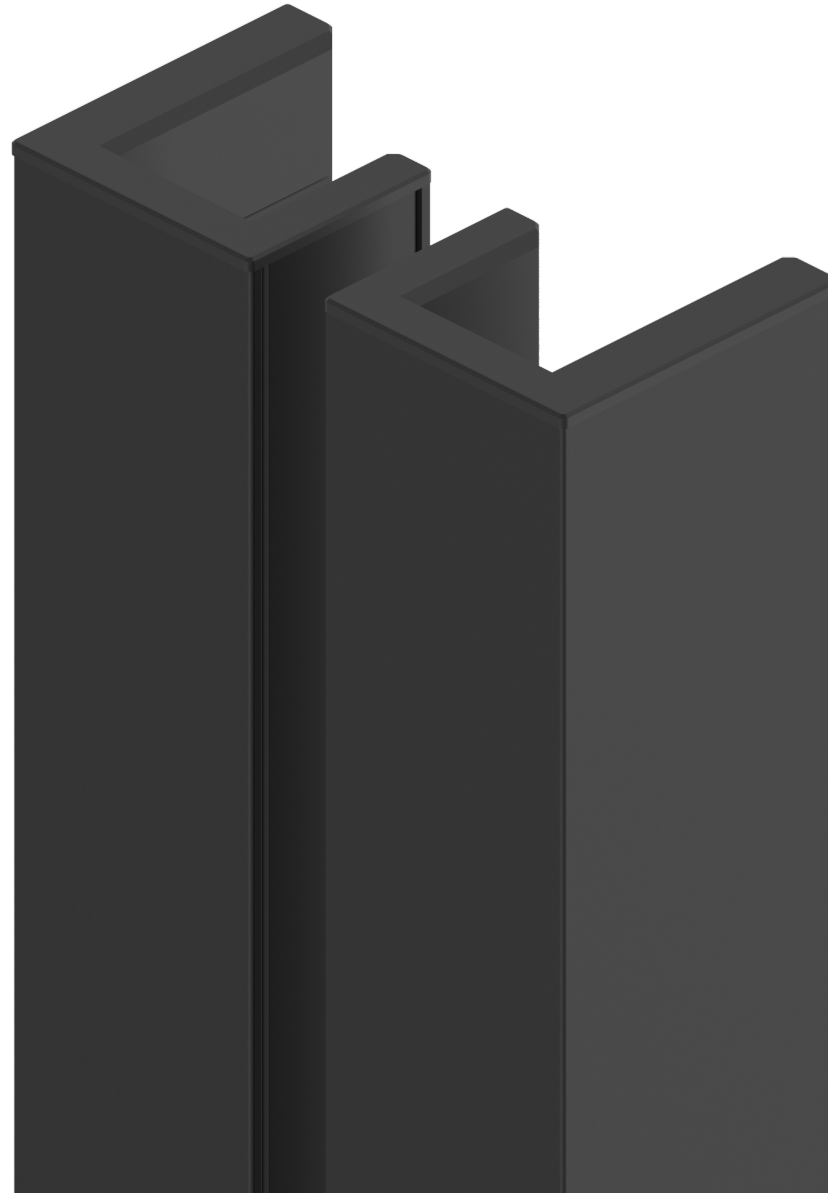


MOUNTING DG.10 DOORGRIP

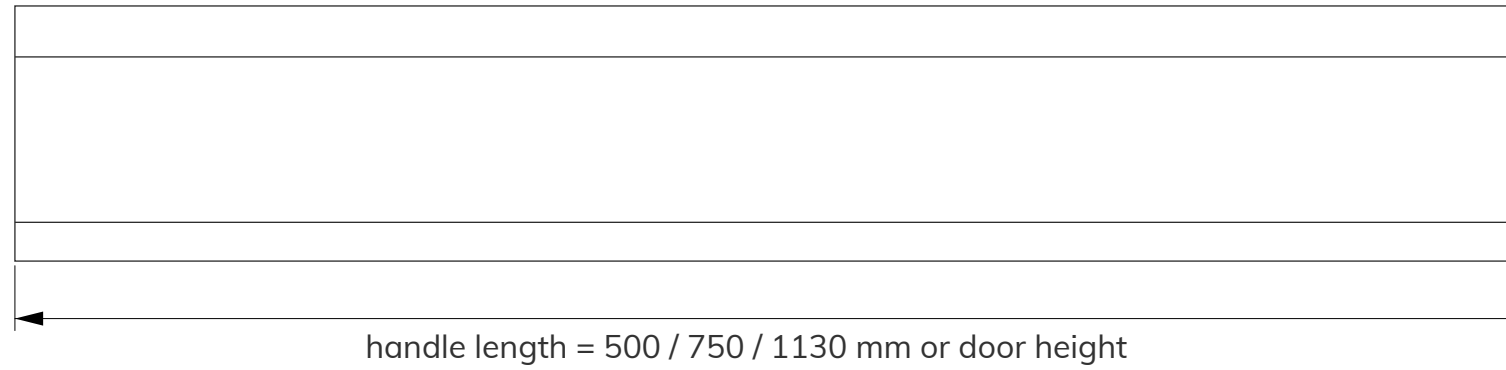


DG.10 DIMENSIONS

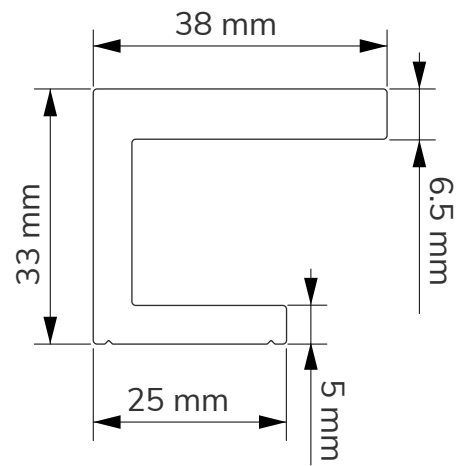


DG.10 ANODIZED ALUMINIUM COLORS


ALUMINIUM

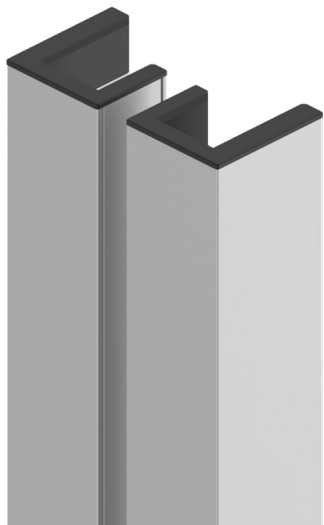

BLACK

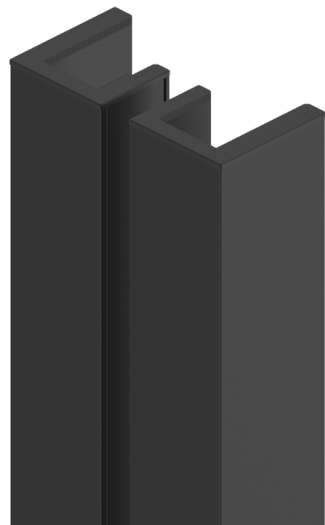


BRONZE

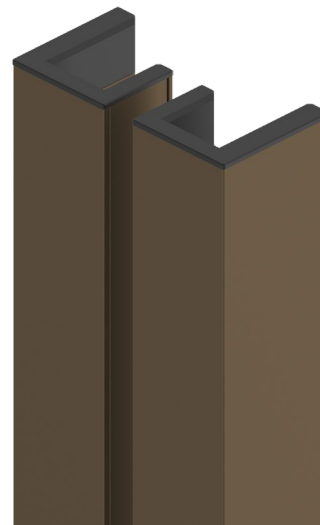


STAINLESS STEEL



GOLD







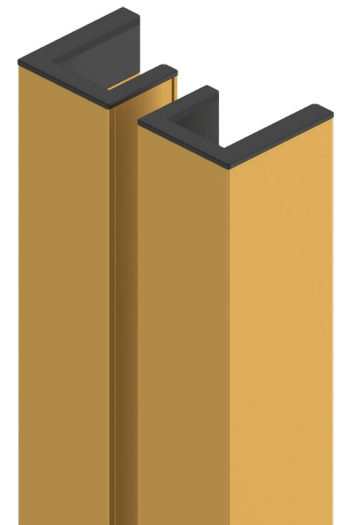


DG10 SIZE VARIATIONS

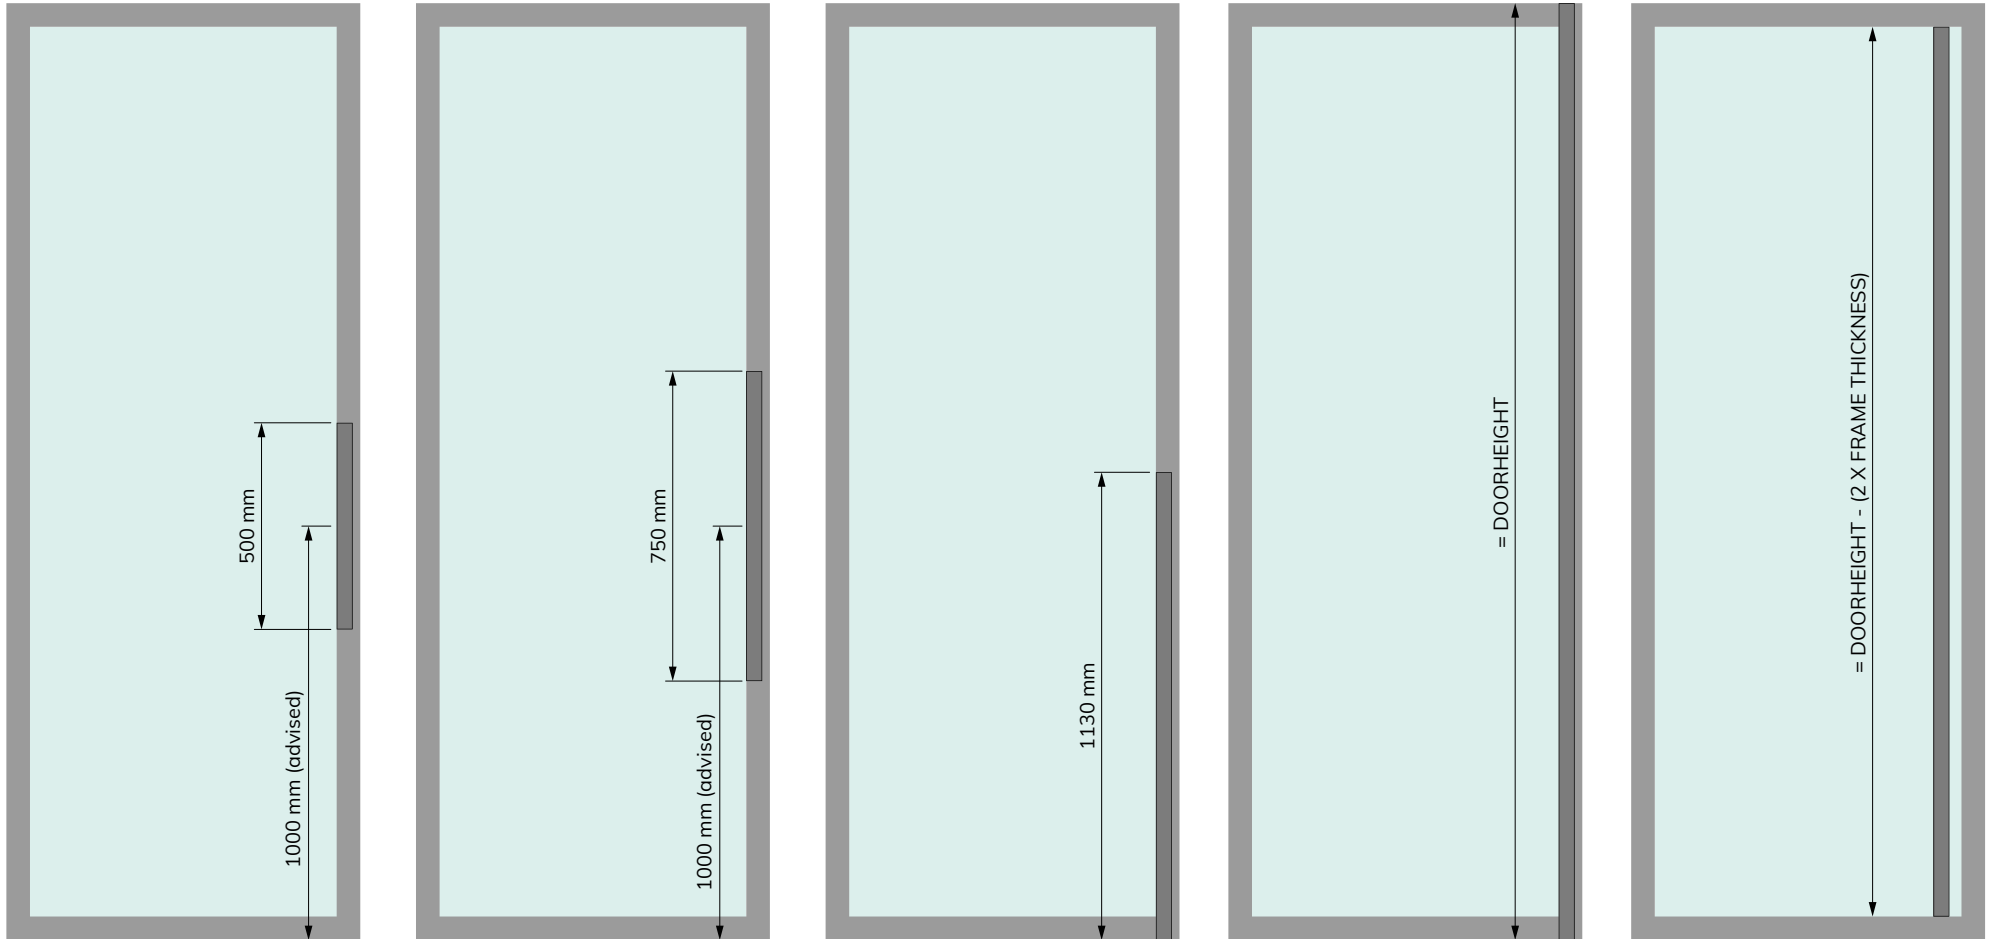

= maximum length when mounted on glass

DG10 ADVISED MOUNTING LOCATIONS

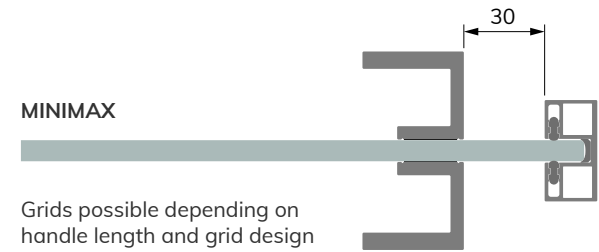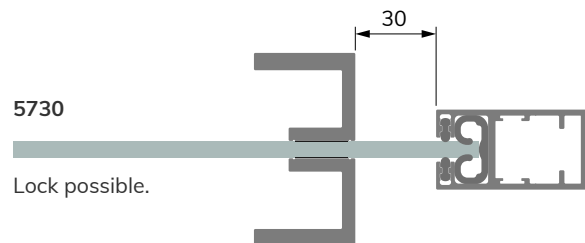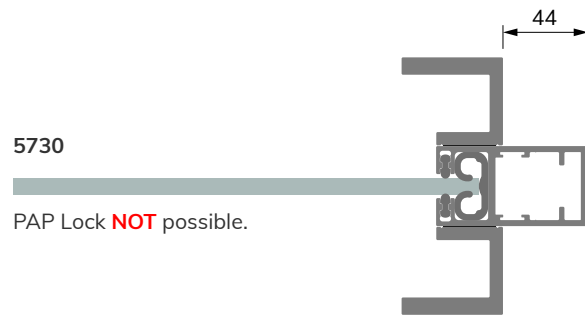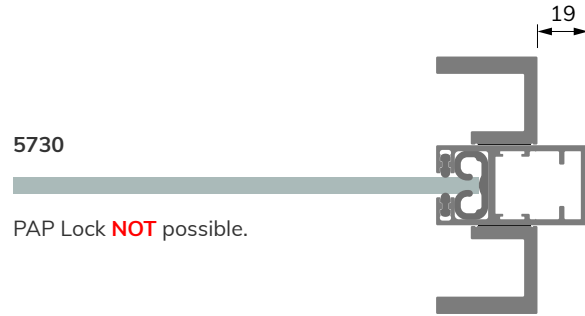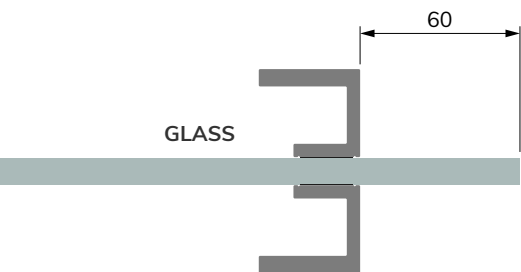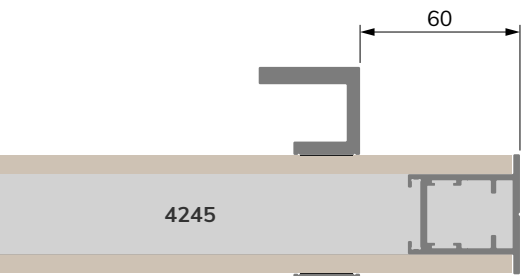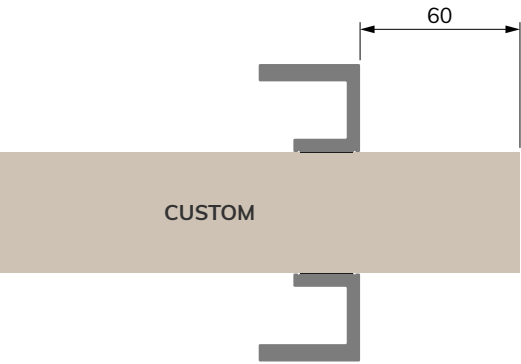


joint dimension →

Never mount the handle flush with any door type:

- joint dimensions need to increase
- NOT possible with PAP doorjamb


Place end caps to hide saw cuts and to cover sharp edges.
Apply glue when mounting.

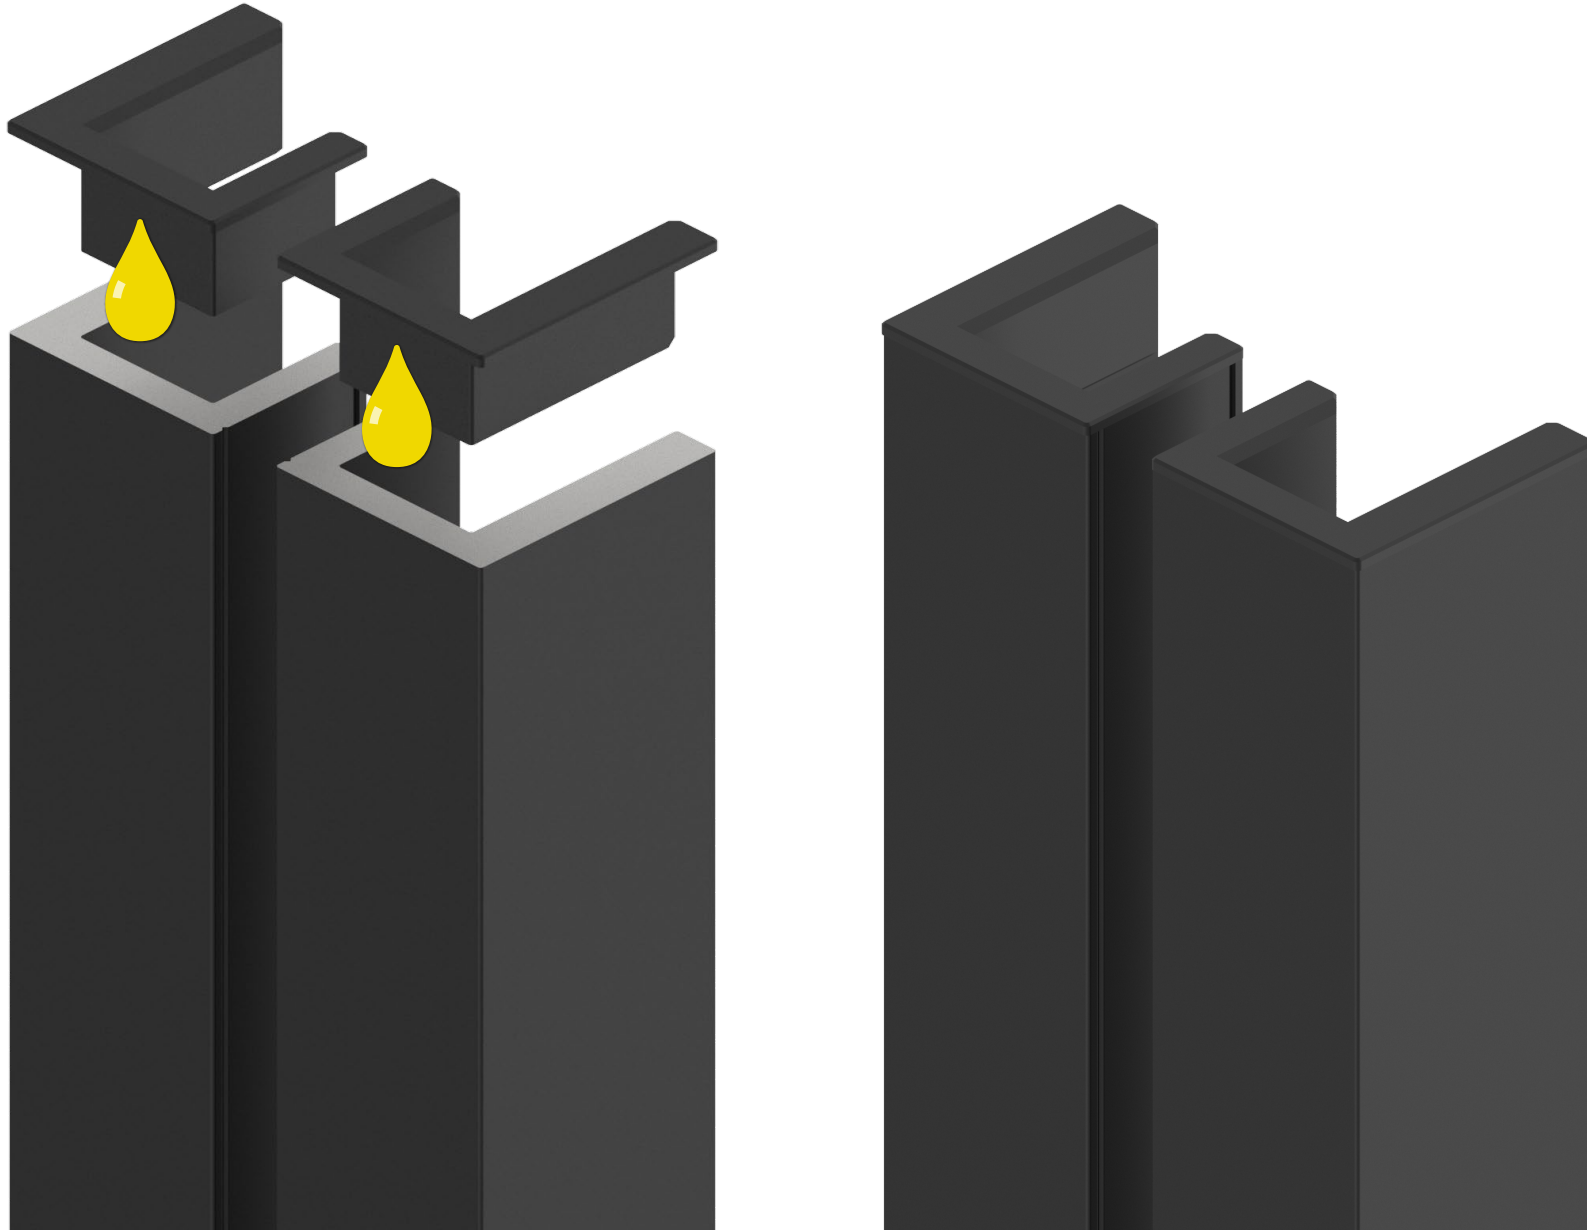

DEGREASE SURFACE BEFORE
MOUNTING DOORGRIP!

Remove the backing strip from
the double sided tape


DG10 is mounted with double
sided tape onto the door panel.

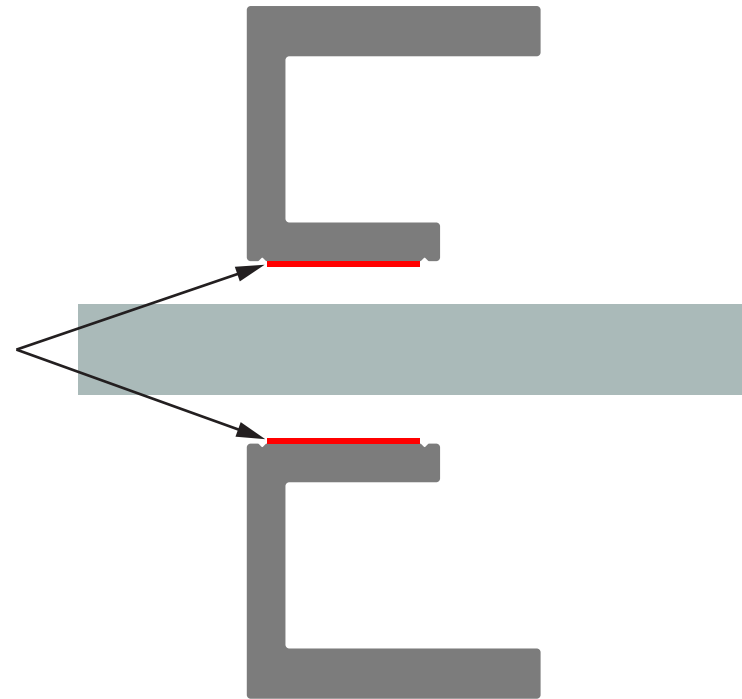




DEGREASE SURFACE BEFORE
MOUNTING DOORGRIP!

Carefully place the DG.10 at the desired
location.

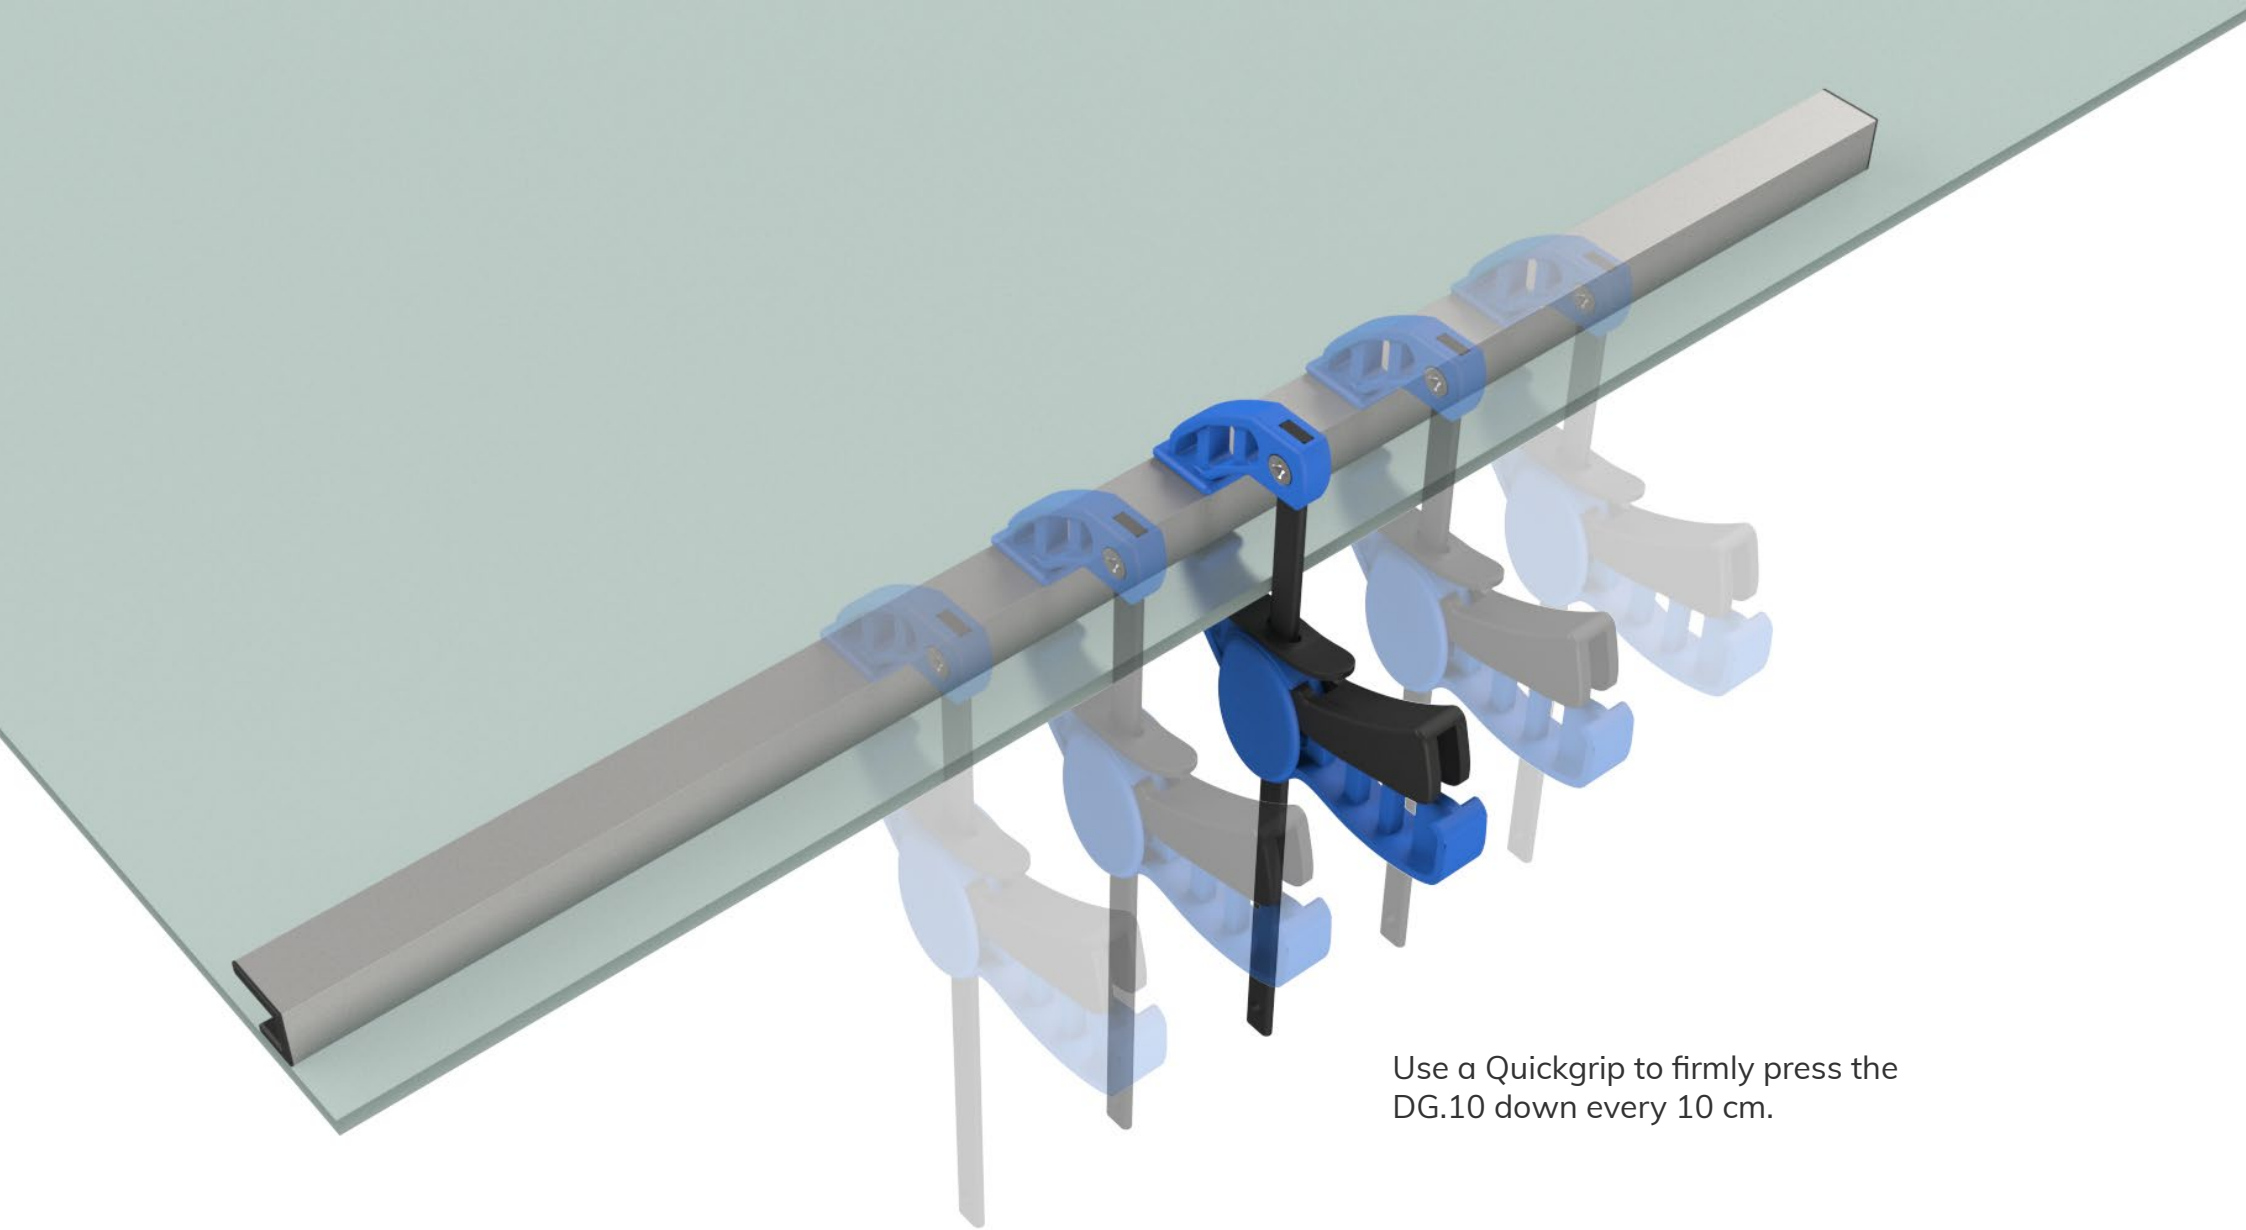

Use a Quickgrip to firmly press the DG.10 down every 10 cm.

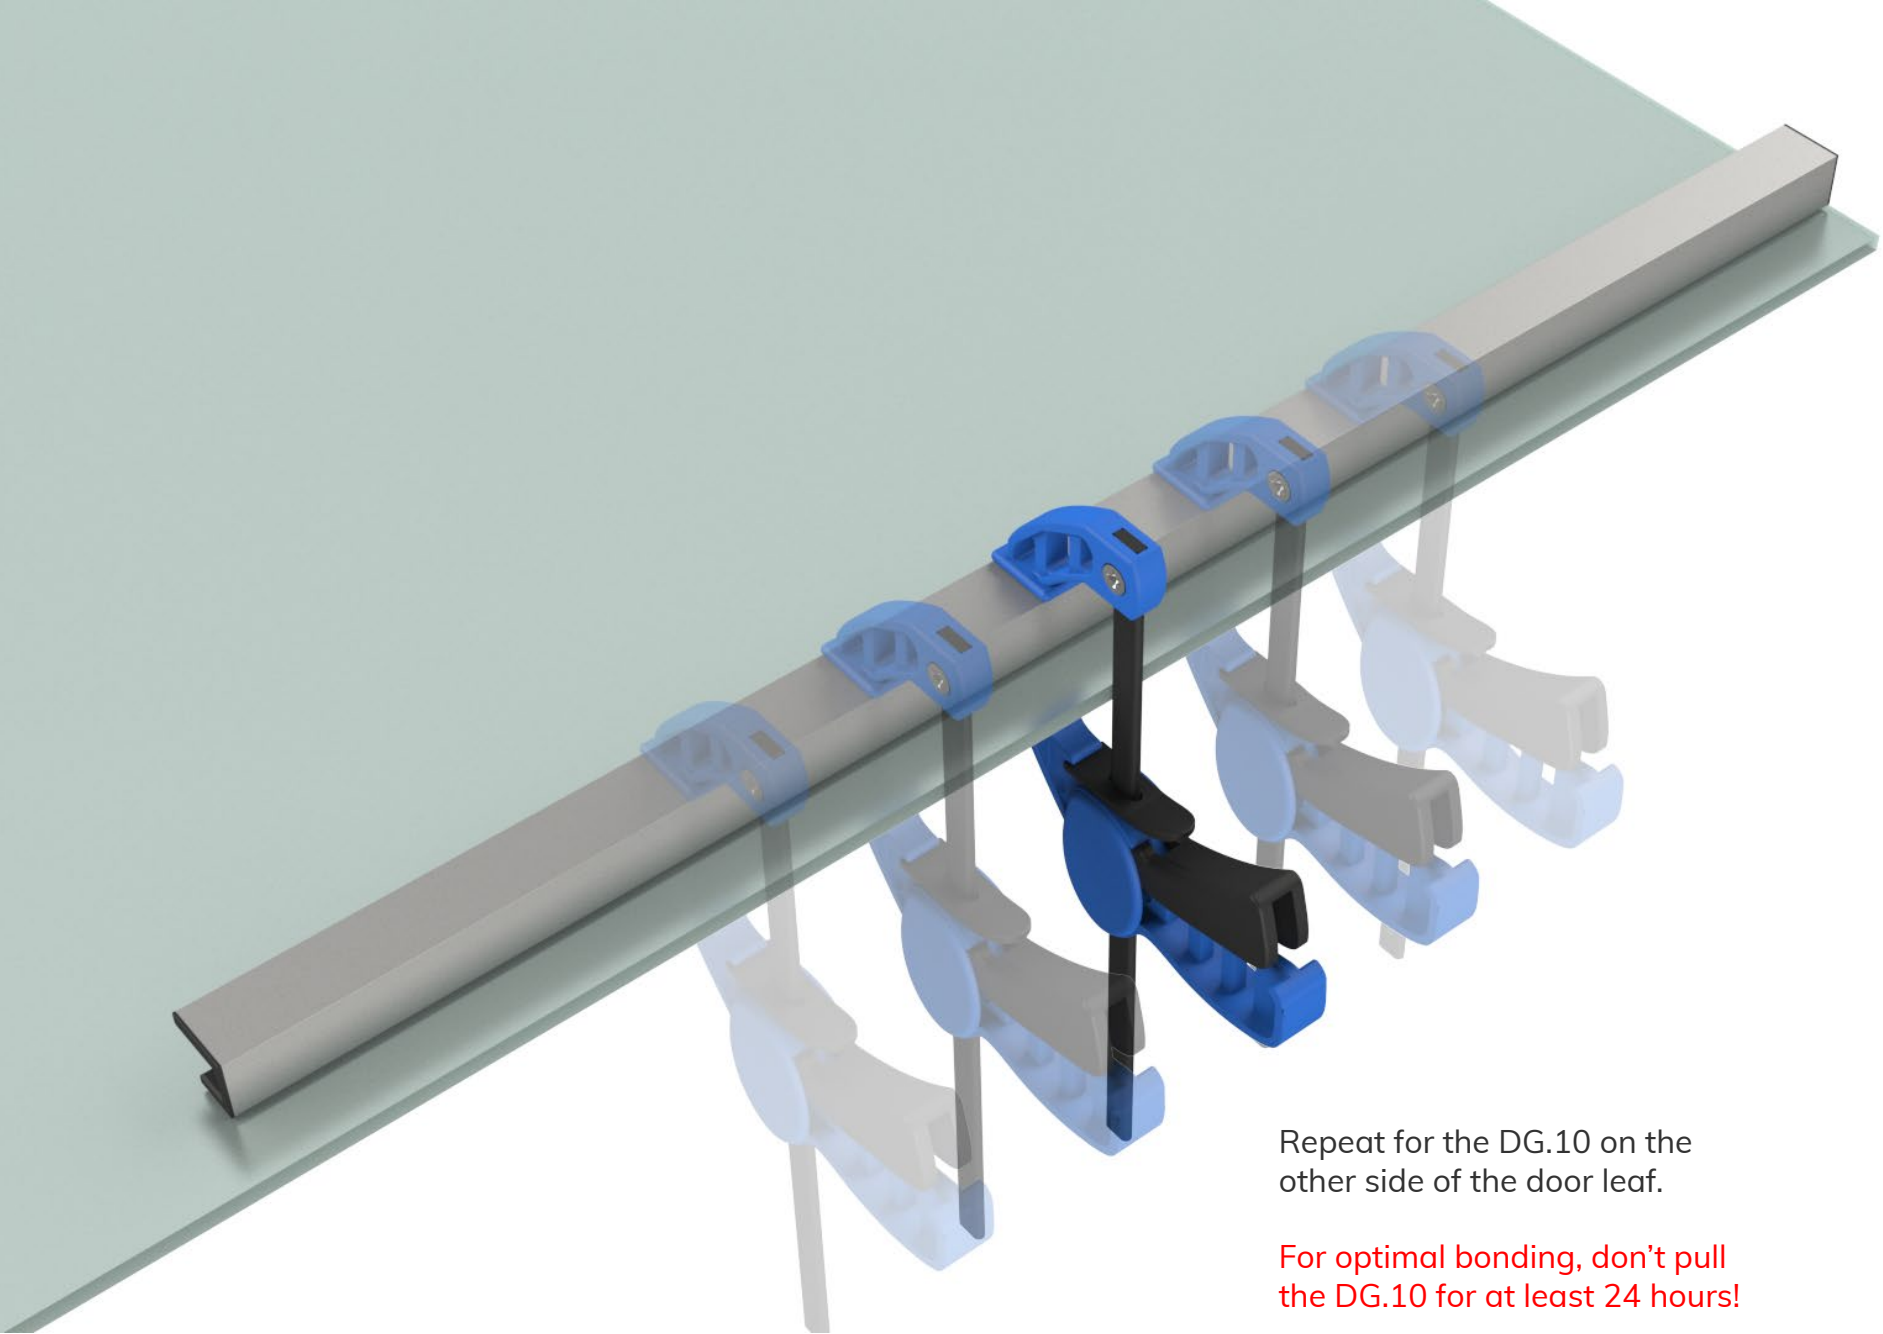

Repeat for the DG.10 on the other side of the door leaf.

For optimal bonding, don't pull the DG.10 for at least 24 hours!

DG10 EXAMPLES



1130 mm DG10
Custom door



500 mm DG10
Portapivot 5730



Full height DG10
Portapivot 4245



750 mm DG10
Portapivot Glass

For instructions on how to install
the fully assembled door in your doorway,
please refer to the DOOR INSTALLATION MANUAL