

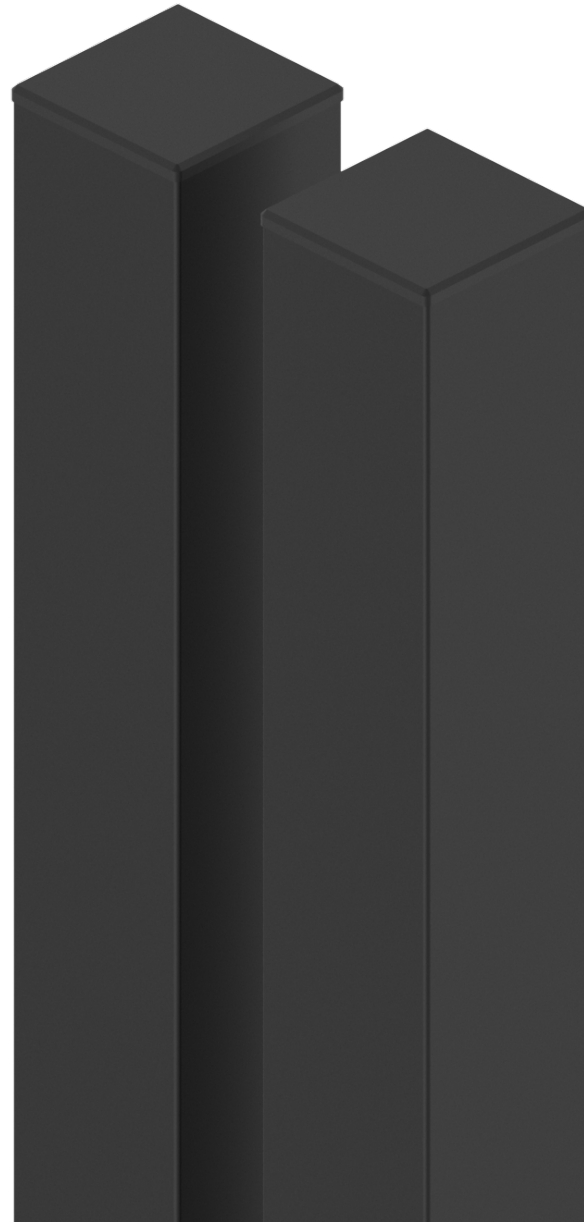


MOUNTING UGP DOORGRIP

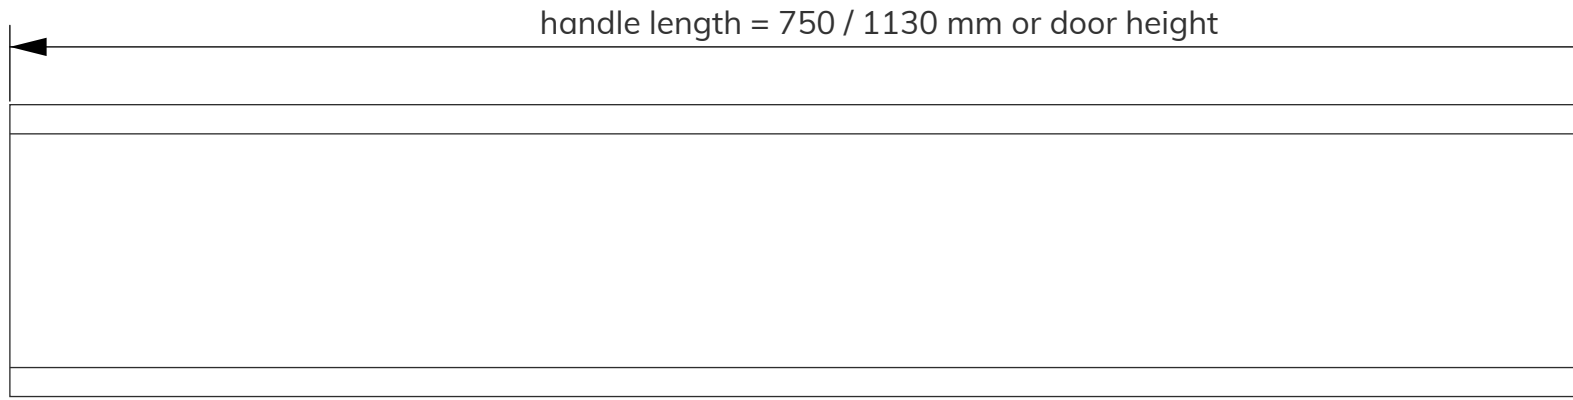


UGP DIMENSIONS

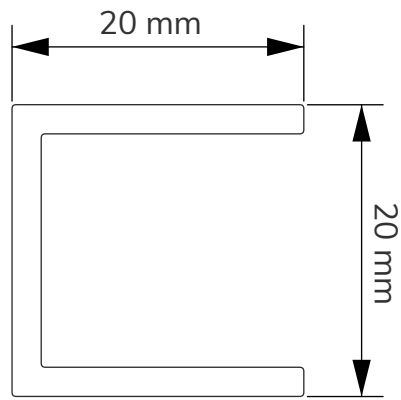

UGP ANODIZED ALUMINIUM COLORS


ALUMINIUM

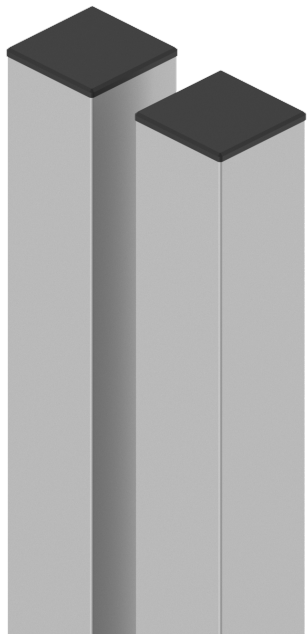


BLACK




BRONZE

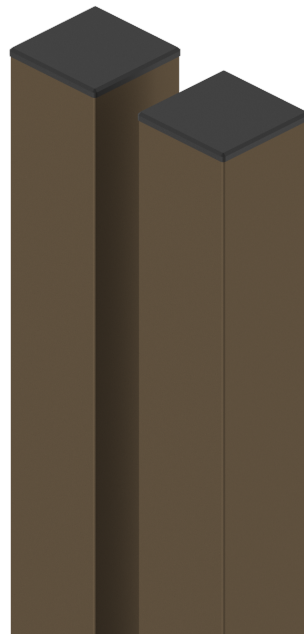





STAINLESS STEEL

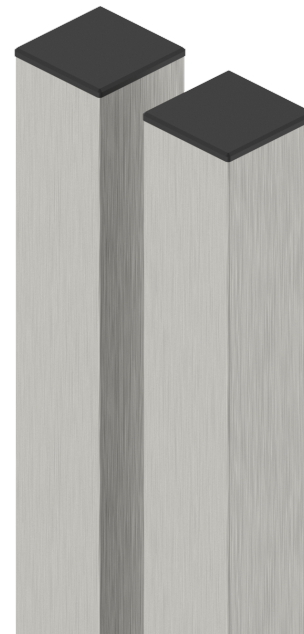

GOLD






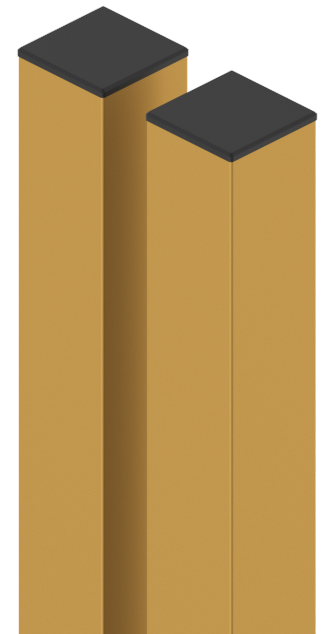


UGP SIZE VARIATIONS

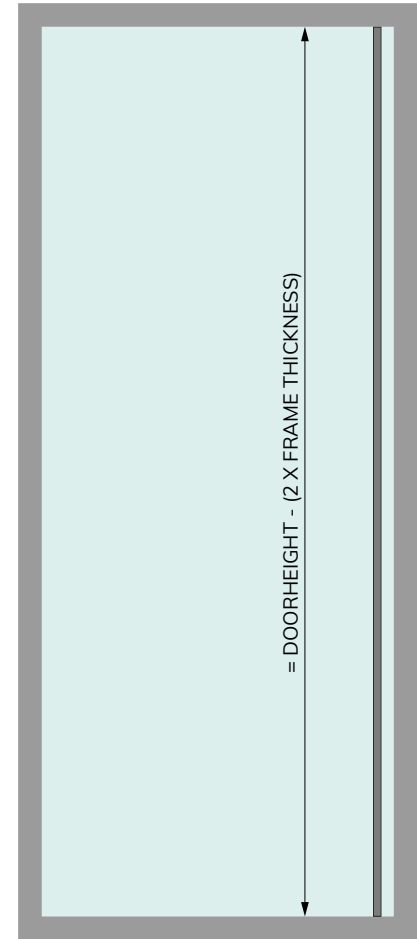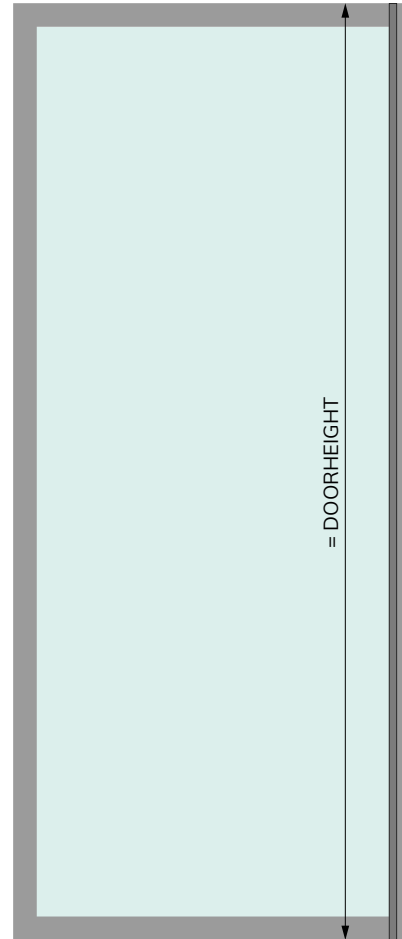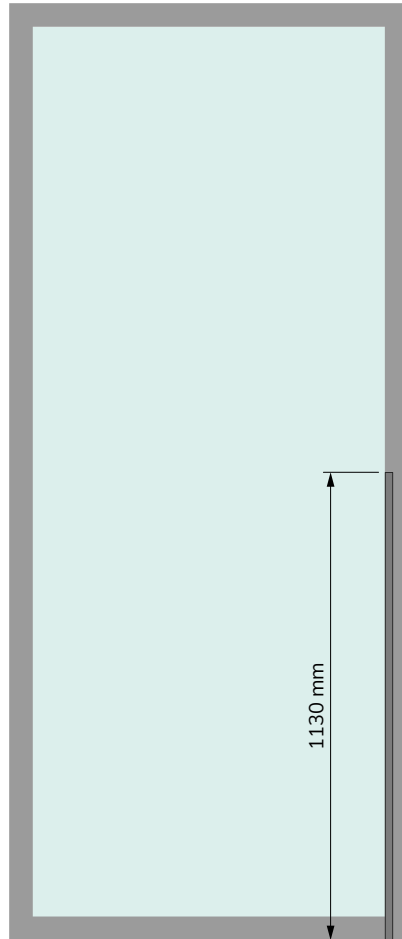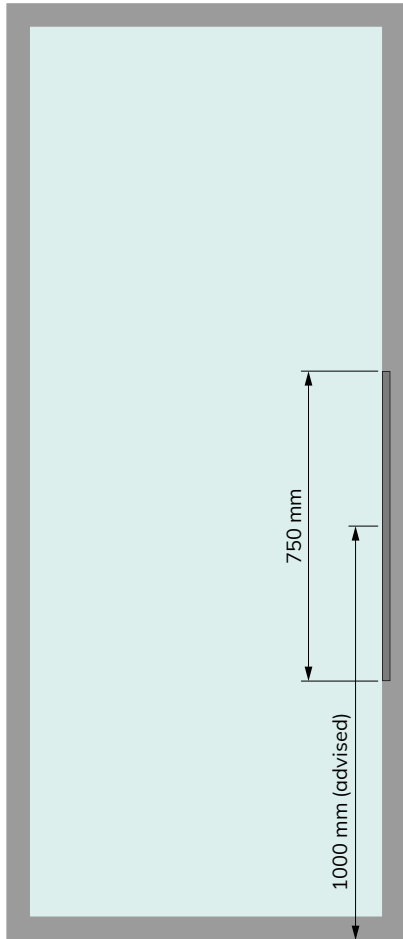

= maximum length when mounted on glass

UGP ADVISED MOUNTING LOCATIONS

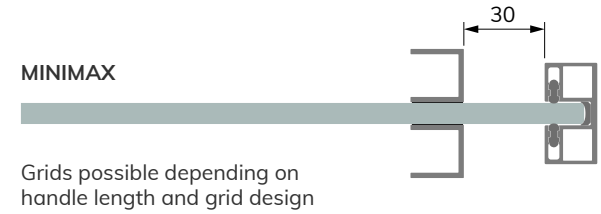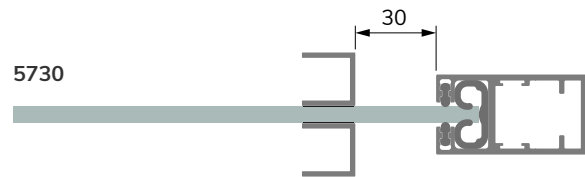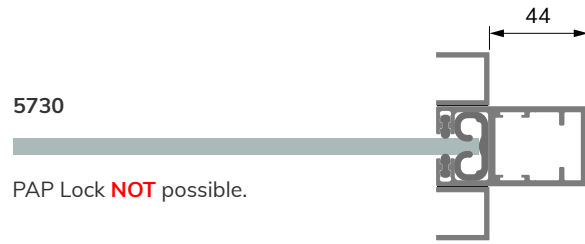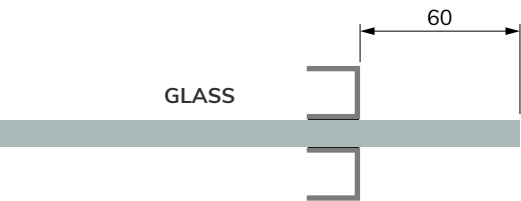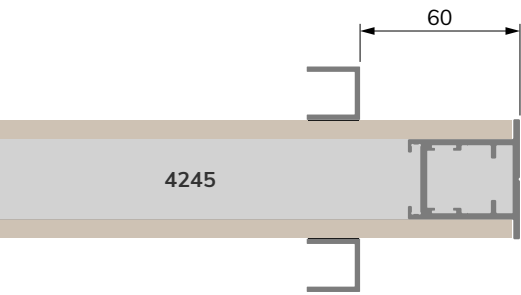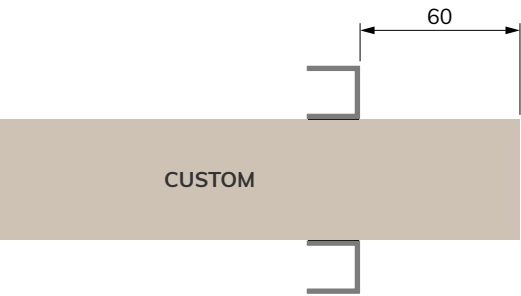


joint dimension →

Never mount the handle flush with any door type:

- joint dimensions need to increase
- NOT possible with PAP doorjamb


Place end caps to hide saw cuts and to cover sharp edges.
Apply a drop of glue to the back side when mounting.

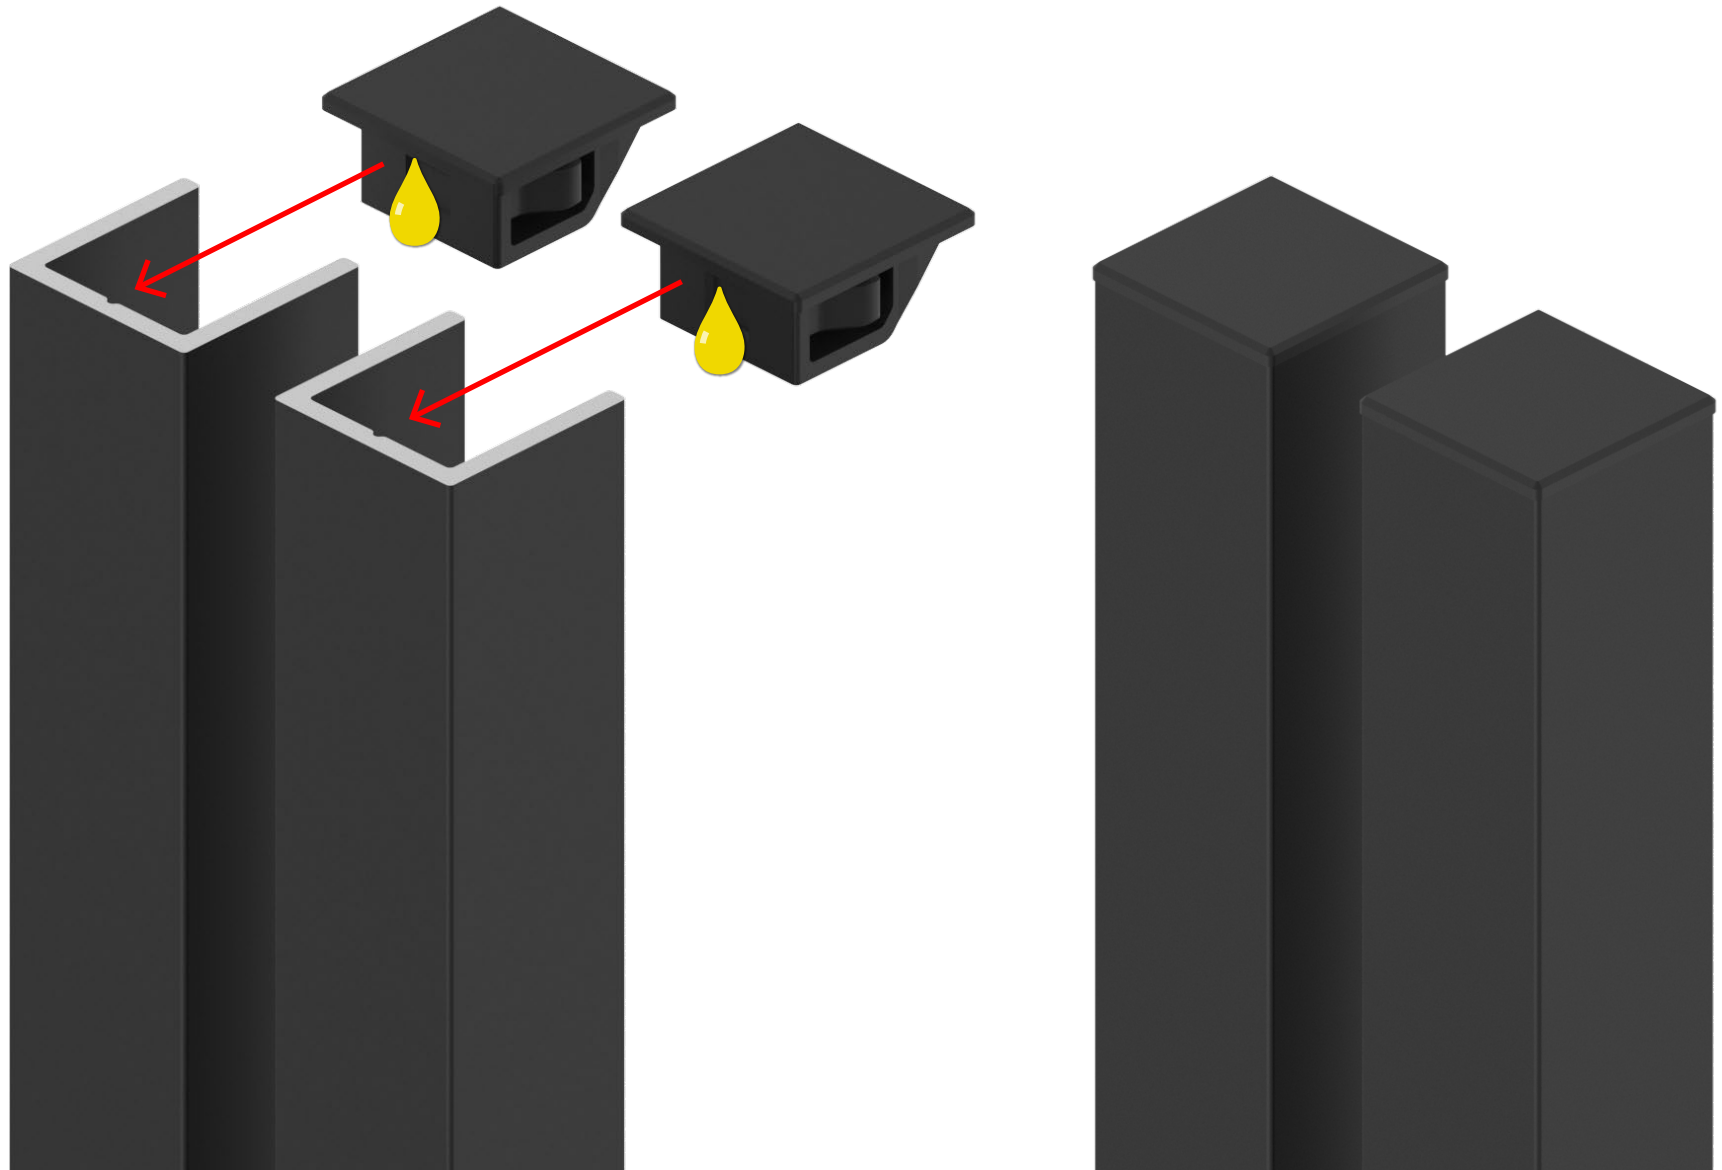

DEGREASE SURFACE BEFORE MOUNTING DOORGRIP!

Remove the backing strip from the double sided tape


UGP is mounted with double sided tape onto the door panel.

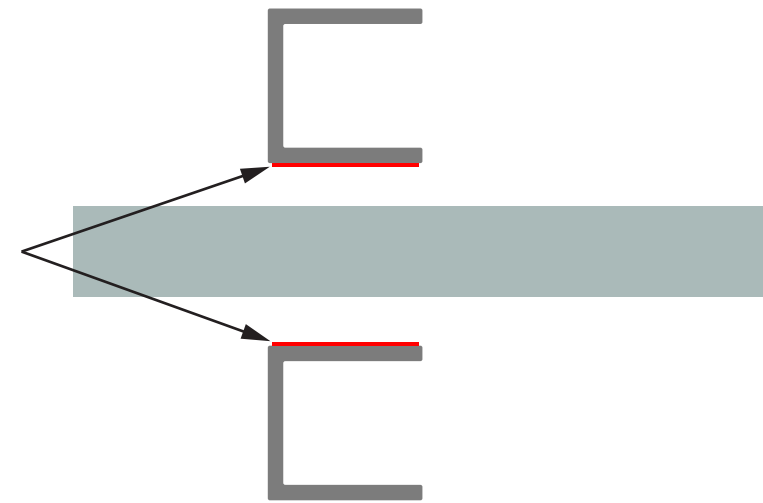




DEGREASE SURFACE BEFORE
MOUNTING DOORGRIP!

Carefully place the UGP
at the desired location.

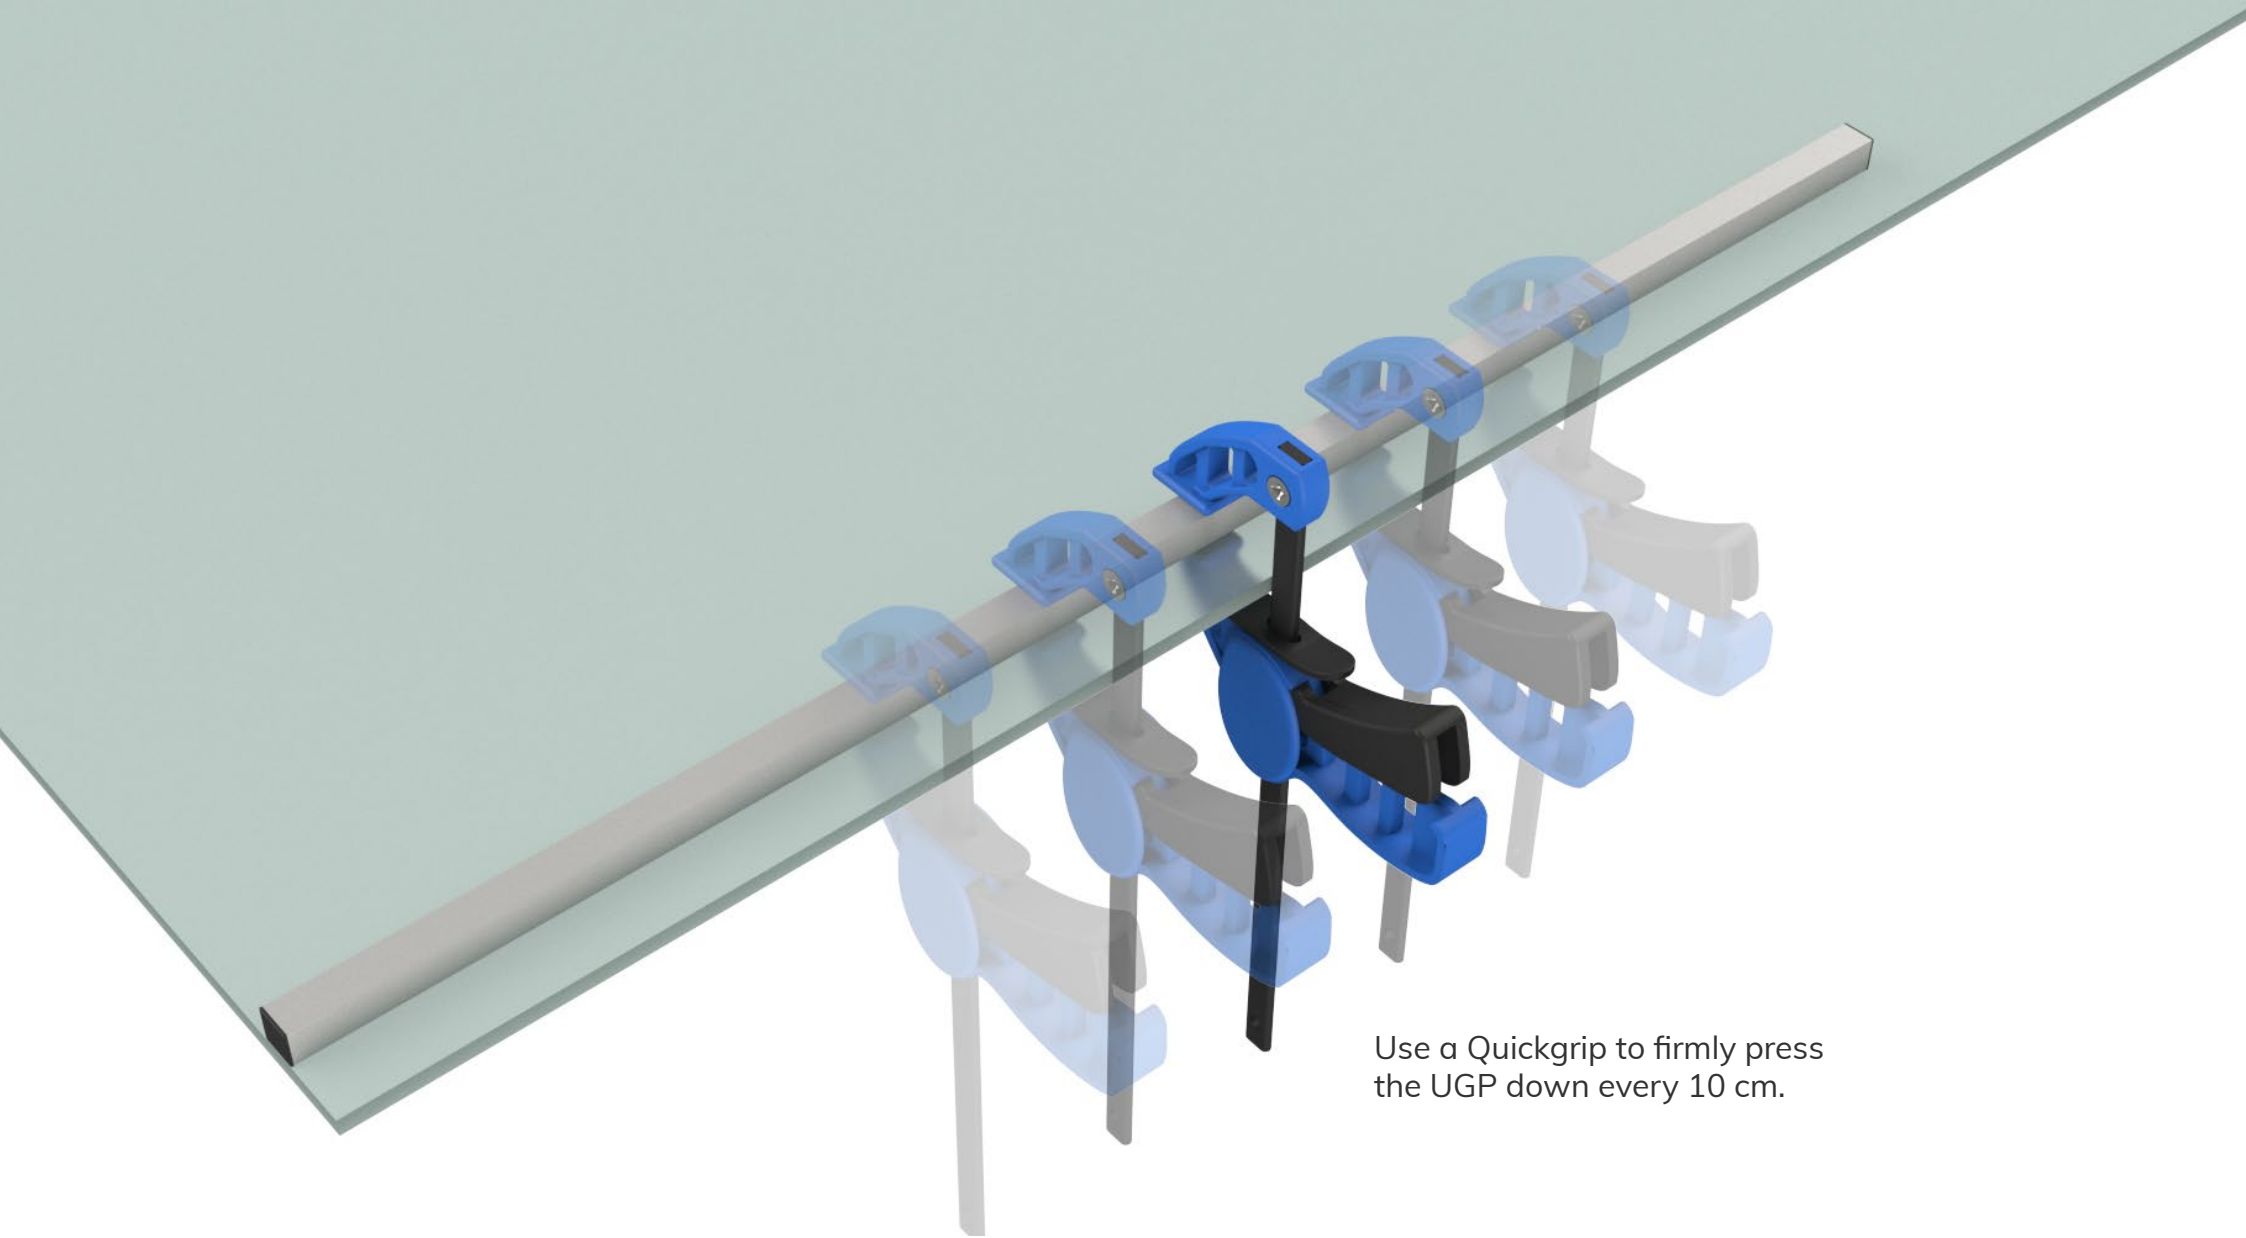

Use a Quickgrip to firmly press the UGP down every 10 cm.

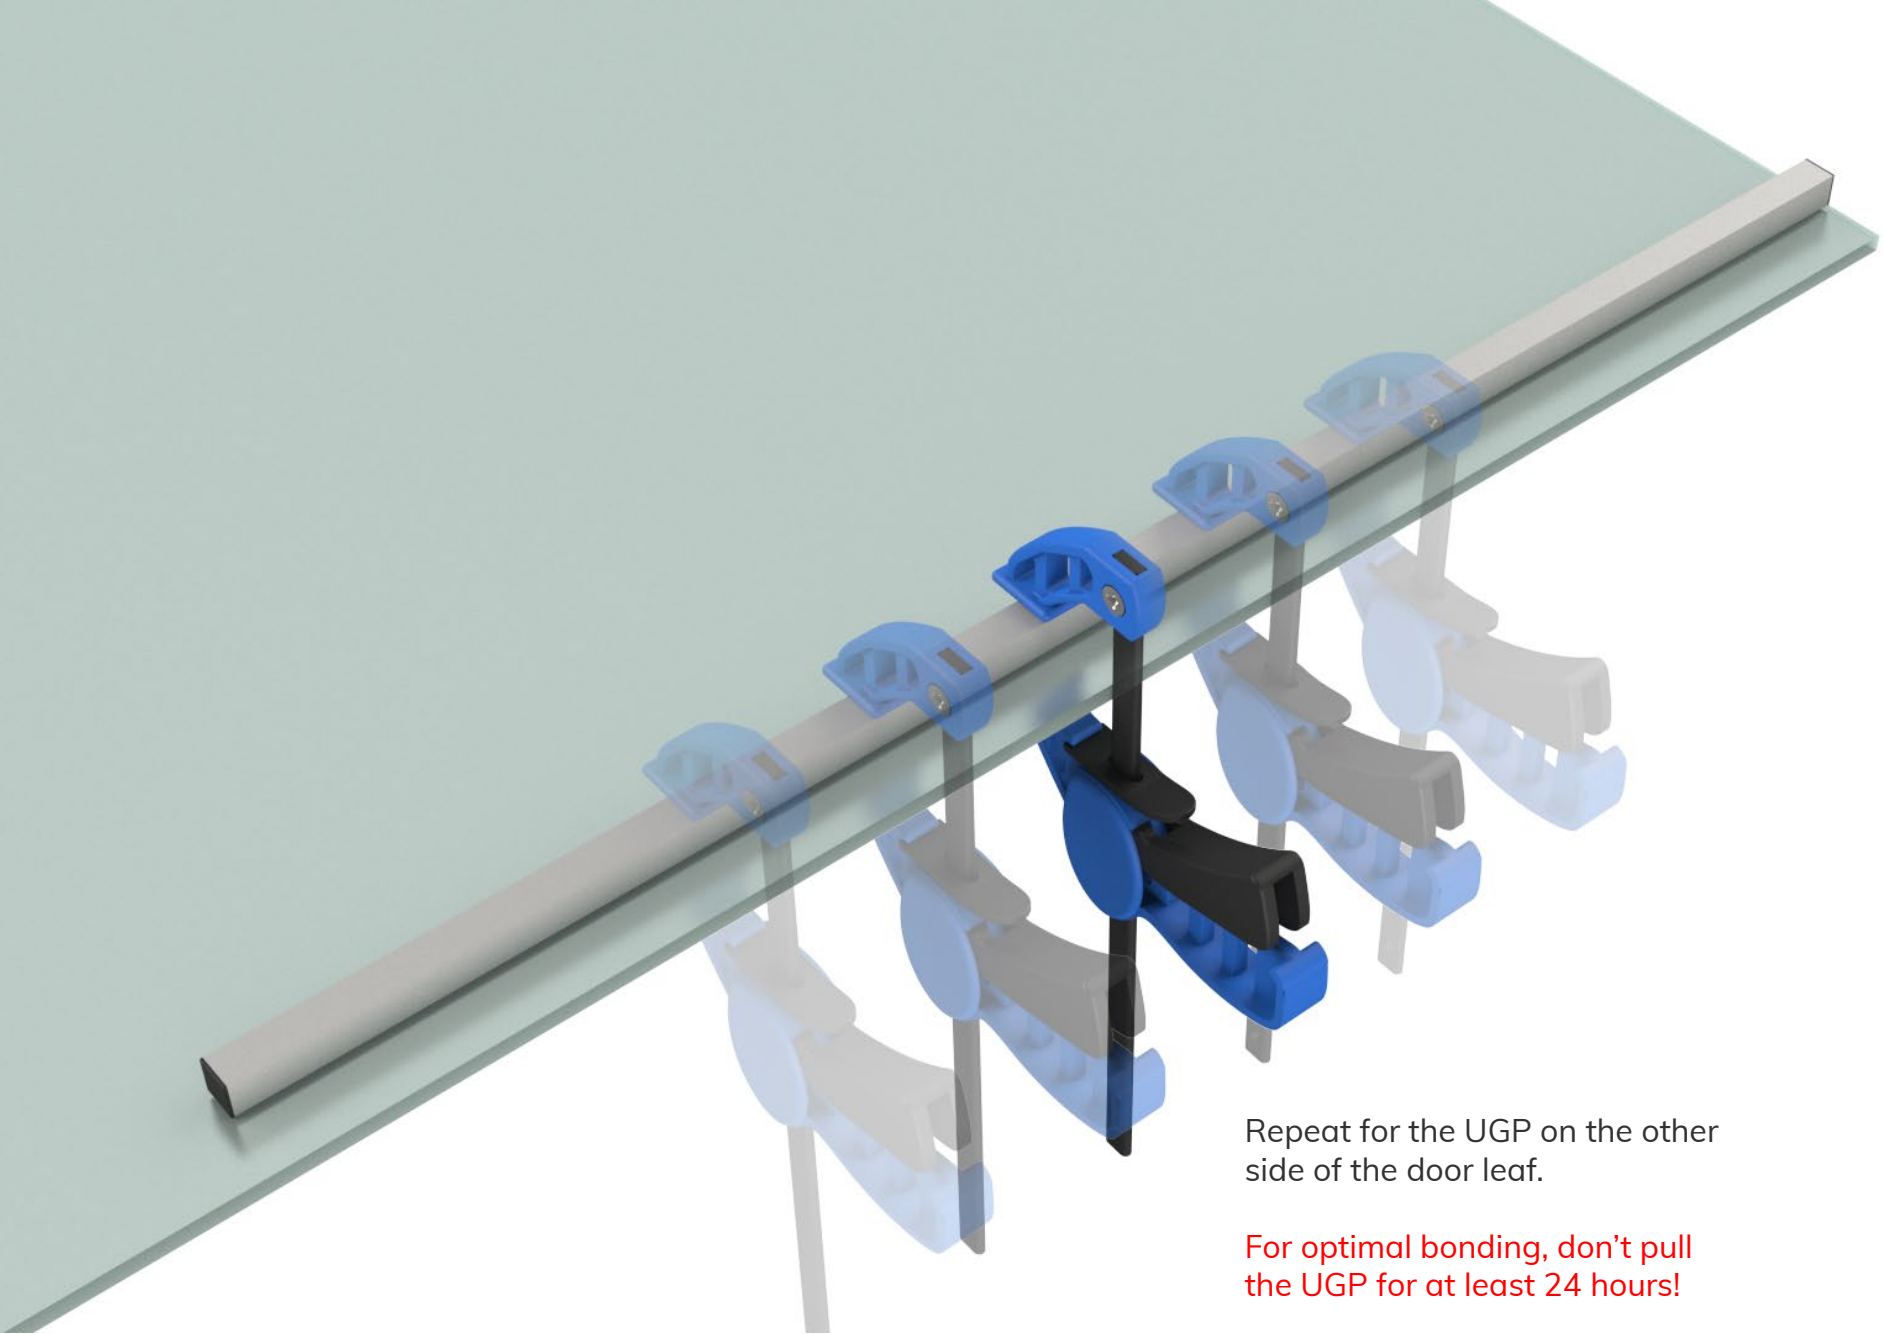

Repeat for the UGP on the other side of the door leaf.

For optimal bonding, don't pull the UGP for at least 24 hours!

UGP EXAMPLES



Full height UGP
Custom door



Full height UGP
Portapivot 5730
(on glass inside doorframe)



1130 mm UGP
Portapivot 4245



750 mm UGP
Portapivot Glass

For instructions on how to install
the fully assembled door in your doorway,
please refer to the DOOR INSTALLATION MANUAL