


RIDEFAST

SPM™ Boost Front Mountain Hub Assembly

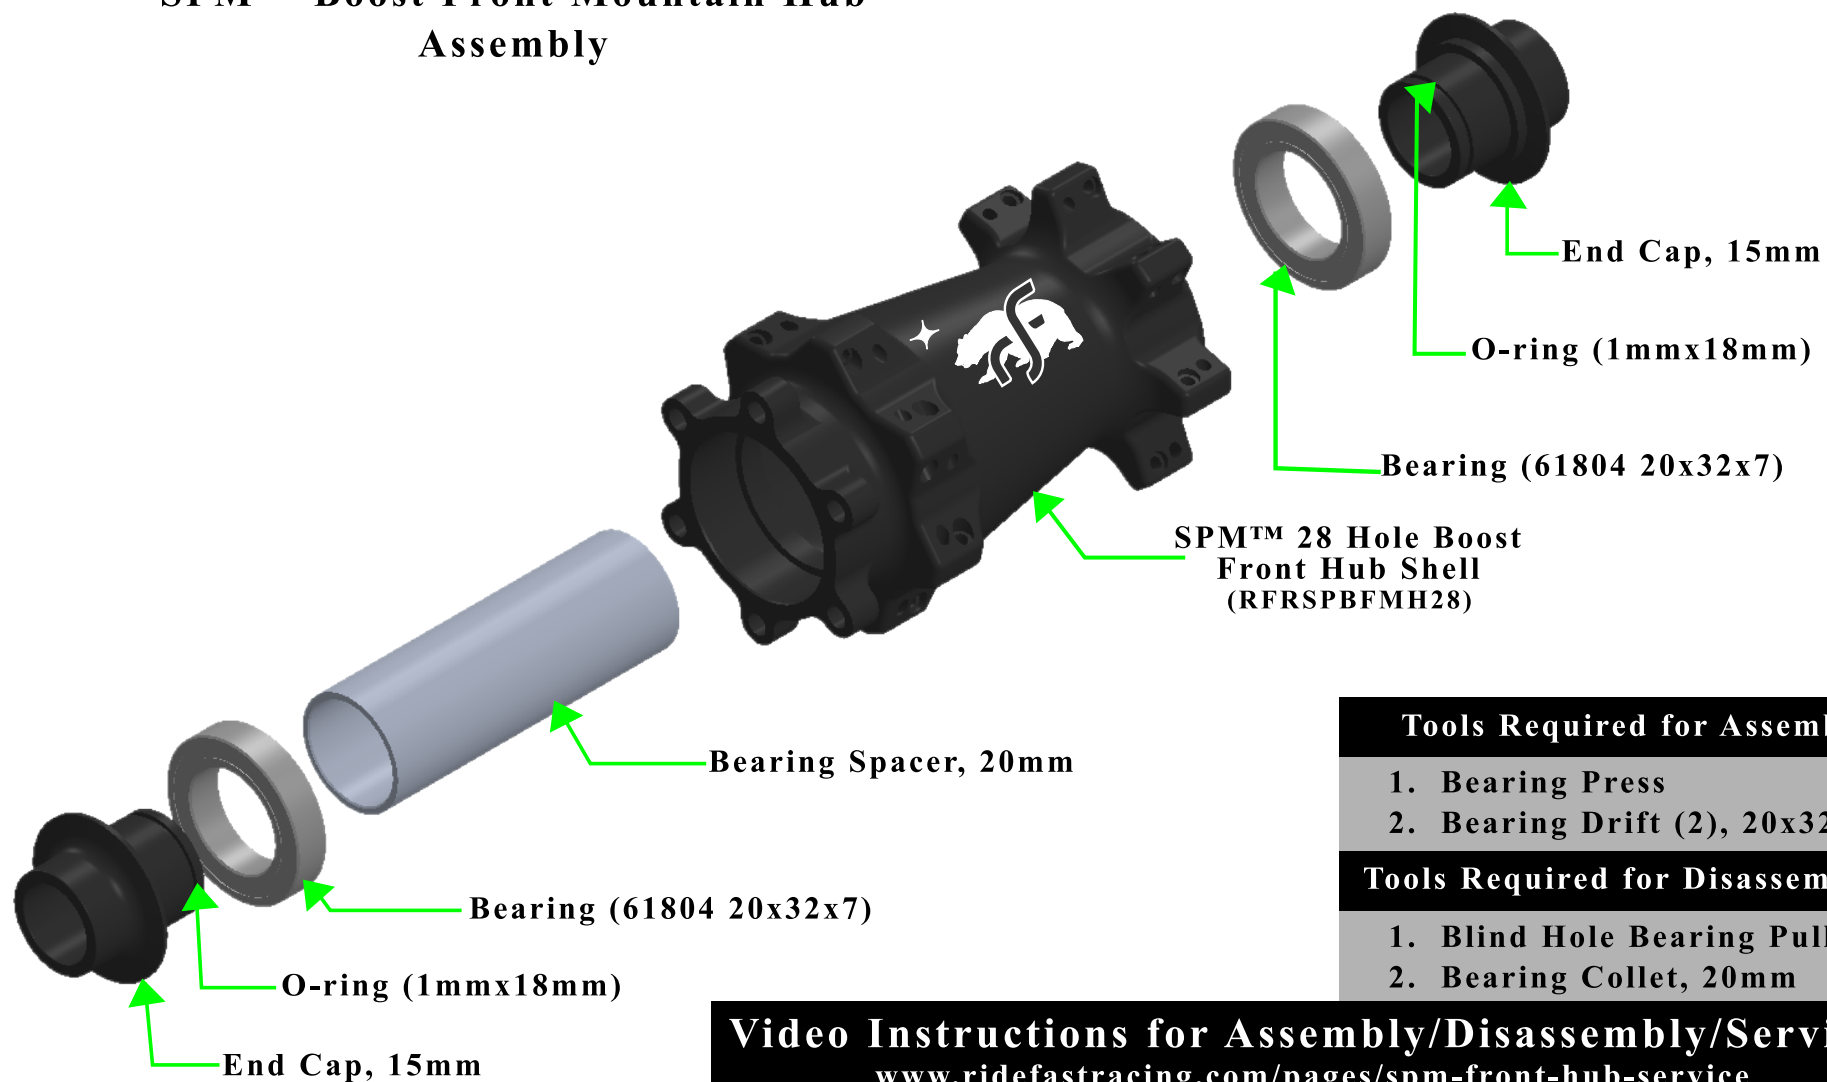

Tools Required for Assembly:

1. Bearing Press
2. Bearing Drift (2), 20x32

Tools Required for Disassembly:

1. Blind Hole Bearing Puller
2. Bearing Collet, 20mm

Video Instructions for Assembly/Disassembly/Service:
www.ridefastracing.com/pages/spm-front-hub-service