


# RIDEFAST

## SPSL™ Boost Front Mountain Hub Assembly

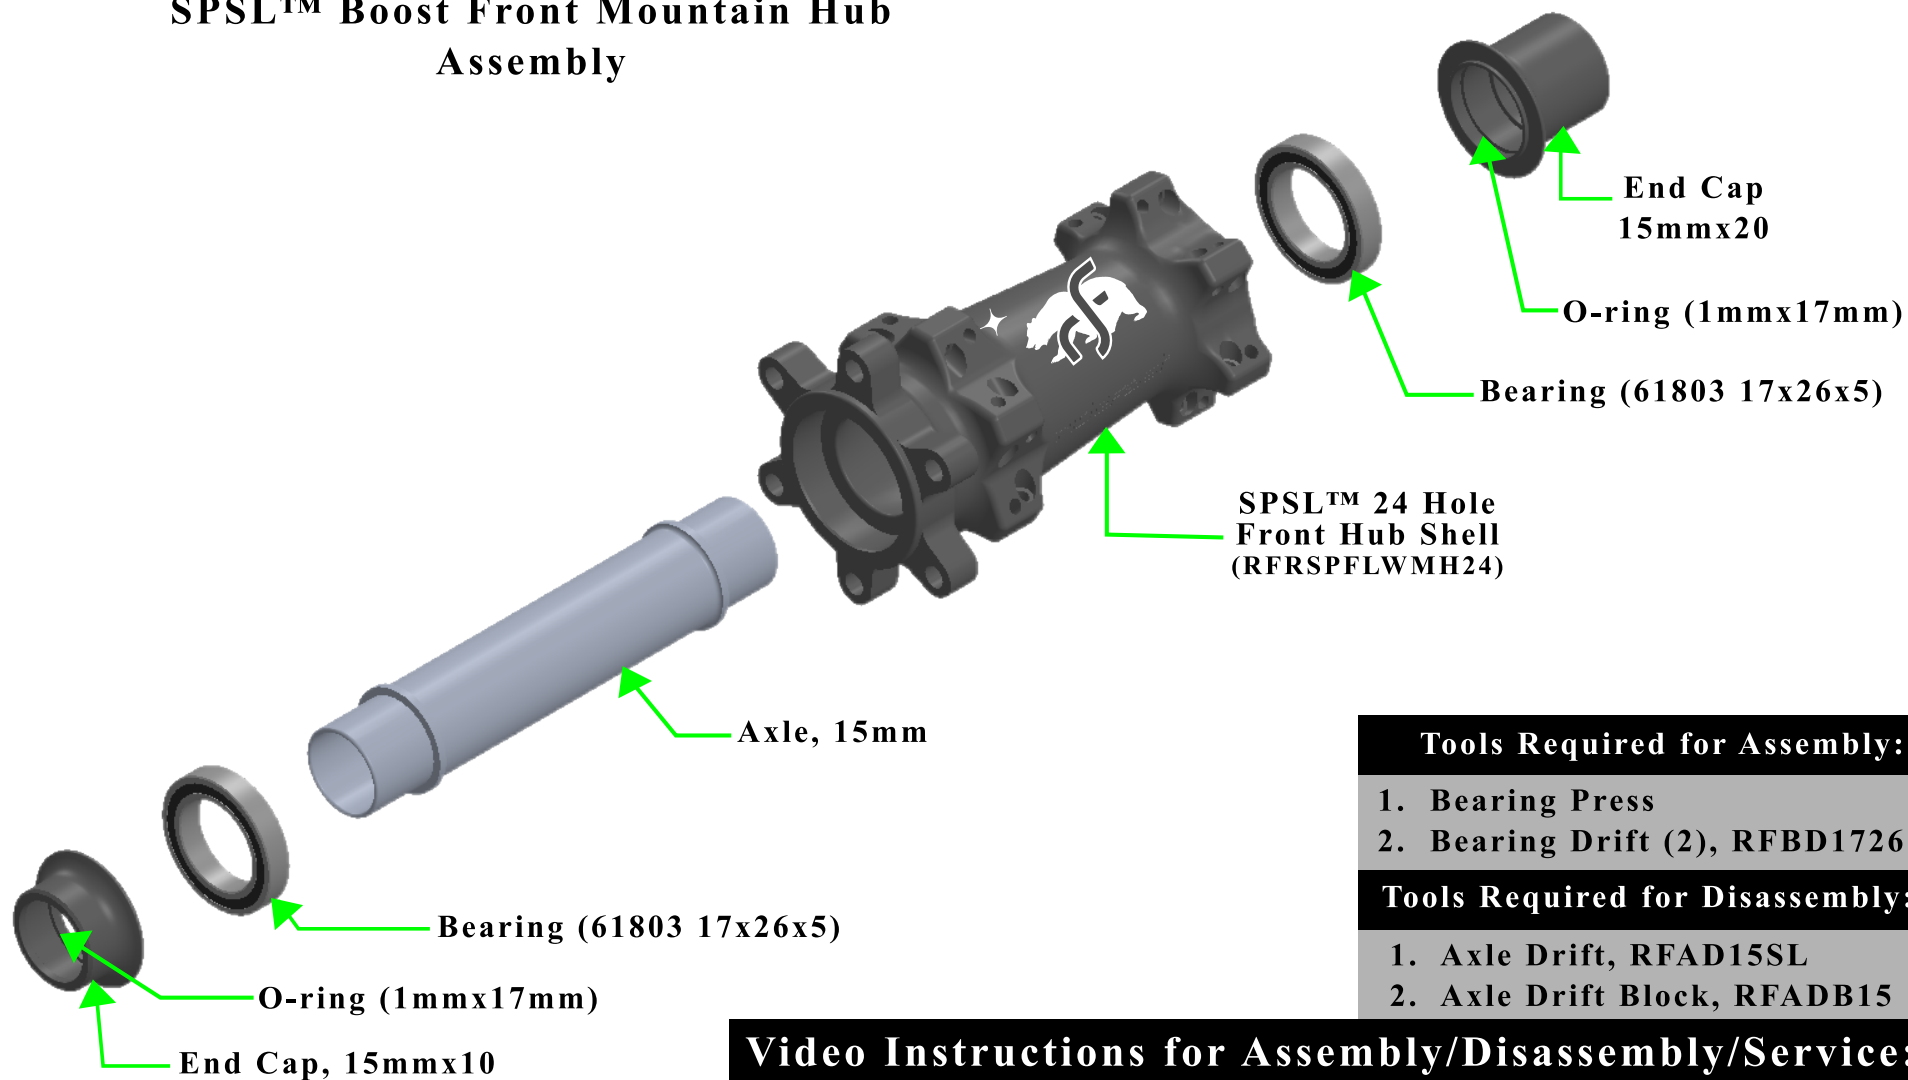

### Tools Required for Assembly:

1. Bearing Press
2. Bearing Drift (2), RFB1726

### Tools Required for Disassembly:

1. Axle Drift, RFAD15SL
2. Axle Drift Block, RFADB15

**Video Instructions for Assembly/Disassembly/Service:**  
[www.ridefastracing.com/pages/spsl-front-hub-service](http://www.ridefastracing.com/pages/spsl-front-hub-service)