





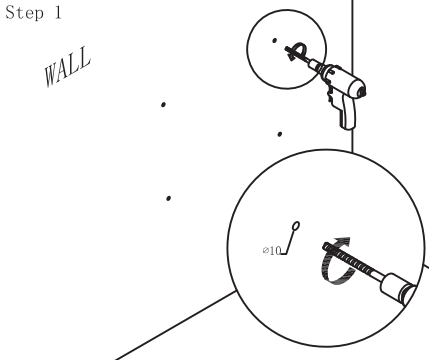
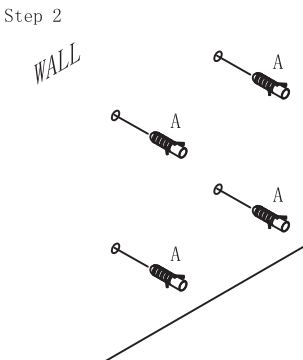
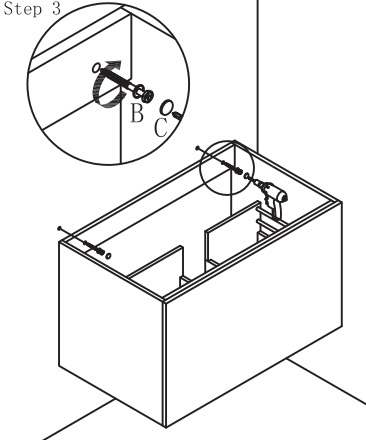
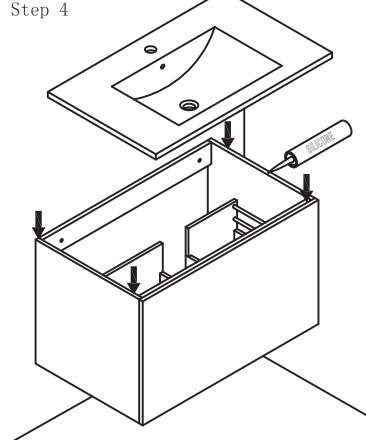
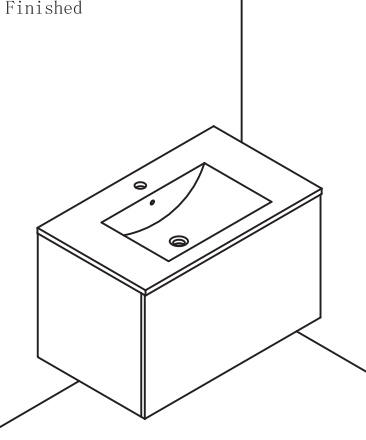
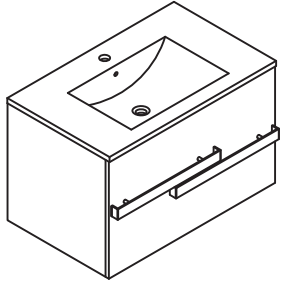
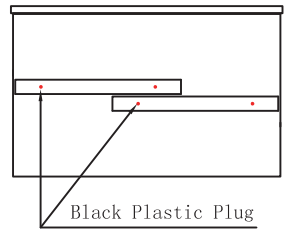
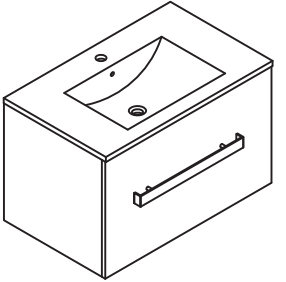
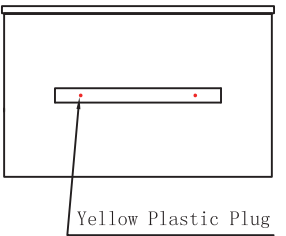
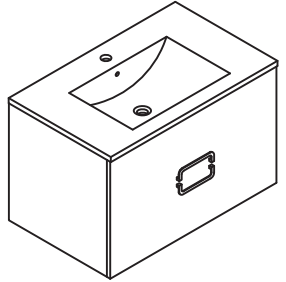
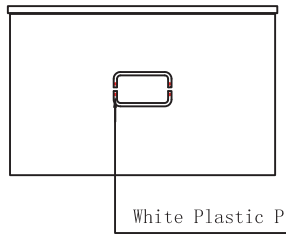


**021 Vanity**  
 Bathroom Cabinet  
 INSTALLATION GUIDE

**DOWELL**

Hardware			Tools	
No.	Draw	Qty		
A		4pcs	  	
B		4pcs		
C		4pcs		

<p>Step 1</p> 	<p>Step 2</p> 	
<p>Step 3</p> 	<p>Step 4</p> 	<p>Finished</p> 
<p>3070 Double Chrome Handle</p>   <p>Black Plastic Plug</p>	<p>3070 Chrome Handle</p>   <p>Yellow Plastic Plug</p>	<p>3071 U Shape Chrome Handle</p>   <p>White Plastic Plug</p>