

INSTALLATION INSTRUCTIONS

Share your pictures for a feature! or using #SwissMadison



www.swissmadison.com 1-434-MADISON 19 Stults Road, Dayton, NJ 08810

Back to Wall Toilet


MODEL: SUBLIME® SM-WT514


To ensure this product is installed properly, please read these instructions carefully before you begin. (Certain Installations may require professional help.)

▲ CAUTION: PRODUCT IS FRAGILE. TO AVOID BREAKAGE AND POSSIBLE INJURY HANDLE WITH CARE! NOTE: Pictures may not exactly define contour of china and components.

RECOMMENDED TOOLS AND MATERIALS

Putty Knife	Regular Screwdriver	Adjustable Wrench	Tape Measure	Sealant
Hacksaw	File	Closet Bolts	Level	Lubricant

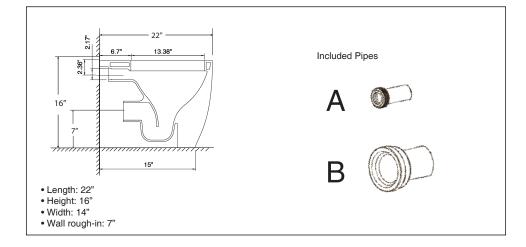

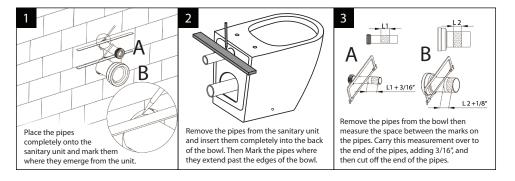

INSTALLATION INSTRUCTIONS

