

## light bar cover installation instructions

Thank you for your purchase of your new Light Bar Cover! The following are the instructions to apply with the best results and longevity of the product.

### Included

Your new light bar cover

Magnets for your light bar (additional magnets included)

Adhesive to apply to light bar

UV plastic adhesive pen for install

### Pre-installation

For best result have your light bar laying flat on a clean surface.

Before applying adhesive make sure that the light bar is free from any debris, dirt or dust.

The adhesive is a skin and eye irritant, please be in a well-ventilated area before applying.

Take off the light bar cover tape that has the holes in place and apply that tape to your light bar and use as a magnet placement template to make sure that magnets are being placed in correct location. (Image A)

(Image A)




### Installation

Your cover has magnets on the light bar cover and there are magnets included in the vile. Apply the magnets that are in the vile to the to your light bar making sure that the polarity is correct.

Place a little dab of the adhesive gel to the hole in the template on your light bar and then place the magnet in the correct location. (See image B)


(Image B)

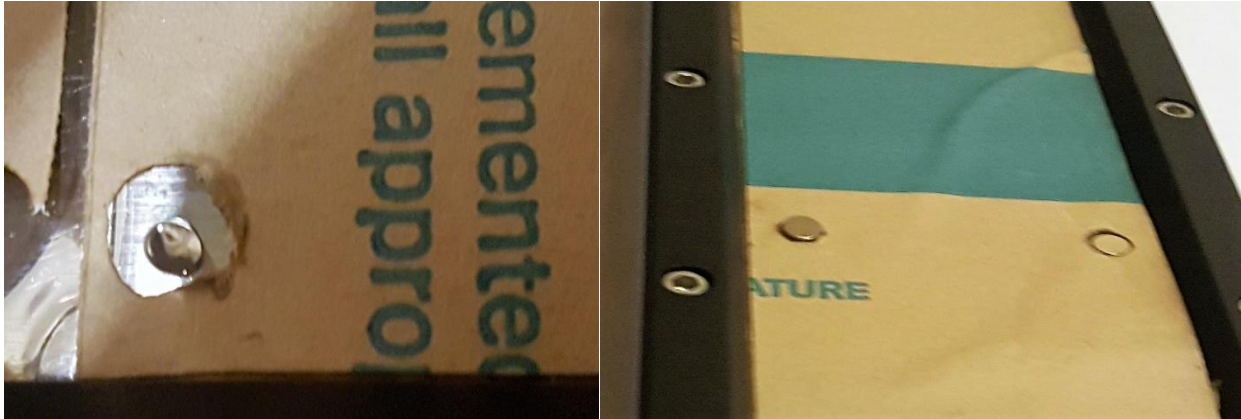

**PLEASE be patient with the drying of the adhesive!** If you do not put enough or rush the drying process of the adhesive to the magnet you will not have a strong bond and will soon see magnets sticking to the light bar or the lens cover.

Typical wait time to place the magnet on the adhesive is 15 minutes out of direct sunlight. Leave on longer for the best results. Slowly remove the adhesive template off your light bar as you go or once all the magnets are securely in place. This is how it should look when the magnets are on the LED light bar. (Image B)

(Image B)

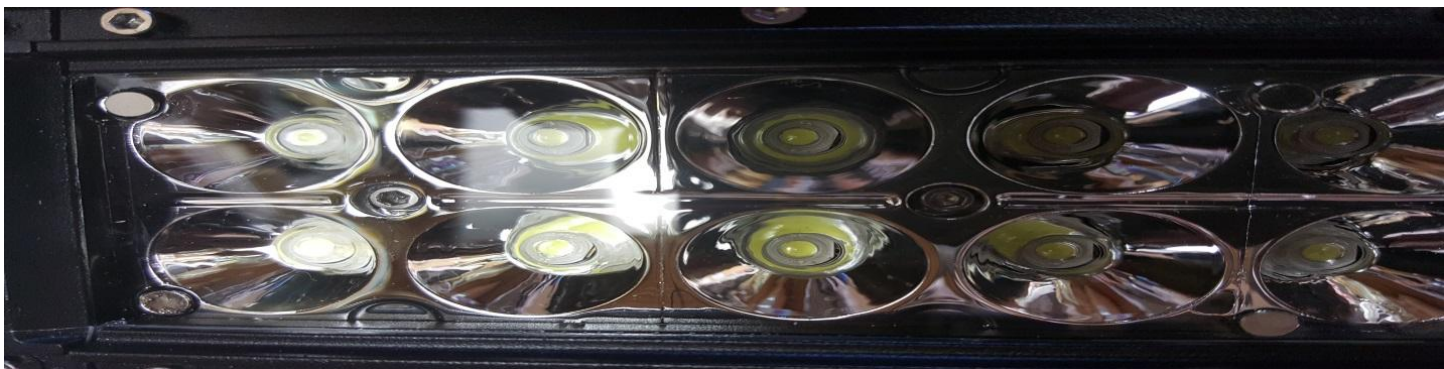

Once the magnets are in place you can use the included UV adhesive pen to draw a bead around the magnets to properly secure the magnets in place as seen in image C. (DO NOT LOOK DIRECTLY INTO THE UV LIGHT. IT CAN CAUSE EYE DAMAGE.) Once you draw the bead around the magnet use the UV light and shine the light about 2 inches away for about 10 seconds or until the clear plastic adhesive has hardened. The center or the "eye" of the UV light should be focused on the bead that was placed on the lens. To ensure that the bond is secure when you touch the adhesive it will not be tacky. It will be smooth to the touch without any smearing. You

can apply multiple layers of the UV adhesive just ensure that each layer has been hardened and fully bonded before the next layer has been applied. There is a Youtube Video you can watch showing the install process. Go to Light Bar Covers Unlimited channel on youtube or paste on the link below.

<https://youtu.be/chQ6Od4YFCM>

(Image C)



After the magnets have been properly placed on the LED light bar you can take off the protective cover on the light bar cover before use. (Image D)

(Image D)



For longevity, periodically check your cover for dirt and debris on the light bar cover magnets. Please feel free to reach out to us with any questions. If you could also please send any feedback good or bad to our email, [lightbarcoversunlimited@gmail.com](mailto:lightbarcoversunlimited@gmail.com) and if you wouldn't mind please send a picture of your new light bar cover to our email or our Instagram page [@lightbarcoversunlimited](https://www.instagram.com/lightbarcoversunlimited)

