
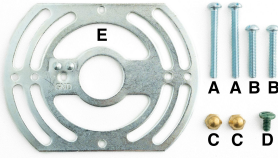
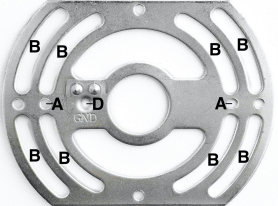


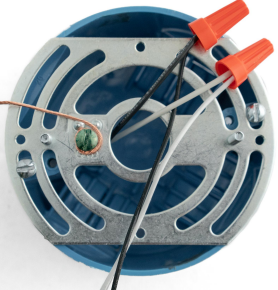


If You Ordered a Raw Brass Fixture

All raw brass will age/darken over time. If you wish to keep your fixture “like new” you can clean it periodically with Brasso. When installing, **WE DO RECOMMEND WEARING GLOVES**. The raw brass will tarnish if it comes in contact with the oils on your skin.

Installation Instructions

	<p>1. Unpack your mounting hardware kit. Your kit should include:</p> <p>A. Two 1½” Screws B. Two 1” Screws C. Two Acorn Nuts D. Grounding Screw E. Mounting Plate</p>
	<p>2. Attach the ground screw (D) to Hole D</p> <p>3. Starting from the back of the mounting plate(E), thread the 1½” screws(A) into hole (A). (Screw heads of 1½” (A) screws will be on the back side of the plate) Thread the screws about ¾ of the way through the plate. Do not tighten the screws.</p>
	<p>4. With the plate facing forward, guide the black and white wires from inside your electrical box through the inside hole of the mounting plate.</p> <p>5. Check your fixture to see if the plate needs to be mounted vertically or horizontally. Attach the plate to the electrical box using 1” screws(B) and adjustable hole(B). Choose the hole that is best suited for your electrical box style and position. Adjust the crossbar until the screws coming out of hole A are level.</p> <p>6. Attach the copper ground wire on your light fixture and the electrical box ground wire (if applicable) to the ground screw (D).</p> <p>7. Using wire nuts (not included) attach the black and white wires to the corresponding wires in the electrical box. Guide the wires and wire nuts through the center hole and into the electrical box.</p>
	<p>8. Place the light fixture over the electrical box with the 1½” screws sticking out of the canopy backplate holes. Thread the Acorn nuts(C) onto the screws. Continue turning until any extra screw length is pushed into the electrical box and the fixture is tightly secured.</p>

