# urban ambiance

### Installation Instructions:

Steps

E, F, G

Step

C & D

Step

A & B

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire strippers, electrical tape, safety glasses

Bulb Recommended: Candelabra Base 60W Maximum

Estimated Assembly Time: 30-40 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagram below to be sure all parts are present. If any parts are missing or damaged, do not assemble, install or operate the fixture. Contact customer service for replacement

## 🛆 Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

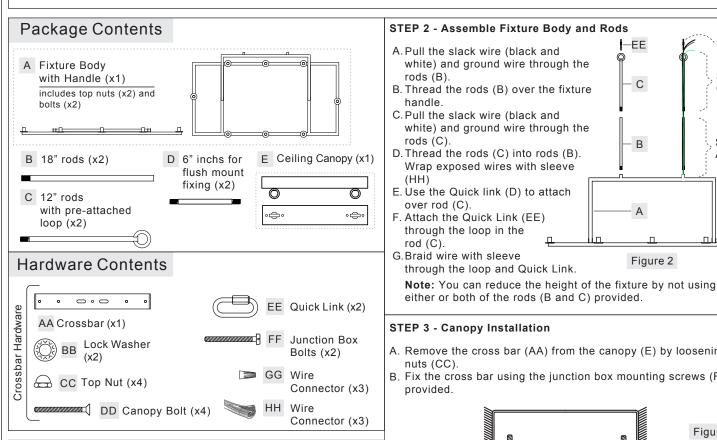


### STEP 1 - Assemble Fixture **Body and Fixture Handle** together

- A. Open the bolt and top nut (A) from the fixture body.
- B. Pull the handle up 90 degrees over the fixture body.
- C. Pass the bolt from the fixture handle through the clips in the fixture body.
- D. Tighten the bolts on the fixture handle with the top nuts.



- A. Remove the cross bar (AA) from the canopy (E) by loosening the
- B. Fix the cross bar using the junction box mounting screws (FF)

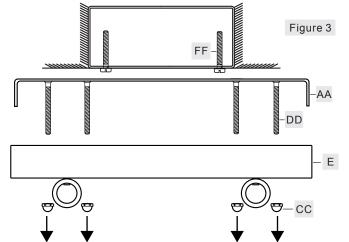


urban ambiance

www.urbanambiance.com


# STEP 4 - Install Fixture Attachment to Ceiling

- A. Attach the canopy to the fixture handle through the Quick Links (EE).
- B. Pass the slack wire and ground wire through the loop in the canopy
- C. Lift the fixture body with canopy up towards the cross bar which was attached in Step 3.

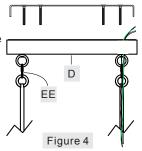

#### STEP 5 - Wire Connections

A. Use the included wire connectors to make all the wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff connected wires into outlet box. See Figure 6.



B. Pass the bolt (DD) from the cross bar through the hole in the canopy and tighten using the top nuts (CC).





Figure 6


#### **Optional: Flush Mount Installation**

A. Pull the slack wire and ground wire and pass through rod (E).


B. Thread rods (E) over the handle of the fixture body (A).

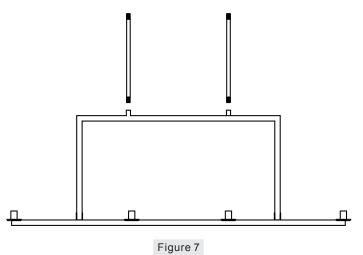

C. Unscrew the loops from the canopy (D) (Figure 8) and thread the other end of rods (E) directly to the canopy (D) (Figure 9).

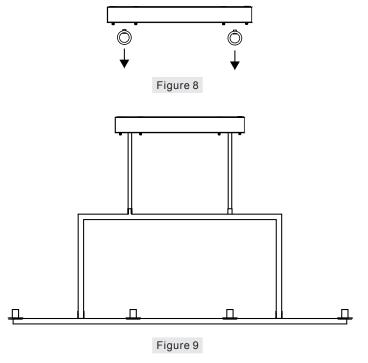

- D. Lift the fixture with canopy attached towards the cross bar already attached in Step 2.
- E. Pass the bolt (DD) from the cross bar (AA) through the hole in the canopy and tighten using the top nuts (CC).

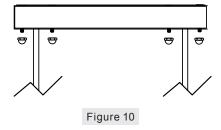

### urban ambiance

www.urbanambiance.com