
urban ambiance

Installation Instructions: UHP1350

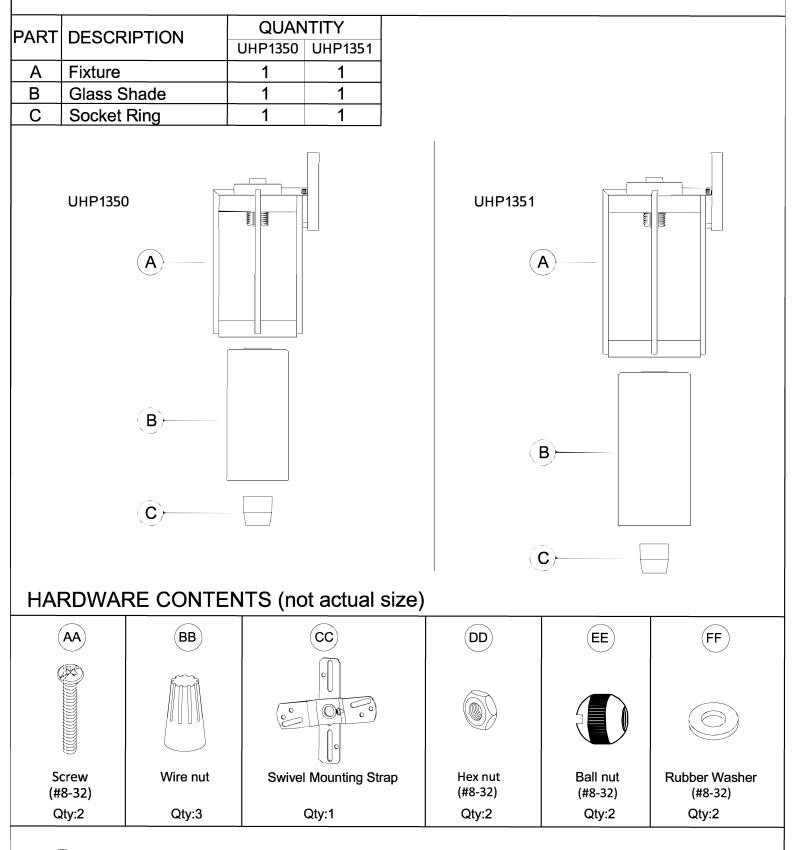

6

Questions?

Call our Customer Care Team at 1-855-303-4229

urban ambiance

www.urbanambiance.com

Safety Information

Please read and understand this entire manual before attempting to assemble, operate or install the product.

CAUTION: Read instructions carefully and turn electricity off at main circuit breaker panel before beginning installation. CAUTION: Risk of fire. Min. 90°C supply conductors. Consult a qualified electrician to ensure correct branch circuit conductor. WARNING: If any Special Control Devices are used with this fixture, follow instructions carefully to assure full compliance with N.E.C. requirements. If there are any questions, contact a qualified electrical contractor.

CAUTION: All glass is fragile. Use care when handling glass shades and bulbs.

WARNING - To comply with the National Electrical Code and Underwriters Laboratories requirements, when installed outdoors, or in wet locations, the edge of the wall plate coming in contact with the mounting surface, must be sealed with a latex waterproof caulking to prevent water from entering the outlet box.

Preparation

- 1. Before beginning installation, make sure all parts are included using the contents diagrams from page 1. If any part is missing or damaged, do not attempt to assemble, install or operate the product.
- 2. Estimated assembly time: 30 minutes.
- 3. Tools required for assembly (not included): Phillips screwdriver, pliers, wire stripper, safety glasses, electrical tape, ladder.

Care and Maintenance

Shut off main power supply before cleaning product or changing light bulbs. To clean, wipe with damp cloth. Do not use abrasive cleaners or cleaners that contain alcohol.


Assembly Instructions

	1. Screw screw (AA) onto swivel mounting strap (CC) and use hex nut (DD) to secure it tight.		
	Hardware Used		
	(AA) Screw		X2
	CC Swivel Mounting Strap		X1
	DD Hex nut		X2
2	2. Attach assembled parts from Step mounting screws supplied with the ou (not included).) the

Assembly Instructions

3. Strip 3/8" of insulation from the electrical wire ends. Using wire nuts (BB), connect white fixture wire to the white supply wire from the outlet box; connect the black fixture wire to the black supply wire.


Connect the fixture ground wire and supply ground wire using a wire nut or by fastening to the ground screw on the swivel mounting strap. Push all wire connections into the outlet box.

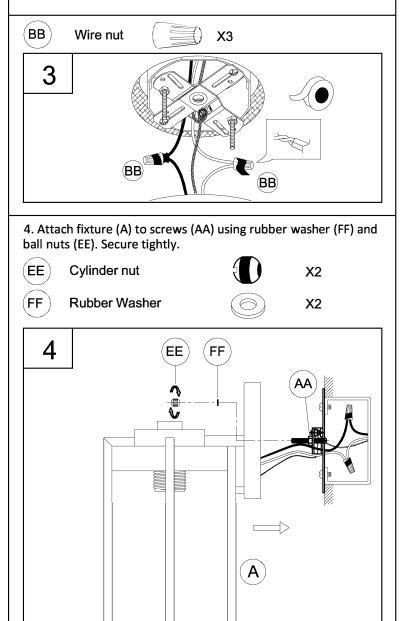

5. Attach glass shade (B) into fixture (A) using socket ring (C) to secure it tight.

Screw lamp (not included) into fixture socket.

Use 60-watt MAX incandescent medium base lamp, SBCFL or SBLED.

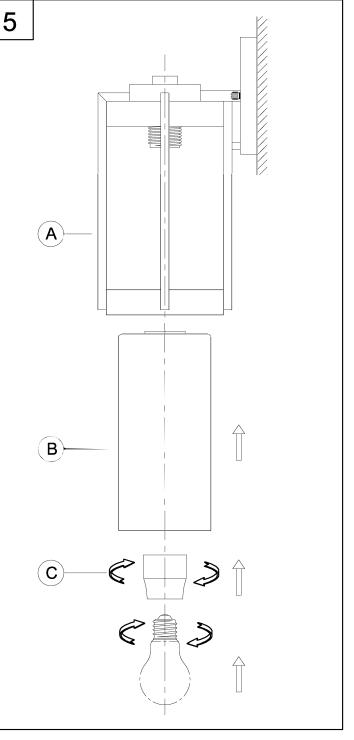

Questions? Call our Customer Care Team at 1-855-303-4229

Urban ambiance www.urbanambiance.com