urban ambiance

Installation Instructions: UQL1202

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (3) B10 Candelabra Base bulb 60W Maximum.

Estimated Assembly Time: 20-30 minutes

Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.


Fixture can only be mounted in the direction indicated on page 2.

Marnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.


Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

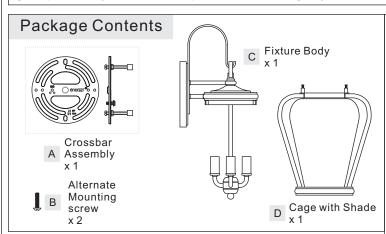

STEP 1 - Attach Cage with Shade to Fixture Body

A. Remove Lock Screws from top edge of Cage with Shade (D).


B. Insert shades inside of shade. Align holes on fixture hood to mounting holes on top edge of the cage. Secure them together with removed Lock Screws. Tighten until snug with screwdrivers

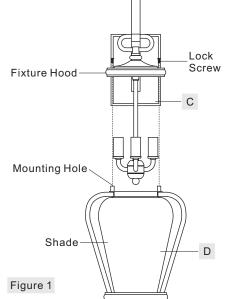

STEP 2 - Install Crossbar Assembly


A. Pass the supply wires through the Crossbar Assembly (A). Attach the Crossbar Assembly (A) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.

Note: Use the Alternate Shorter Mounting Screw (B) if your installation requires a shorter mounting screw.

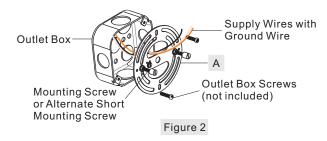

STEP 3 - Test Fitting Backplate to Crossbar Assembly

A. Remove mounting balls from the Crossbar Assembly (A). Fit the backplate on Fixture Body (C) to the Crossbar Assembly (A) and secure with mounting balls. Note: The backplate on Fixture Body (C) should be snug against the wall and the mounting balls. If not, adjust the length of the mounting screw or alternate short mounting screw on the Crossbar Assembly (A) by unscrewing the preassembled hex nut and lock washer and then screwing the mounting screws or alternate short mounting screws in or out of the crossbar until the correct length is achieved. Once the backplate on Fixture Body (C) is secure, remove the mounting ball and Fixture Body (C) and proceed to Step 4.

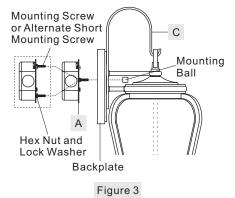

urban ambiance

www.urbanambiance.com

STEP 4 - Wire Connections A. Use standard wire connectors (not included) to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box. White wire White wire from supply from fixture Black wire Black wire from from fixture supply (or Red) Ground wire Ground wire Figure 4 from supply from fixture

STEP 5 - Install Fixture Body

A. Carefully tuck all wires into the outlet box and position the backplate of Fixture Body (C) over the outlet box. Align the holes in the backplate with the mounting screws or alternate short mounting screws. Place caulk (not supplied) into the previously removed mounting balls and then attach Fixture Body (C) using mounting balls. Hand tighten until snug.

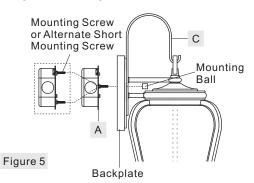


Figure 6


Replace Shade

${\bf STEP~1-Remove~Shade~Assembly}$

A. Remove Bulbs from Sockets.

B. Remove Cage with Shade from Fixture
Body by unscrewing Lock Screws on the

Body by unscrewing Lock Scre Fixture Hood

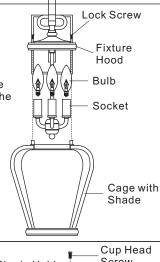


STEP 2 - Replace Shade

Quoizel recommends two people for this step.

- A. Remove two Side Arms by unscrewing Cup Head Screws on the top and bottom of Shade Assembly.
- B. With one person hold fixed Side Arms, another person replace the Shade inside of the Side Arms.
- C. Reassemble removed Side Arms back onto the Shade Assembly and secure with Cup Head Screws. Tighten until snug.

SKU: UQL1202

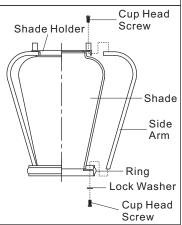

(3) 60W Candelabra

Base Bulbs


(Not Supplied)

REQ.

STEP 6 - Install Bulb

A. This fixture uses candelabra bulb with standard screw base. Maximum 60 watts.

B. Insert bulb and screw snugly into place.

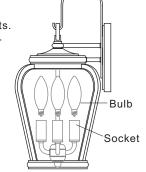



STEP 7 - Apply Silicone Sealer

A. Make sure exterior wall surface and fixture backplate are free of dirt before applying caulk. Using exterior grade caulk, caulk over top of backplate and down other side. Do not caulk bottom of fixture backplate to ensure proper moisture drainage.

Your fixture is now assembled and ready to use. Enjoy!

Figure 7

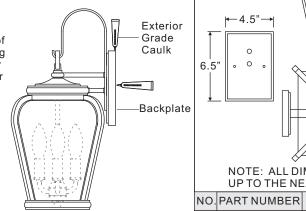

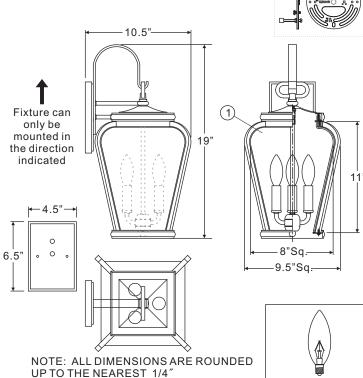

REPLACEMENT PART

SHADE

urban ambiance

UQL1202SH

www.urbanambiance.com