
urban ambiance

Installation Instructions: UQL1360

Tools Required

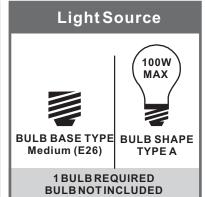

$oldsymbol{\Delta}$ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

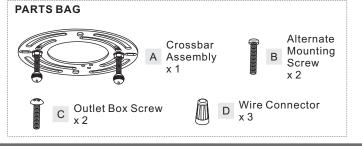



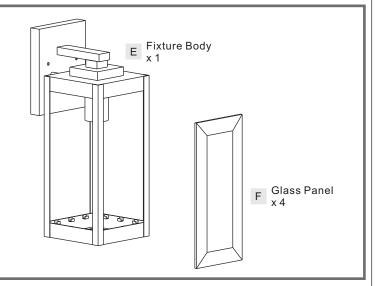



Table of Contents

Alternate



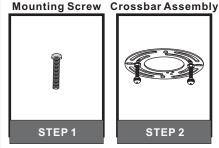
















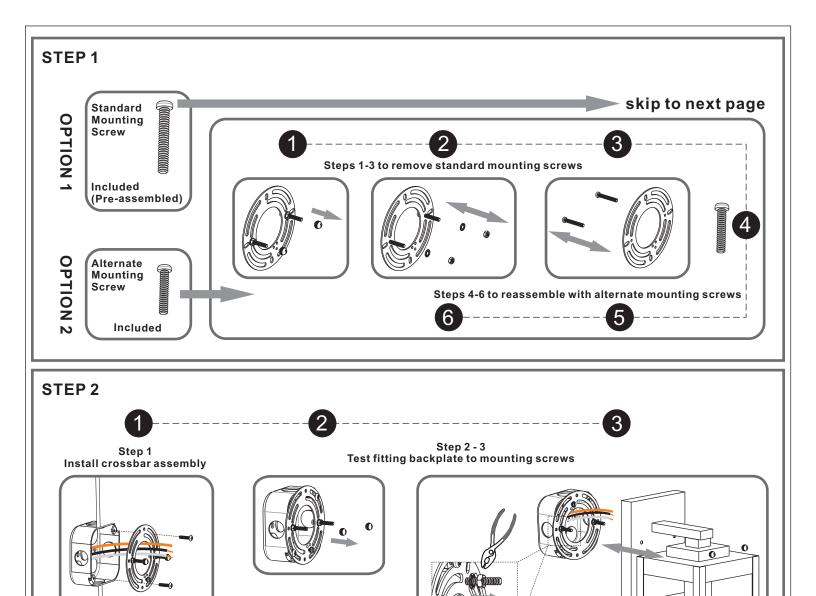

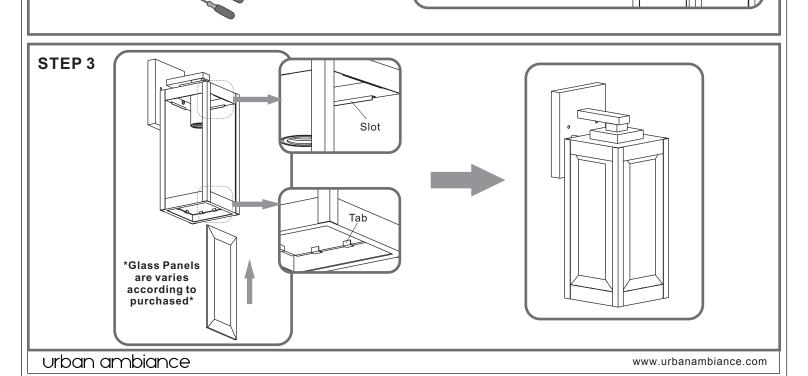

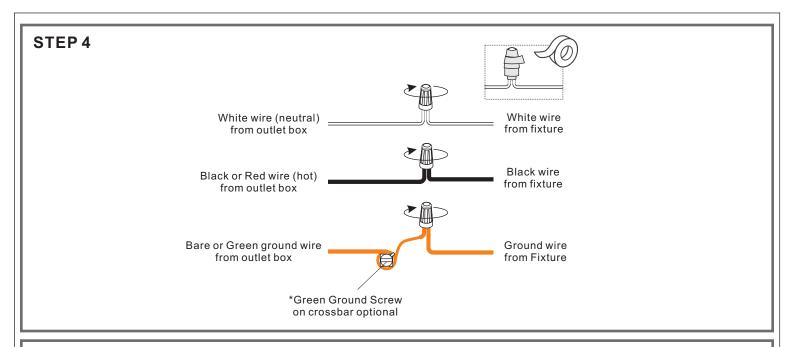

STEP 5

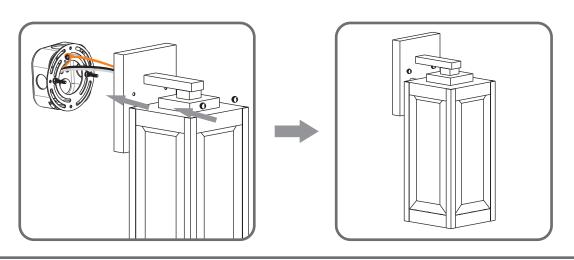

STEP 6

