

urban ambiance

Installation Instructions: UQL1636

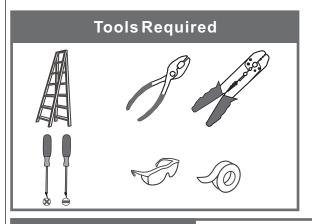


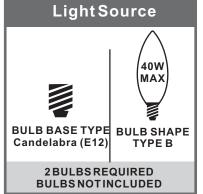

⚠ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.



Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

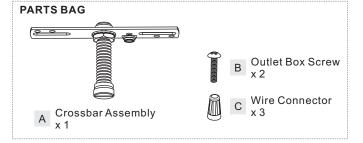



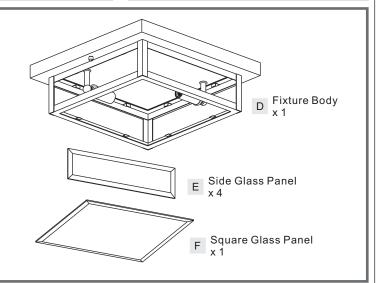


Table of Contents







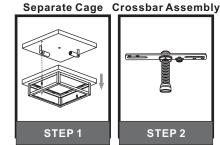












STEP 1

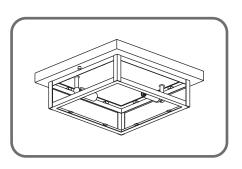



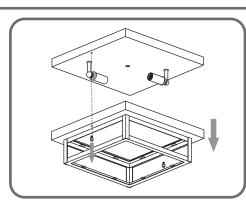

urban ambiance

www.urbanambiance.com

