urban ambiance

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses. **Light Source:** (4) Medium Base Decorative Filament 60W bulb (provided), Maximum 100W, Alternate bulb (4) 23W CFL Maximum. **Estimated Assembly Time:** 30-45 minutes


Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

Δ Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.

These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

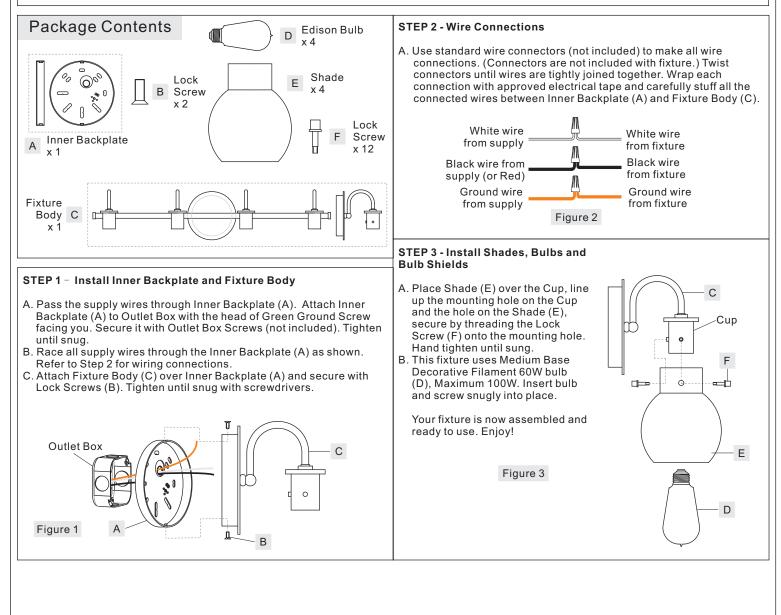

urban ambiance

www.urbanambiance.com

SKU: UQL2042	
	8.75" 6" 6" 2
	← 7"
(4)Medium Base NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NE (4)Medium Base NO. PART NUMBER REPLACEMENT PART DESCRIPTION Filament 60W 1 UQL2042SH GLASS SHADE bulbs (provided), 2 IUQL2042BU VINTAGE BULB	AREST 1/4″ QTY. 4 4
Urban ambiance www.urbanambiance.com	
2of2	