# urban ambiance

# Installation Instructions: UQL2661

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (2)A19 Medium Base Bulbs 100W Maximum or

(2) Medium Base Vintage bulbs are recommended but not supplied.

Estimated Assembly Time: 30-45 minutes


**Preparation:** Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

## **Marnings and Cautions**

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt.


These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation.

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

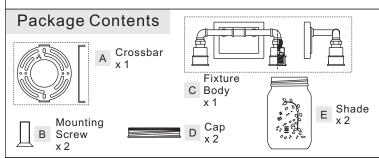


#### STEP 1 - Install Crossbar and Fixture Body

- A. Pass the supply wires through the Crossbar (A). Attach the Crossbar (A) to Outlet Box with the head of Green Ground Screw facing you. Secure it with Outlet Box Screws (not included). Tighten until snug.
- B. Refer to Step 2 for wiring connections.
- C. Attach the Fixture
  Body (C) over the
  Crossbar (A) and
  secure with Mounting
  Screws (B). Tighten
  until snug with
  screwdrivers.

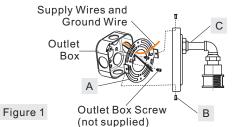

### **STEP 2 - Wire Connections**


A. Use standard wire connectors (not included) to make all wire Connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires between Crossbar (A) and



#### STEP 3 - Install Bulb

A. Insert bulb onto socket and screw snugly into place.

Your fixture is now assembled and ready to use. Enjoy!




### **Installation Optional Shade**

- A. Remove Socket Collar from Fixture Body (C).
- B. Place Cap (D) over the Socket, secure by threading Socket Collar onto Socket. Hand tighten until sung.
- C. Insert bulb onto socket and screw snugly into place.
- D. Place the Optional Shade (E) over the bulb and thread it onto the Cap (D) properly.


Your fixture is now assembled and ready to use. Enjoy!

Figure 4

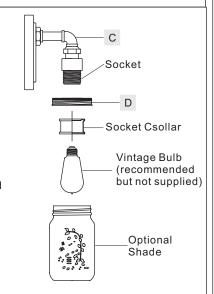

SKU: UQL2661

NOTE: ALL DIMENSIONS ARE ROUNDED UP TO THE NEAREST 1/4"

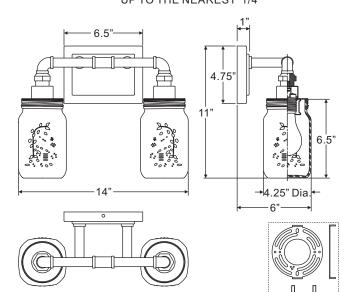

## urban ambiance

www.urbanambiance.com