


Installation Instructions: UQL3181	urban ambiance
	Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.
	BulbRecommended: (4)MediumBase100WMaximum(Supplied) EstimatedAssemblyTime:20-30minutes
	Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams below to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.
	s and Cautions
	rircuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt

Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal. Do not subject glass parts to any shock while in operation or shattering may result.

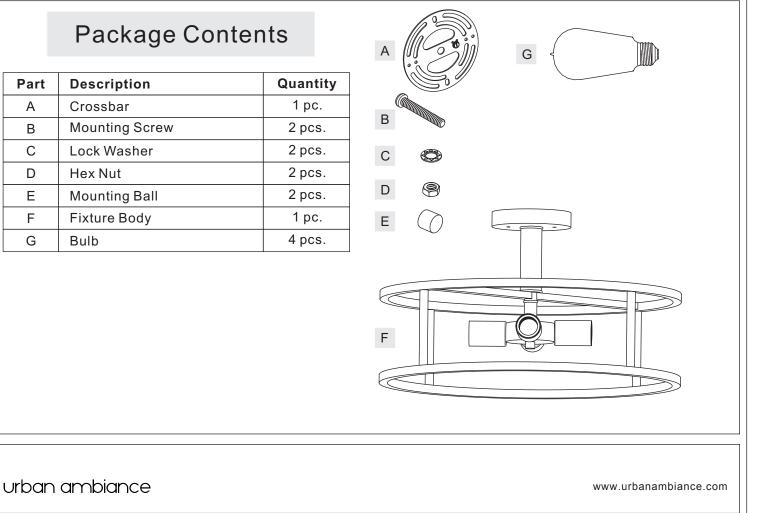


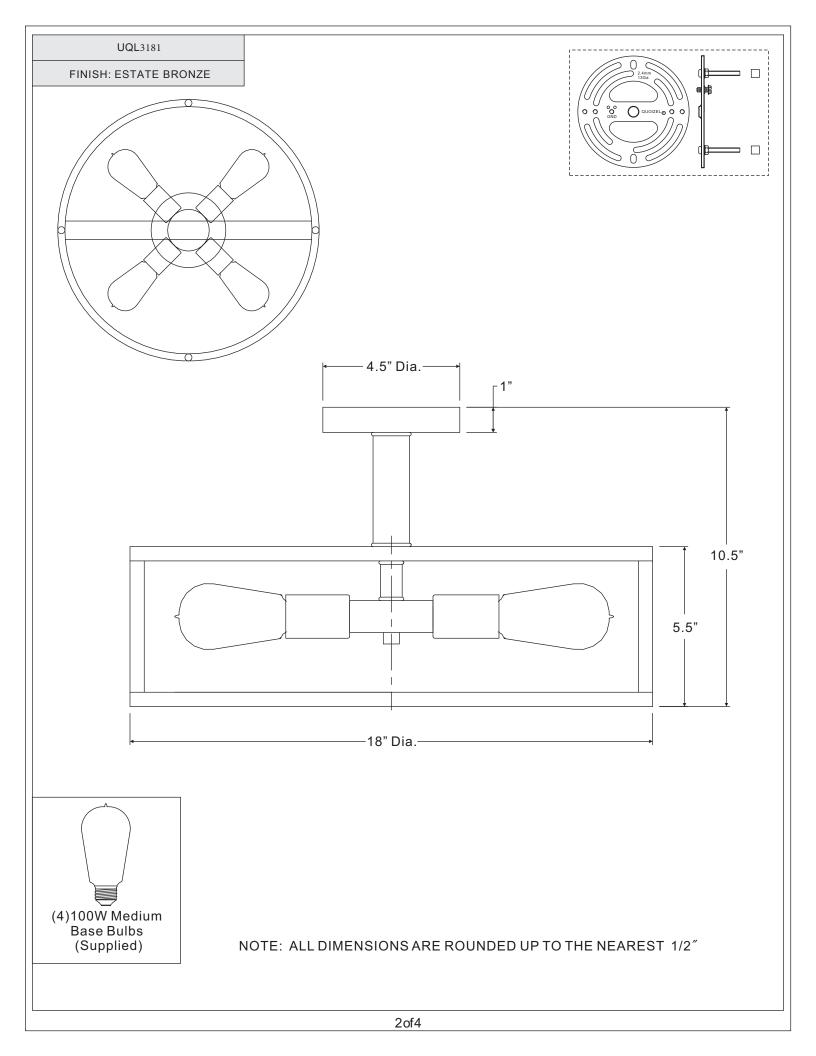

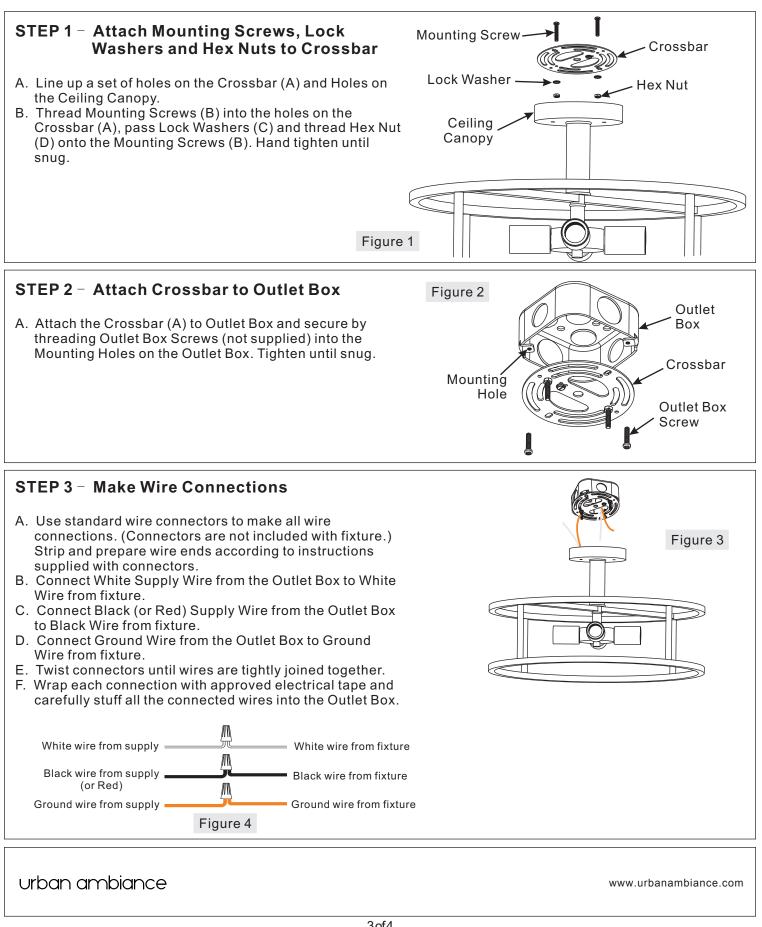



urban ambiance

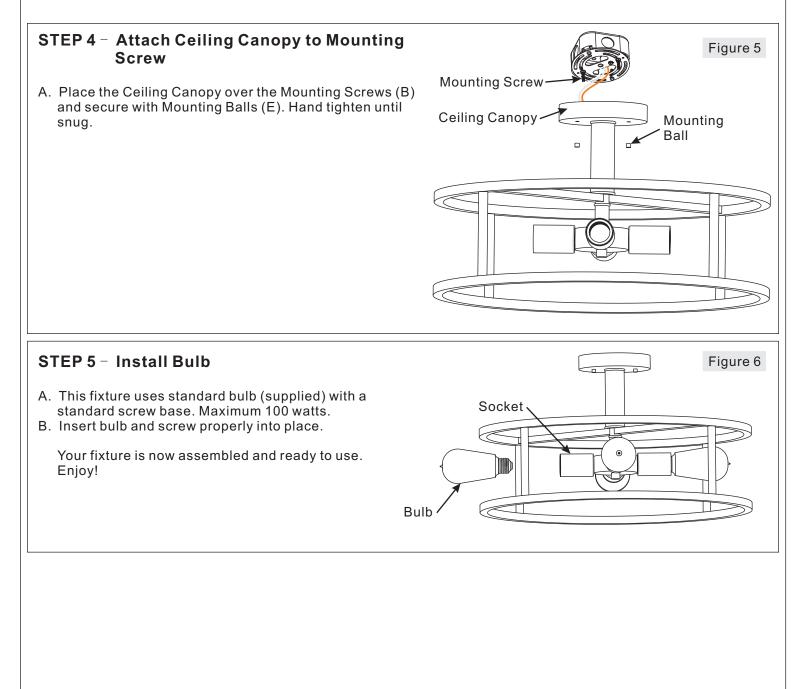

urban ambiance

www.urbanambiance.com