

urban ambiance

Installation Instructions: UQL3460

Tools Required

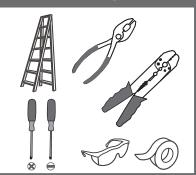

Light Source

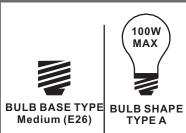

4BULBS REQUIRED **BULBS NOTINCLUDED**

$oldsymbol{\Delta}$ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG




Inner A Backplate








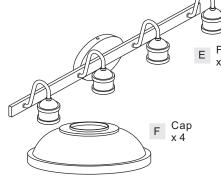



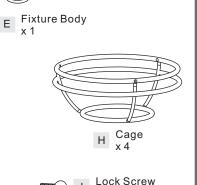



Lock Screw

Table of **Contents**




STEP 1






Cap







STEP 1

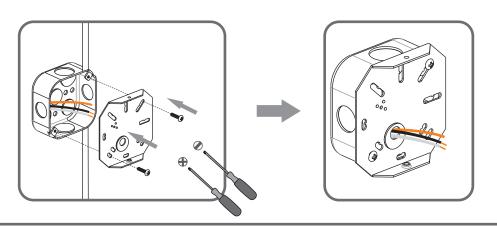


White wire (neutral) from outlet box Black or Red wire (hot) from outlet box Black wire from fixture




*Green Ground Screw on crossbar optional


STEP 3

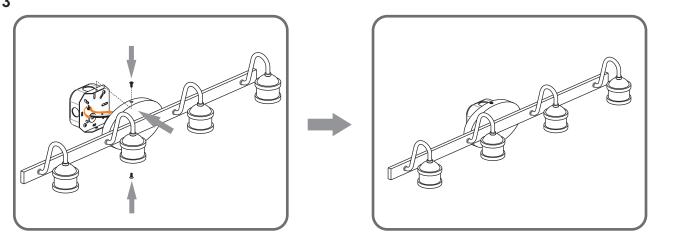




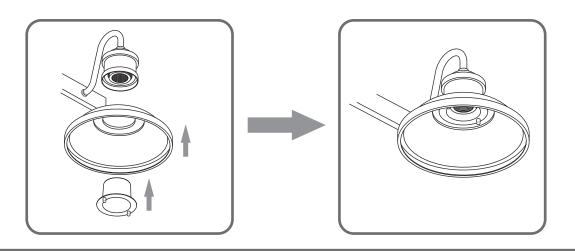


STEP 5

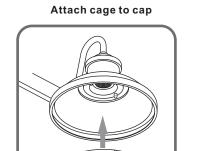




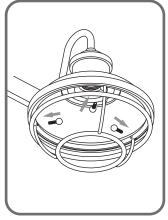


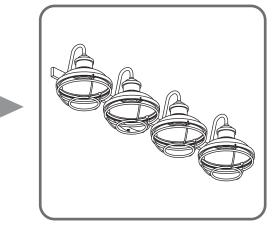

STEP 6

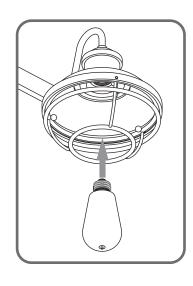



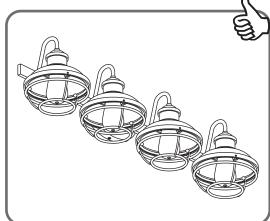

urban ambiance

www.urbanambiance.com