

## urban ambiance

#### Installation Instructions: UQL3490

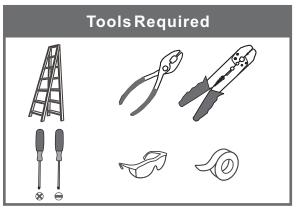


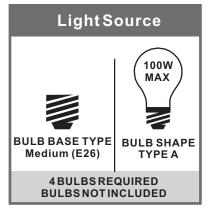


#### **△** Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

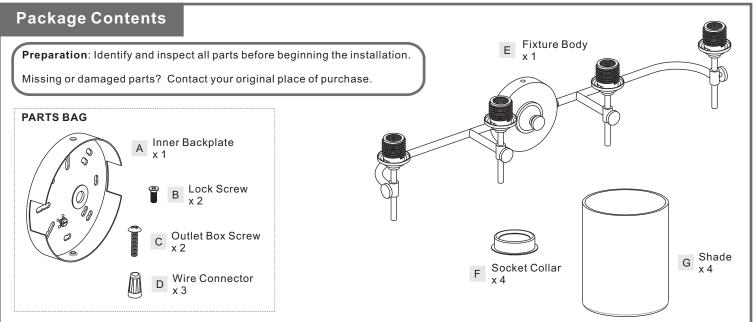


# Table of Contents















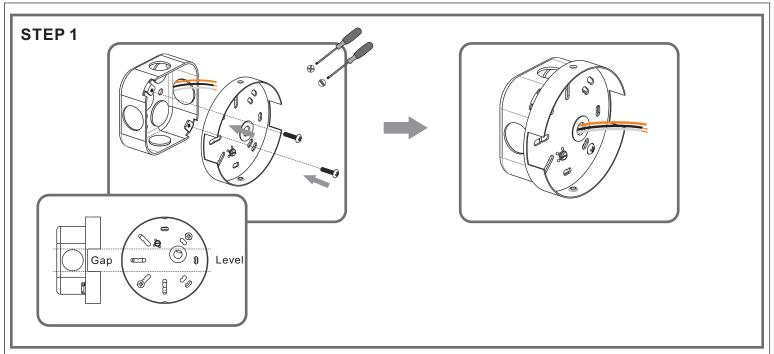

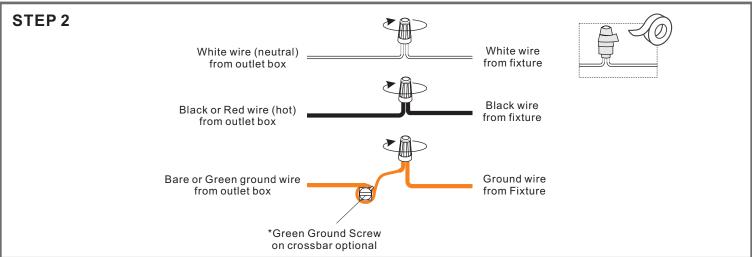

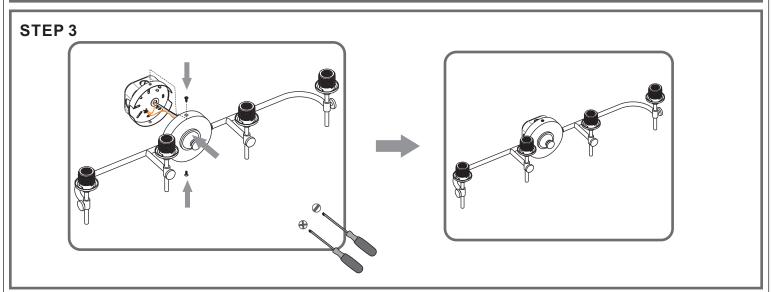

### STEP 4

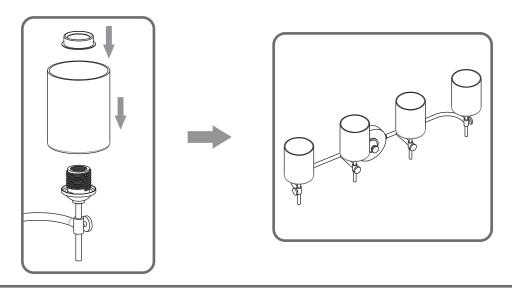

### STEP 5

