

urban ambiance

Installation Instructions: UQL3491



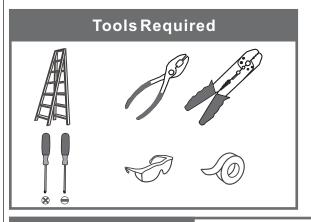

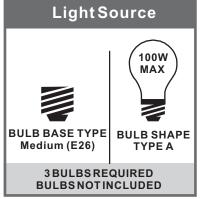


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.



Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

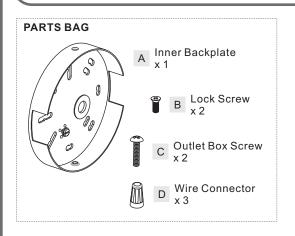




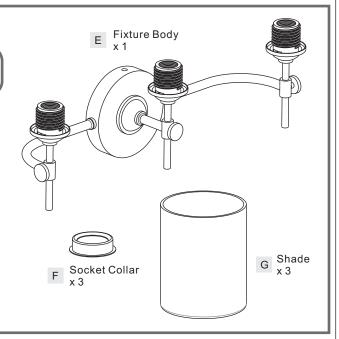


Table of Contents















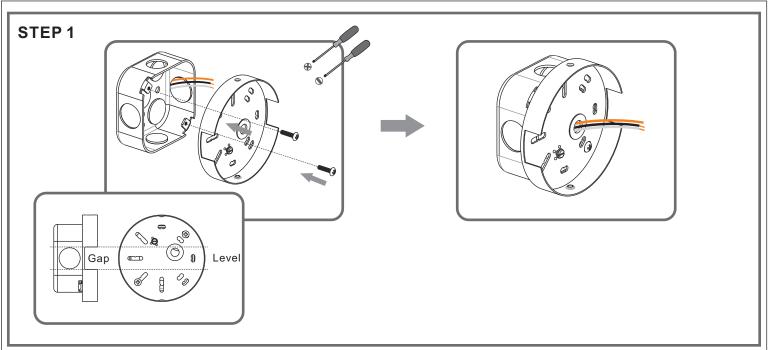

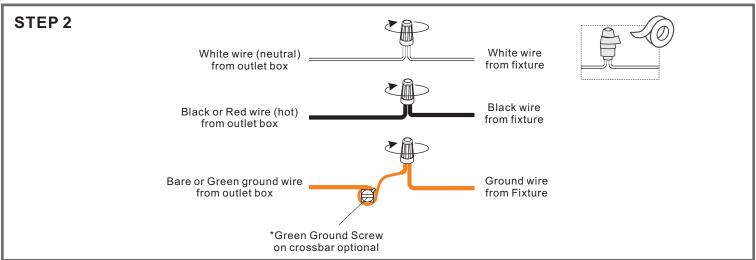

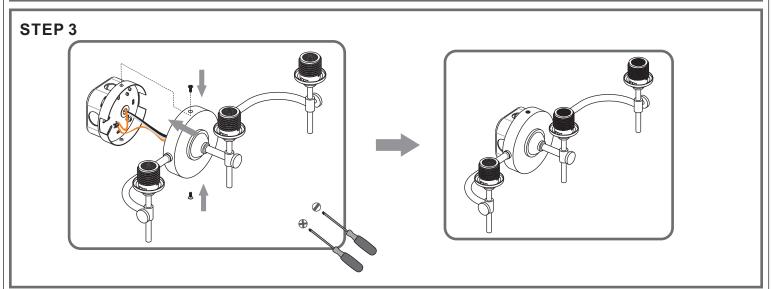

STEP 4

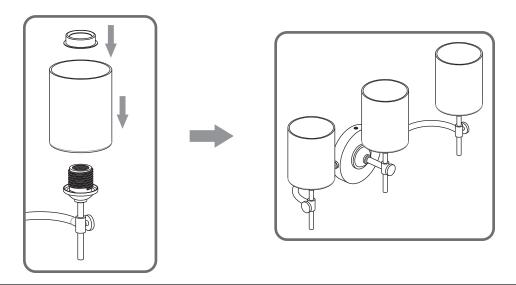

STEP 5

