

urban ambiance

Installation Instructions: UQL3502

Tools Required

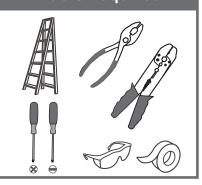

Light Source

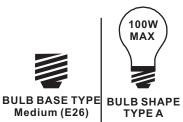

2BULBS REQUIRED **BULBS NOTINCLUDED**

$oldsymbol{\Delta}$ Warnings and Cautions

Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.


Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

PARTS BAG




Crossbar A Assembly







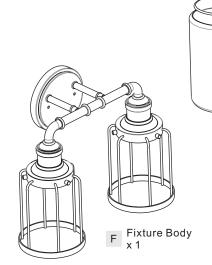

E Shade x 2

Table of **Contents**


Alternate




Crossbar Assembly




STEP 2




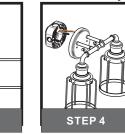


Fixture Body




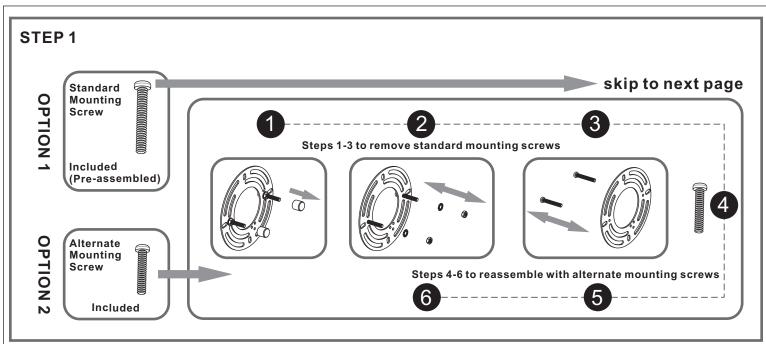

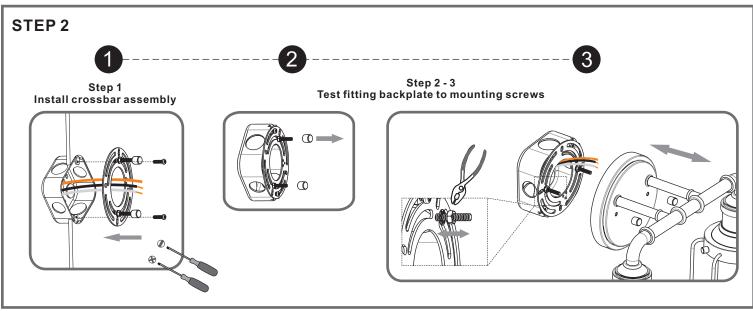

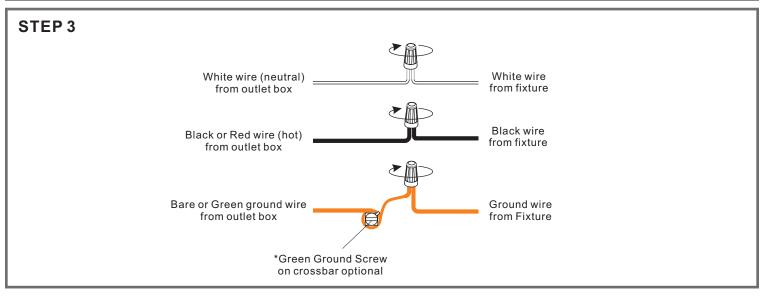

STEP 4

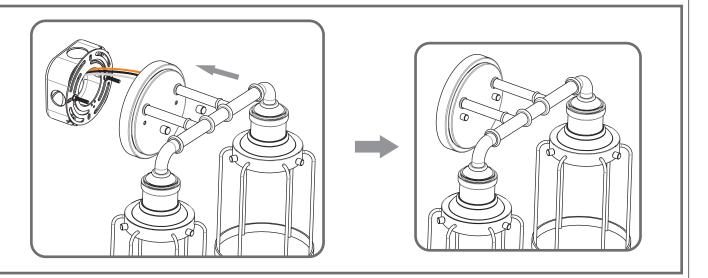

STEP 5

