
urban ambiance

Installation Instructions: UQL3791

Tools Required



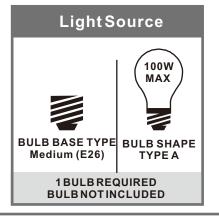

⚠ Warnings and Cautions


Turn off the electricity at the circuit breaker before installation. Consult a licensed electrician if in doubt about installation.

Turn off power to the fixture and allow the bulbs to cool before replacing.

Package Contents

Preparation: Identify and inspect all parts before beginning the installation.

Missing or damaged parts? Contact your original place of purchase.

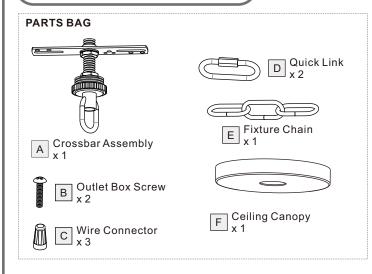




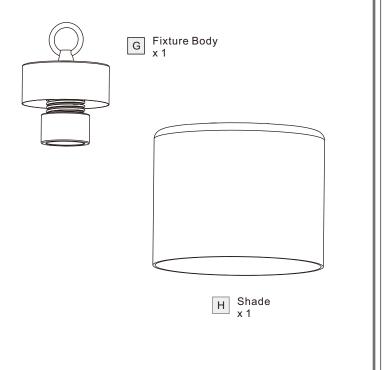


Table of Contents













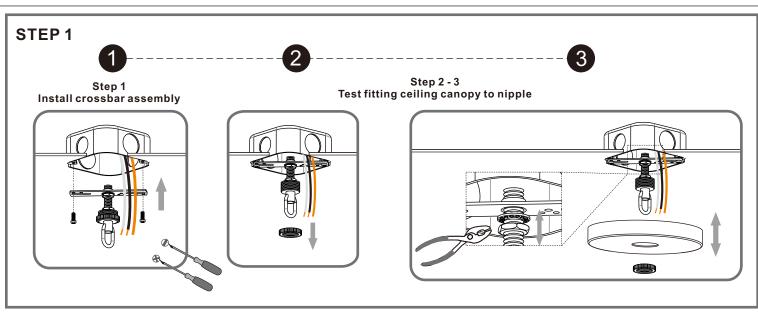


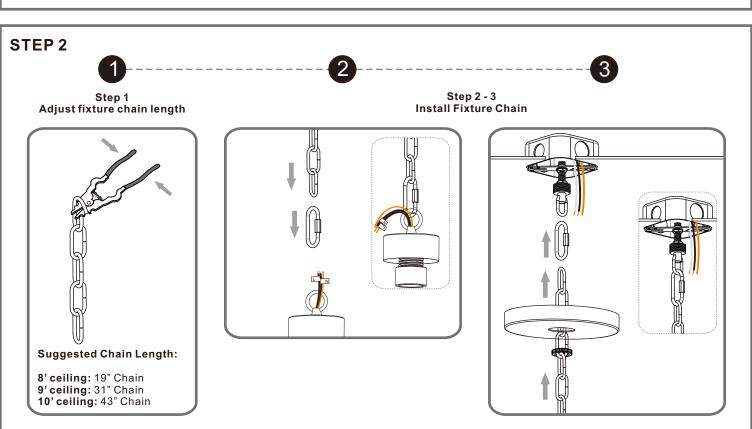





Step 1 Feed the fixture wires through the loop

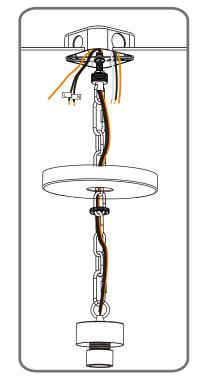



White wire (neutral) = from outlet box


Black or Red wire (hot) from outlet box



Supply wire from fixture ribbed side or identified with the Label "N"

supply wire from fixture smooth side or identified with the label "L"


Bare or Green ground wire from outlet box




Ground wire from Fixture


*Green Ground Screw on crossbar optional


STEP 4

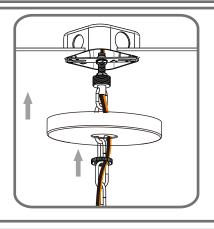

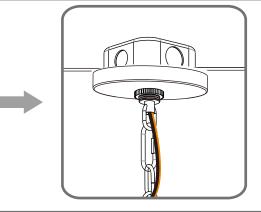


STEP 5

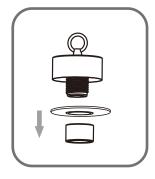

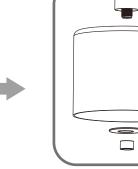



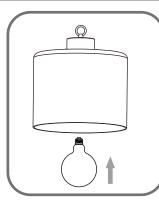

urban ambiance

www.urbanambiance.com