
urban ambiance Installation Instructions: UQL4130 **Tools Required** LightSource Δ Warnings and Cautions Turn off the electricity at the circuit breaker before installation. 60W Consult a licensed electrician if in doubt about installation. MAX Turn off power to the fixture and allow the bulbs to cool before replacing. BULB BASE TYPE BULB SHAPE Candelabra (E12) TYPE B 4 BULBS REQUIRED BULBS NOT INCLUDED Ó Package Contents D Fixture Body Preparation: Identify and inspect all parts x 1 before beginning the installation. Missing or damaged parts? Contact your original place of purchase. PARTS BAG **Outlet Box Screw** В x 2 Optional Crossbar C Wire Connector Е Assembly Candle Cover x 1 x 4 х3 Table of Contents **Crossbar Assembly** Wiring **Fixture Body** ЛΝ STEP 1 STEP 2 STEP 3

urban ambiance

www.urbanambiance.com

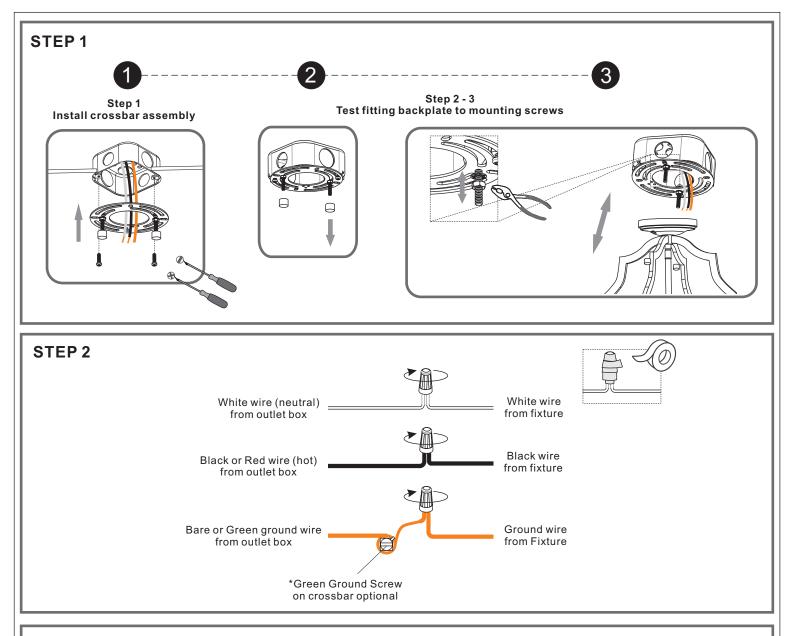

STEP 3

