

MAGNETIC SAFETY LOCKS INSTALLATION GUIDE

GENERAL INSTALLATION GUIDELINES:

SAFETY LOCK INSTALLATION DOES NOT REPLACE THE NEED FOR ADULT SUPERVISION. KEEP ALL PARTS AWAY FROM CHILDREN PRIOR TO CORRECT INSTALLATION.

MEASURE INSTALL LOCATIONS BEFORE PEELING 3M RELEASE FILM TO ENSURE MAGNETIC KEY WILL WORK AND LOCKS WILL FIT DESIRED LOCATION.

INSTALL LOCKS AWAY FROM DOOR HARDWARE & SCREWS THAT MAY INTERFERE WITH MAGNETIC LOCK & KEY.

CLEAN EXISTING SURFACE AND LET DRY.

PEEL 3M RELEASE FILM AND PRESS AND HOLD FIRMLY ON TO THE CLEAN DRY SURFACE.

ALLOW ADHESIVE TO DRY FOR 24 HOURS.

ALWAYS INSTALL KEY HOLDER AND STORE KEY OUT OF REACH OF CHILDREN.

Cabinet Style #1 - Surface Mounted Cabinet Doors




Peel and stick the latch to the cabinet frame.

Cabinet Style #2 - Flush Mounted Cabinet Doors



Peel and stick the latch to the cabinet. Set back slightly (equal to the depth of the door) from the face.

Mounting Lock to Door

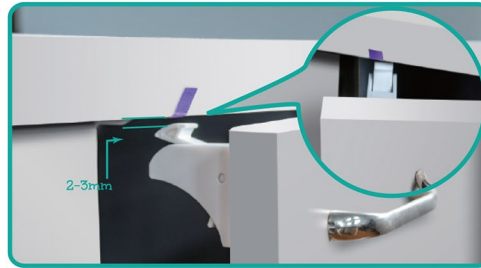

Before installing, hold the lock with fingers against the door. Close as far as possible while holding lock in place to ensure the moving clasp does not hit the frame.

Align the lock with the center of the installed latch and leave approximately 2-3mm between the top of moving clasp and the edge of door frame.

Lock On/Off Switch



For extended periods of quick access to a locked cabinet, use the unlock switch to disengage the moving clasp.

Simply switch back on to lock the door to only allow access with the magnetic key.



A



B



C

Figure A: To unlock the door, align the magnetic key with the lock. When lock clicks, the door will be unlocked. Pull key off the door to re-engage lock.

Figure B: Install the magnetic key holder out of reach of children.

Figure C: If installation space is limited, locks can be installed on their side.

If you have any questions, we are here to help. Visit us at jessaleona.com.