



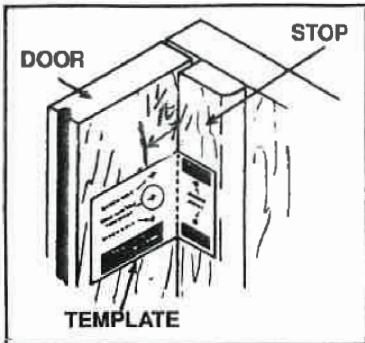

# 30970 Rim Storm Door Lock Installation Instructions & Template

FOR USE ON DOORS  $\frac{3}{4}$ " -  $1\frac{1}{8}$ " THICK

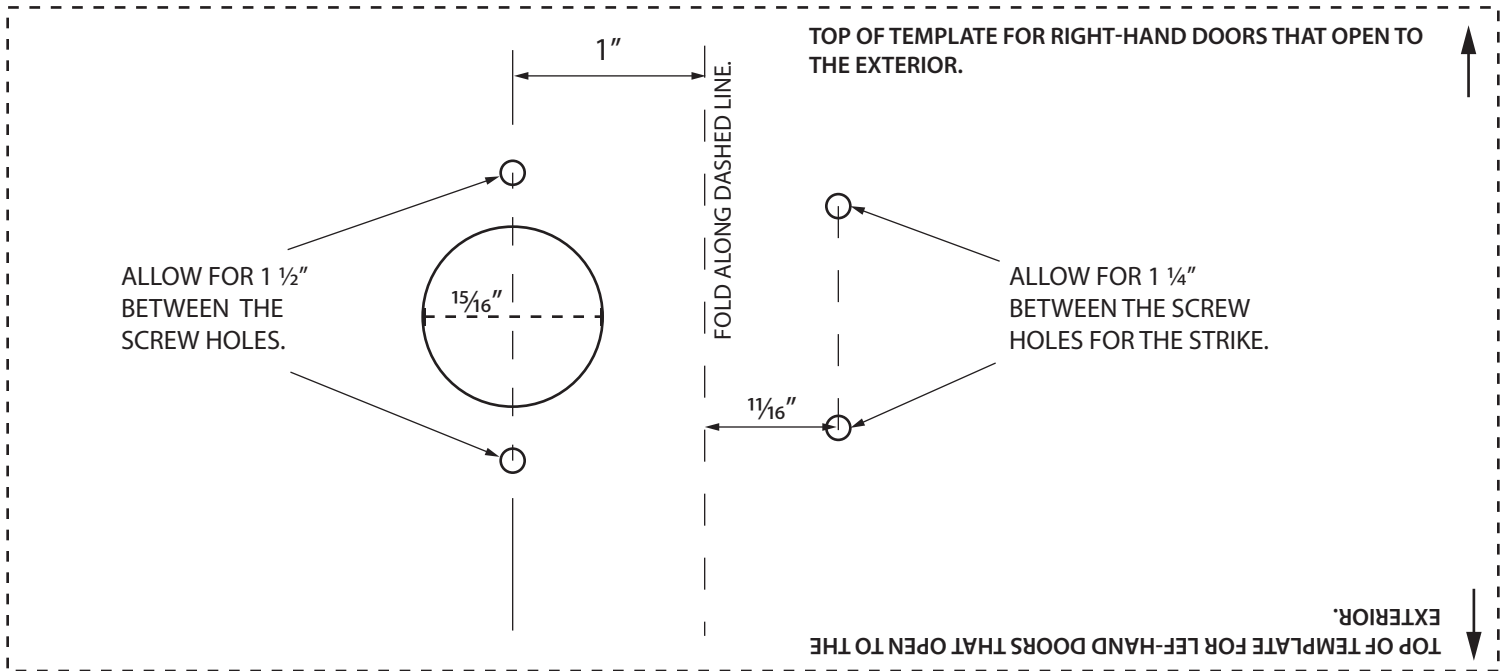

1. WITH THE DOOR CLOSED, FOLD THE TEMPLATE ALONG THE DASHED LINE AND PLACE IT AGAINST THE INSIDE CORNER OF THE DOOR AND DOOR STOP. MAKE SURE THE HANDLE CLEARS THE TRIM ON THE OTHER DOOR.

2. MARK THE SCREW HOLES AND BORE A  $\frac{15}{16}$ " HOLE IN THE DOOR FOR THE SPINDLE TO FIT THROUGH.
3. INSERT THE LEVER WITH THE THREADED SPINDLE THROUGH THE HOLE FROM THE INTERIOR SIDE OF THE DOOR AND FASTEN THE SCREWS.
4. LOCATE THE EXTERIOR ROSE BY FIRMLY SCREWING THE KNOB AGAINST IT. FASTEN IT WITH THE INCLUDED WOOD SCREWS. BACK OFF THE KNOB UNTIL THE LEVER TURNS SMOOTHLY AND TIGHTEN THE SET SCREW FOR THE KNOB AGAINST THE SPINDLE.
5. ATTACH THE STRIKE TO THE DOOR STOP WITH THE INCLUDED WOOD SCREWS. DO NOT MORTISE THE STRIKE INTO THE STOP.

