

 **PRO GROW
TENT**
Professional Series



Assembly Instructions

1.0 W x 1.0 L x 2.0 m H




- High Quality Grow Tent
- Tough ABS Plastic Fittings
- 25mm Powder Coated Poles
- 600 D Double Stitched Fabric
- Heavy Duty Industrial Zippers

www.progrow.net.au




PRO GROW TENT

Professional Series

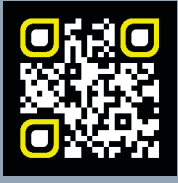


Assembly Instructions


Tent size (cm)	Tube 1	Tube 2	Tube 3	Tube 4	Tube 5	Tube 6	Tube 7
100x100x200 cm	x6	x2	x4	x4	x1	x2	/

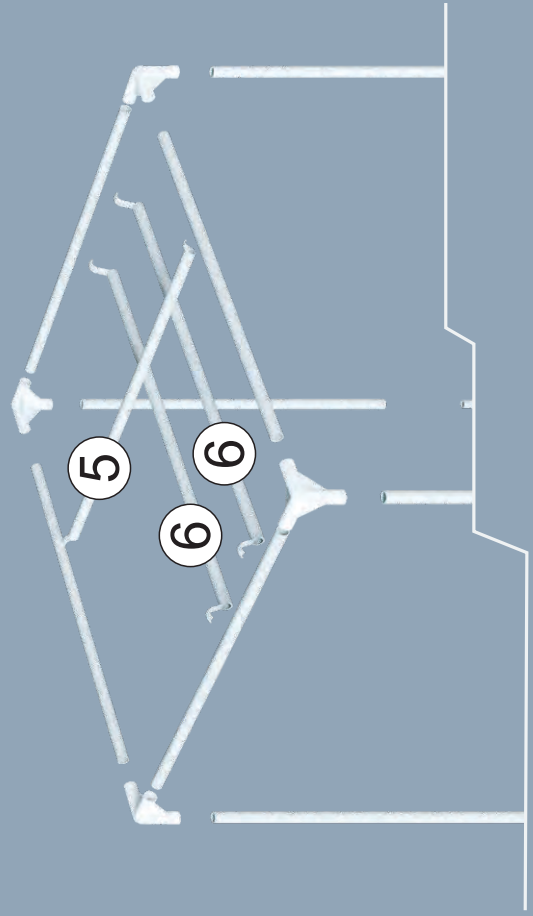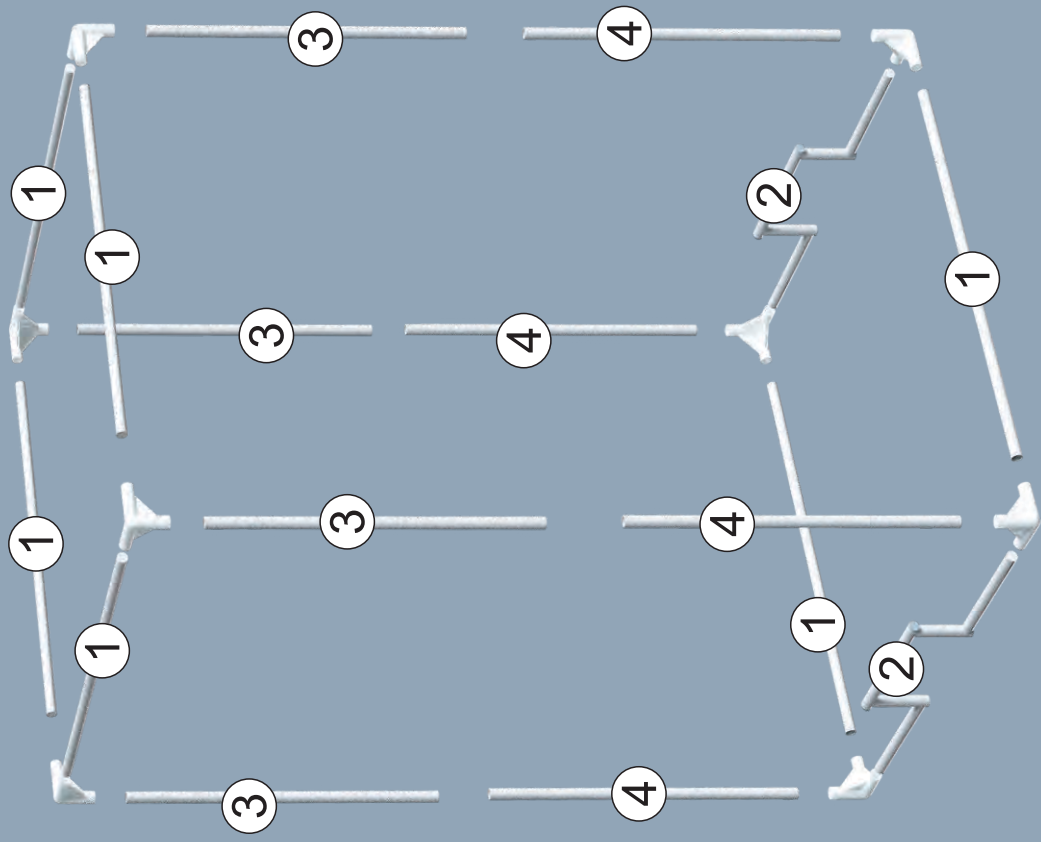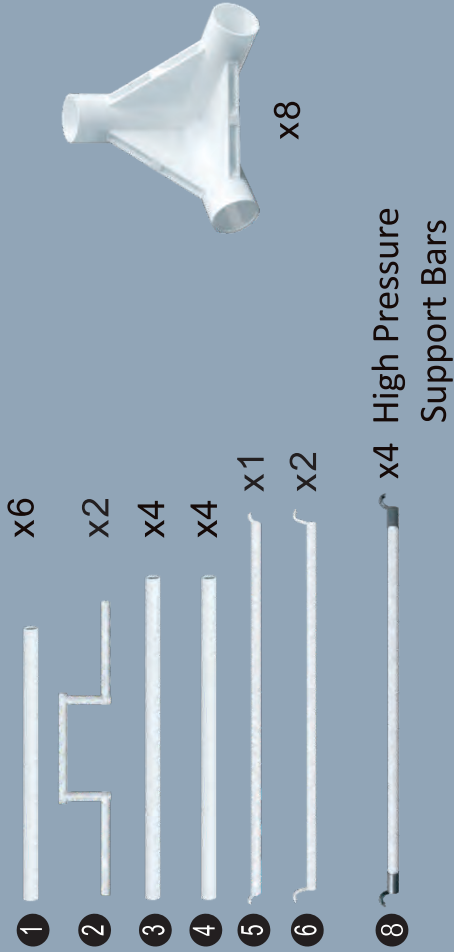

1

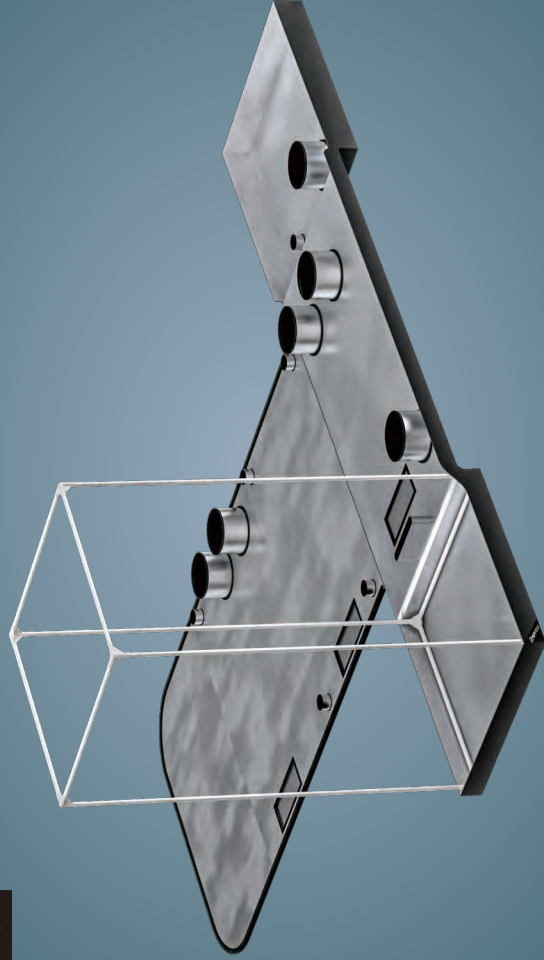


3

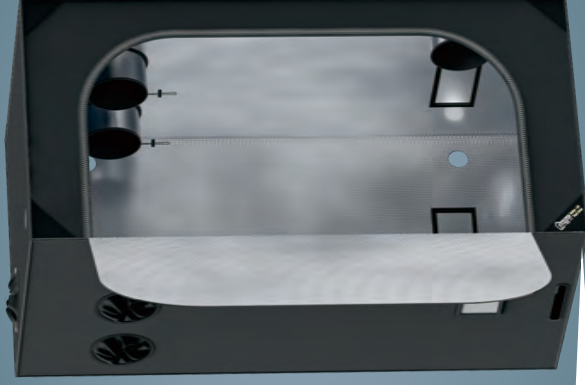

PROGROW TENTS
Bottom - Left
Front Corner

2

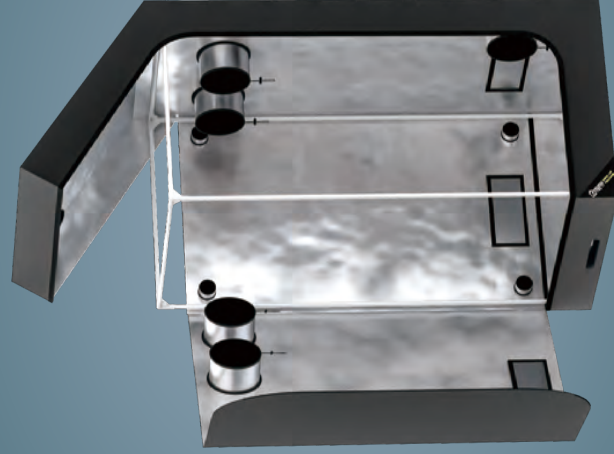

1. Unfold the tent and locate the bottom - left front corner tag for orientation. Place the assembled frame onto the tent base as pictured.
2. Lift the tent sides up and fit over the top sides of the frame.
3. Lift the back of the tent up and over the frame then zip the top and sides together.
4. Install the high pressure support poles.