



**DIAMONDBACK**

DiamondBackCovers.com / 800 935 4002

# BULKHEAD WEATHERSTRIP

## INSTALLATION GUIDE

BH-2

**20 minutes**  
Normal install time

Keep an eye out for these icons:

**IMPORTANT!**  
Important installation information

**Helpful Hints**  
Tips to assist installation

### PARTS INCLUDED



6' Sticker-Tite Rubber Gasket

### TOOLS REQUIRED



T30 Torx/Star Wrench



Rubbing Alcohol or Glass Cleaner



Clean, Lint-Free Cloth




Silicone

## INSTRUCTIONS

To ensure the bulkhead gasket sticks, make sure the surface temperature of your truck is at least 50°F and will remain so for at least a day.



Remove the square-tube top rail of the bulkhead by undoing its five bolts with a T30 Torx wrench.

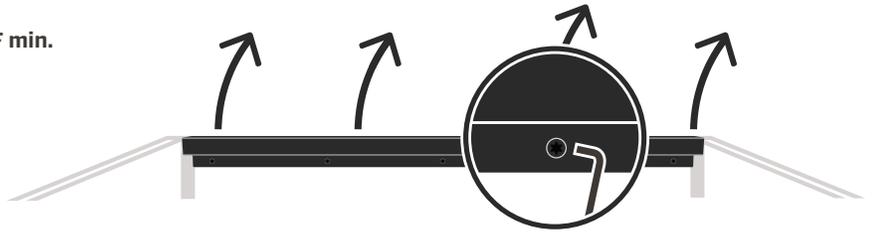

Clean the top of the bulkhead thoroughly with a clean, lint-free cloth and rubbing alcohol or glass cleaner. Allow to dry.



It is very important that the top of the bulkhead be both dry and absolutely free of dirt, oil, or any other contaminants prior to application of the gasket.




Affix the **gasket** to the top of the bulkhead so that:  
a. it is tight against the interior edges of the bed rails at both ends, and  
b. it is flush with the inside edge of the bulkhead.

Reattach the square-tube top rail to the bulkhead over the gasket.

Fill the gaps between the bed rail caps and the square-tube top rail with silicone.

Apply a bead of silicone to the cabward end of each bed rail cap to prevent water from entering the bed from under the cap.

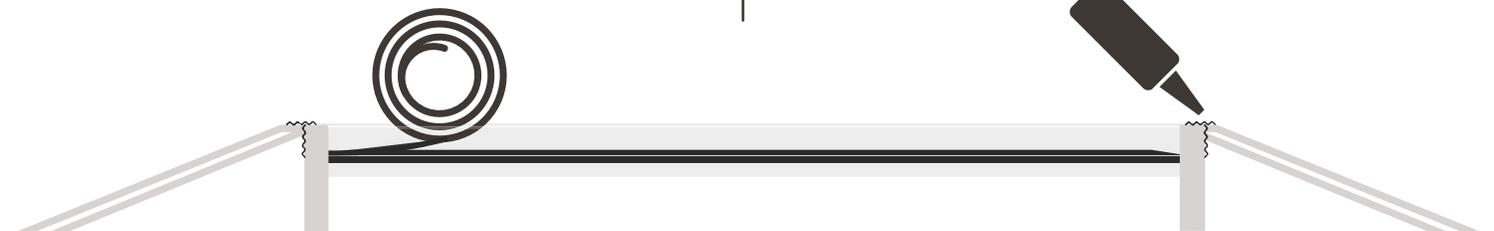

# AFFIX THE WEATHERSTRIP

9 Repeat steps 6–8 for each hole and rivet nut.

10 Re-install the bulkhead angle by inserting a hex bolt through a plain washer, through each hole in the angle, and into each rivet nut. Tighten with a 7/16" socket.


! Do not overtighten the bolts or you might strip the rivet nuts.

11 Clean the tops of the bulkhead and angle thoroughly with a clean, lint-free cloth and rubbing alcohol or glass cleaner. Allow to fully dry.



12 Set the **weatherstrip** onto the bulkhead and bulkhead angle so that:

- it's centered side-to-side and
- its narrower band of adhesive lines up with the outside edge of the bulkhead.

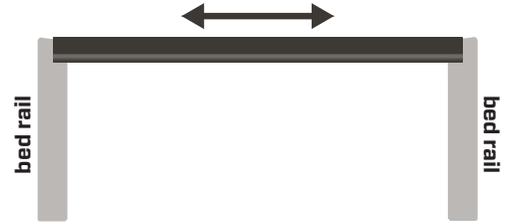

★ Aligning the adhesive band with the outside edge of bulkhead will entail that the weatherstrip overhangs the bulkhead slightly.

13 Peel the red backing off both adhesive bands 4–6 inches at a time and affix the weatherstrip by pressing down firmly along its length across the entire width of the bulkhead and bulkhead angle.

14 After you have installed your cover, leave it closed and locked for 24 hours to allow the adhesive, which is pressure-activated, to cure.

🕒 **24 hours**  
Cure time