



DIAMONDBACK

DiamondBackCovers.com / 800 935 4002

LOCK ASSEMBLY

INSTALLATION GUIDE

MISC-3


20 minutes
Normal install time

Keep an eye out for these icons:


! IMPORTANT!
Important installation information

★ Helpful Hints
Tips to assist installation

PARTS INCLUDED:



OR



Lock Handle



Ring Nut



Cam



Couplers (2)



O-Rings (4)



5/16" Nylon Lock Nut



10mm Nylon Lock Nuts (2)



10mm Phillips Machine Screws (2)



Keys

TOOLS REQUIRED:



1/8" Hex Key



Ratchet Wrench



1/2" Socket




Phillips Screwdriver



Adjustable Wrench


INSTRUCTIONS

- 1 Use a 1/8" hex key to loosen the set screws that hold the lock rods to the existing couplers.

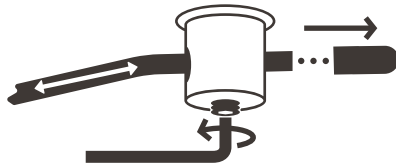


- 2 Remove the black plastic end caps from the lock rods. Remove the rods from the couplers.


- 3 Use a 1/2" socket to remove the lock nut and cam from the stem of the lock.

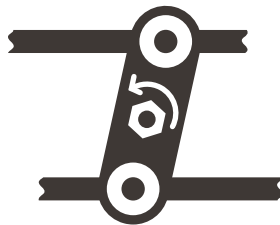

- 4 Turn the lock handle 90° to expose the Phillips machine screws that attach the handle base to the cover. Hold the nuts on the underside of the cover and remove the screws with a Phillips screwdriver.

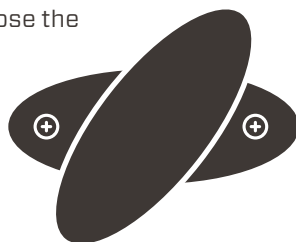


- 5 Use an adjustable wrench to remove the large ring nut from the stem of the lock. Pull the lock handle out of the cover.

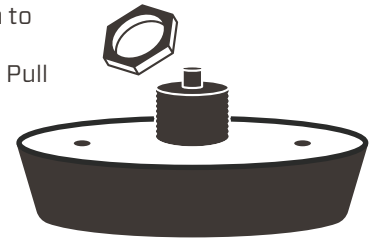

- 6 Reverse steps 1-5 for the installation using the existing lock rods and the new handle, ring nut, screws, lock nuts, cam, O-rings, and couplers that came in the replacement bag.

! Do not reuse any components from the original lock assembly.

! For the lock rods to work, orient the cam at 2 and 8 o'clock when viewed from below with the handle in the closed position.

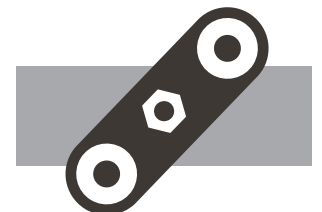

! Do not over-tighten the lock nut.