

INSTALLATION GUIDE

ATV-6

30 minutes
Normal Install Time

Keep an eye out for these icons:

IMPORTANT!
Important installation information

Helpful Hints
Tips to assist installation

PARTS INCLUDED:

Uprights



Standard/Short Bed: 2
Long Bed: 4

Rails



1
2

5/16" x 2" SS Button Head Bolts




4
8

SS Lock Washers



4
8

5/16" SS Nuts

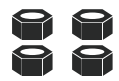

4
8

TOOLS REQUIRED:



Drill



5/16" Bit



Marker



Ratchet Wrench



1/2" Socket



3/16" Hex Key

PRE-INSTALLATION NOTE:

If you haven't installed **Side Adapter Bars** yet, do that first. Refer to the **ATV Carrier: Side Adapter Bars** Installation Guide for details.

INSTRUCTIONS

- Attach the **uprights** to the cover in the positions outlined at right by sliding their hooks under the adapter bars and pulling their tops toward you until the uprights rest on the cover's bevel.



- Double-check that the uprights can be detached from the cover without obstruction by a cleat or other external hardware. Adjust their location if needed.

A. Beds 7' or longer: Place one upright just in front of the rearmost cleat on the tailgate panel, two on the center panel, and one just behind the forwardmost cleat on the cab panel as shown.



B. Beds between 6' and 7': Place one upright just behind the forwardmost cleat on the cab panel, and one on the center panel.



C. Beds 6' or shorter: Place one upright in front of the rearmost cleat on the cab panel, and one behind the forwardmost cleat on the tailgate panel, at least 25" from the first upright.



- Hold a **rail** across a pair of uprights, flush with the tops. Mark drill locations on the rail using the pre-drilled holes in the uprights as a template.



- Drill only the outermost marks with a 5/16" bit.

To avoid difficulty attaching and removing your side rails once they're assembled, drill only the outermost marks on this step.

- Insert bolts through the rail and into the uprights. Put a lock washer and nut onto each bolt. Finger-tighten the nuts.

- Drill the other two holes in the rail using the pre-drilled holes in the uprights as a template.

- Repeat step 5.

- Tighten all the hardware using a 1/2" socket and a 3/16" hex key.

- If your cargo bed measures 7' or longer, repeat steps 3-8 to assemble to second Side Rail.

