


Installing edgemounts on walls

- Use your panel as the template to position panels on walls.
- Ensure that the fixings you use to secure G Parts are suited to the type of wall they are being attached to e.g. when securing to wood use 8 gauge counter sunk head wood screws. When securing to plaster board, concrete, block etc. obtain wall anchors specifically designed for use with the wall material from your hardware store or specialist supplier.
- Ensure that your G Parts are secured strongly enough to hold the entire loading on the G+L Parts.

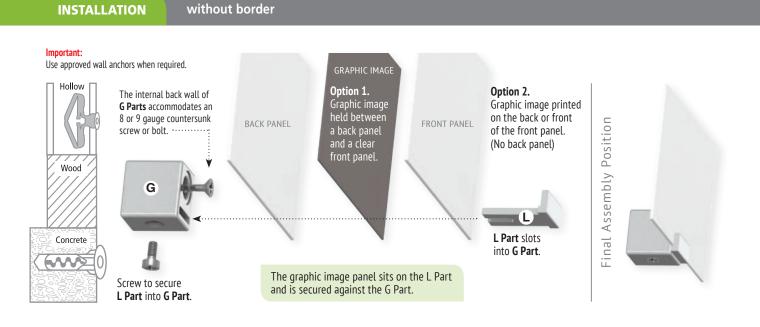

INSTALLATION with border

