

Setup Instructions for Lunar Solo

Choose a campsite away from low hanging branches, and clear the ground of sharp objects such as sticks or rocks. Choose a site where water will **drain away** from the shelter. Avoid contact of the tent's floor with sharp or abrasive objects. The use of a footprint is recommended. Six Moon Designs offers Tyvek or Polycro footprints in various sizes.

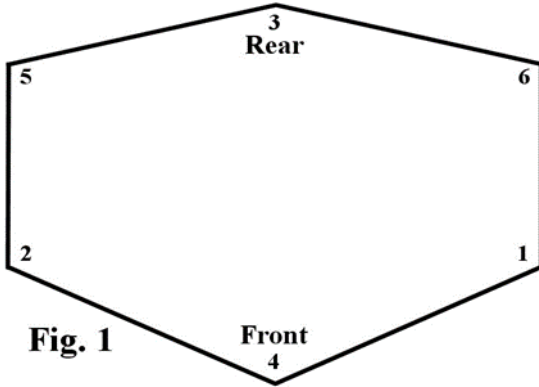


Fig. 1

1. Lay out your **Lunar Solo** with rear pointing into the wind.
2. Extend all corner guy-outs to their maximum length
3. Insert the stakes for corners 1, 2 & 3 (see figure 1). Leave a little slack in the bungee cord attached to the floor.
4. Set pole to **49" (125cm)**
5. Insert end of pole into webbing slot at the apex of the tent and place pole handle on ground. If using our 49" Carbon Fiber or Aluminum pole put tip into grommet on the ground.
6. With the front guy line under the vestibule, pull taut and stake (Fig. 1 corner 4). Use line lock at apex to adjust tension.
7. Pull out and stake corners 5 & 6 (Fig. 1).
8. Attach the webbing loop at the bottom end of the vestibule to the hook that slides along the front guy line to secure the vestibule. Tension, as needed, by sliding hook down guy line.

Notes:

- Allow a half hour for the material to relax then re-tension as needed.
- For increased stability in windy conditions, and more interior space there are additional tie outs on both sides of the shelter.
- Check out the **FAQ** section of our website for more information on the best use of your new shelter.