

Setup Instructions for Owyhee Tarp

Setting Up Your Tarp:

Choose a campsite away from low hanging branches, and clear the ground of sharp objects such as sticks or rocks. Choose a site where water will **drain away** from the shelter. We recommend using a groundsheet such as Tyvek or Polycro to replace the floor of this shelter if you are not using the floating bathtub floor.

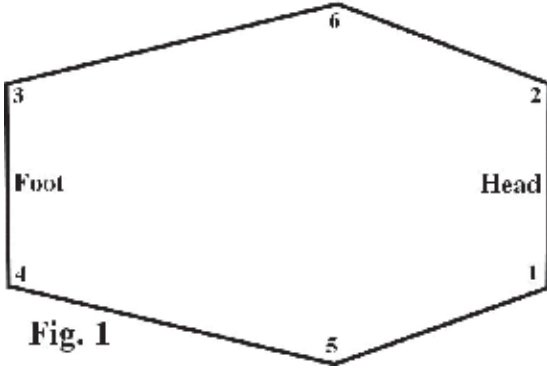


Fig. 1

1. Lay out your **Owyhee Tarp** with the head pointing into the wind.
2. Extend all corner guy-outs and vestibule buckles to their maximum length.
3. Stake out corners 1 & 2 (Fig. 1).
4. Stake out the corners 3 & 4 (Fig. 1). Leave some slack so the canopy can rise when you set your poles.
5. Set your hiking pole length to **46" (117cm)**.
6. Under the vestibule, insert one end of pole into the pocket at the apex. Keeping the pole vertical place other end on the ground.
7. Attach the buckle on the guy line to the buckle at the bottom of the vestibule door.
8. Pull out guy line so that the vestibule is taut. Stake the guy line at that point (Fig. 1 corner 5 & 6)
9. Adjust tension on the guy lines using the line lock at the apex.
10. Adjust the webbing on the buckle as needed
11. Repeat for the other side.
12. Adjust the position of your corner stakes as needed.

Removable Bathtub Floor:

After your tarp is set up you can attach the bathtub floor.

1. Extend all guylines of bathtub floor to full length.
2. Clip the bathtub floor into the D-Rings or Loops found in corner 1, 2, 3, and 4.
3. Tension to lift floor to desired height.

Notes:

- Allow a half hour for the material to relax then re tension as needed.
- For increased stability in extremely windy conditions, attach guy lines to each of the side tie-out loops and stake out or tie off to vegetation.
- Check out the **FAQ** section of our website for more information on the best use of your new shelter.

