



Installation Instructions

1. Thoroughly clean the vacuum-head with a non-bleach and non-oil-based cleaning solution.

Note: Dirt will prevent Velcro® adhesive from adhering well.

2. Peel plastic backing from Velcro and attach strips directly to the hard plastic frame of the vacuum-head as shown in Figures 1 and 2.

Note: Do not attach Velcro to vacuum manufacturer's vinyl bumper.

3. For best results, install bumper 24-hours after attaching Velcro.

Note: Adhesive reaches maximum strength 24-hours after Velcro installation.

4. Center, stretch and attach the bumper as shown in Figures 3 and 4.
 - a. Bumper must completely cover the Velcro to prevent dirt from attaching to adhesive.
 - b. Bumper must not hang below the vacuum-head, as this will impede the vacuum's performance.
 - c. Do not cover vacuum's ventilation system.

Care Instructions

Remove dust and debris with a vacuum attachment or lint-roller.
Machine washable; air dry.

Figure 1

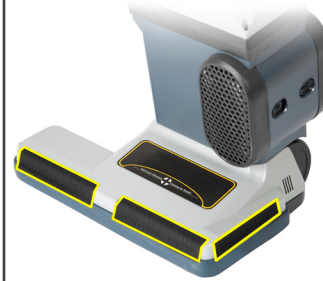


Figure 2



Figure 3



Figure 4

