



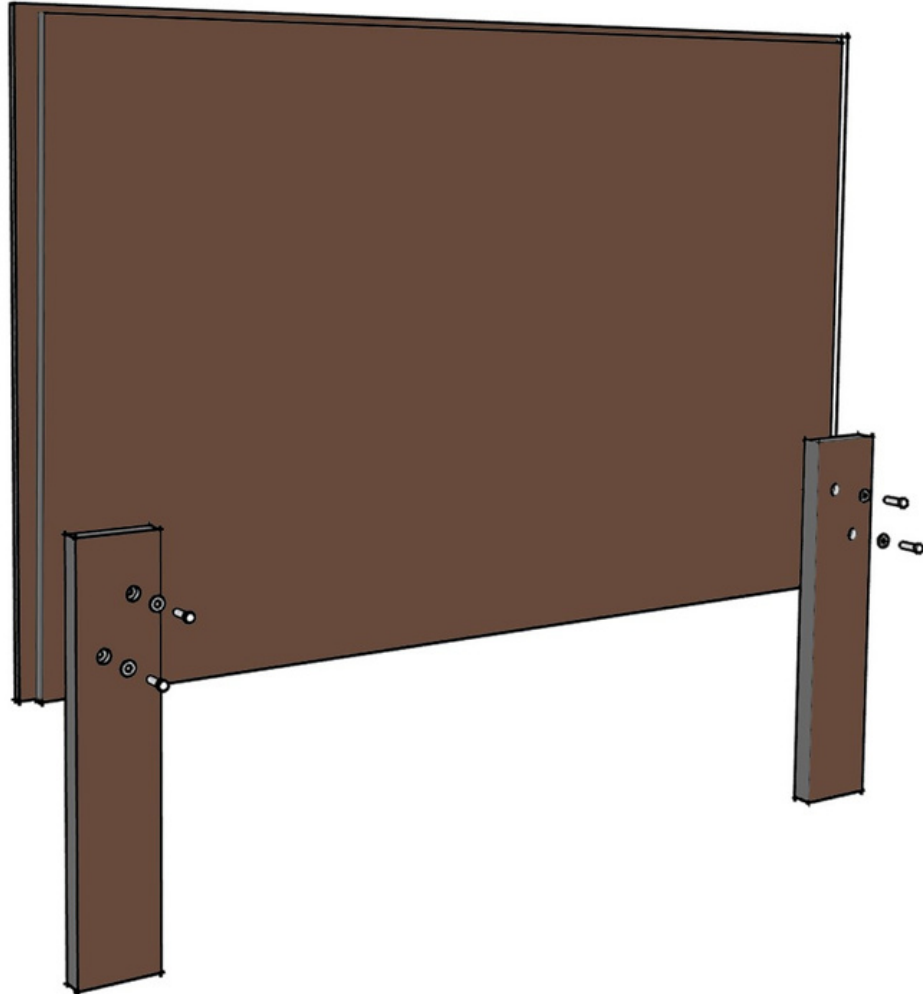

# Headboard Assembly

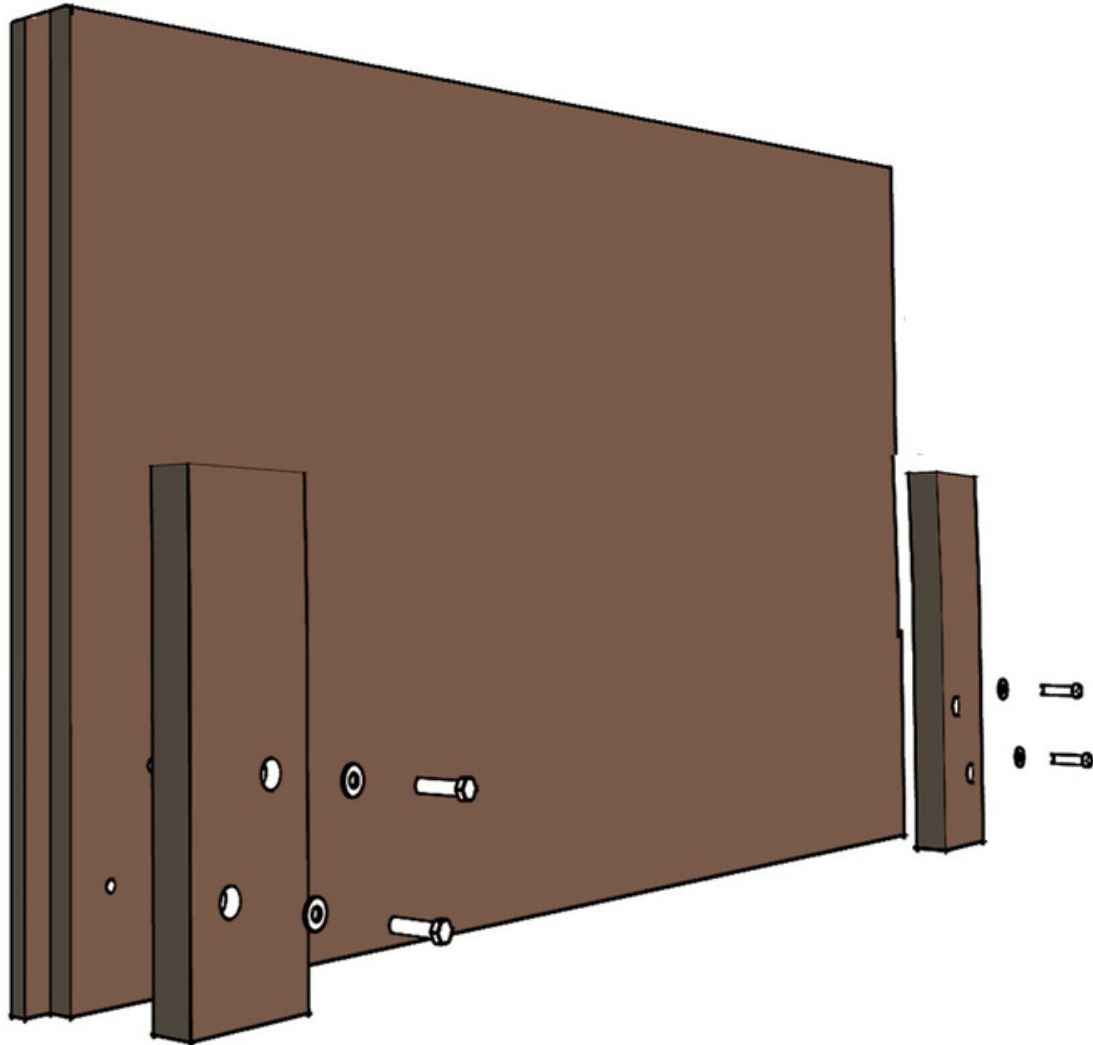

### Included



4 1.5" 5/16-18 bolts  
4 washers

### Required



Crescent wrench or 1/2 inch socket wrench

### Instructions

The legs are secured upside down to the back of the headboard.

- 
- Step 1** Remove legs from headboard

---

  - Step 2** Rotate legs 180 degrees to align with existing holes in a standing position

---

  - Step 3** Tighten bolts fully

Need anything else? As ever, we are at your service at [hello@kasecustom.com](mailto:hello@kasecustom.com).