





# Wood Leg Desk Assembly

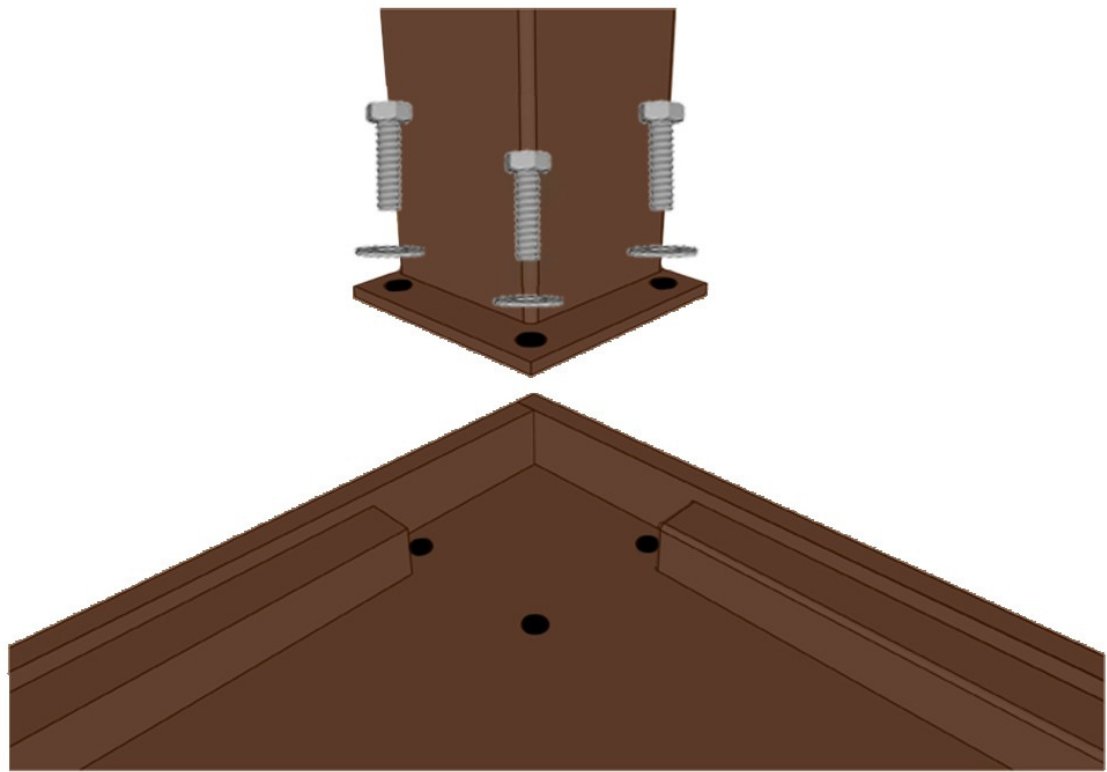

### Included

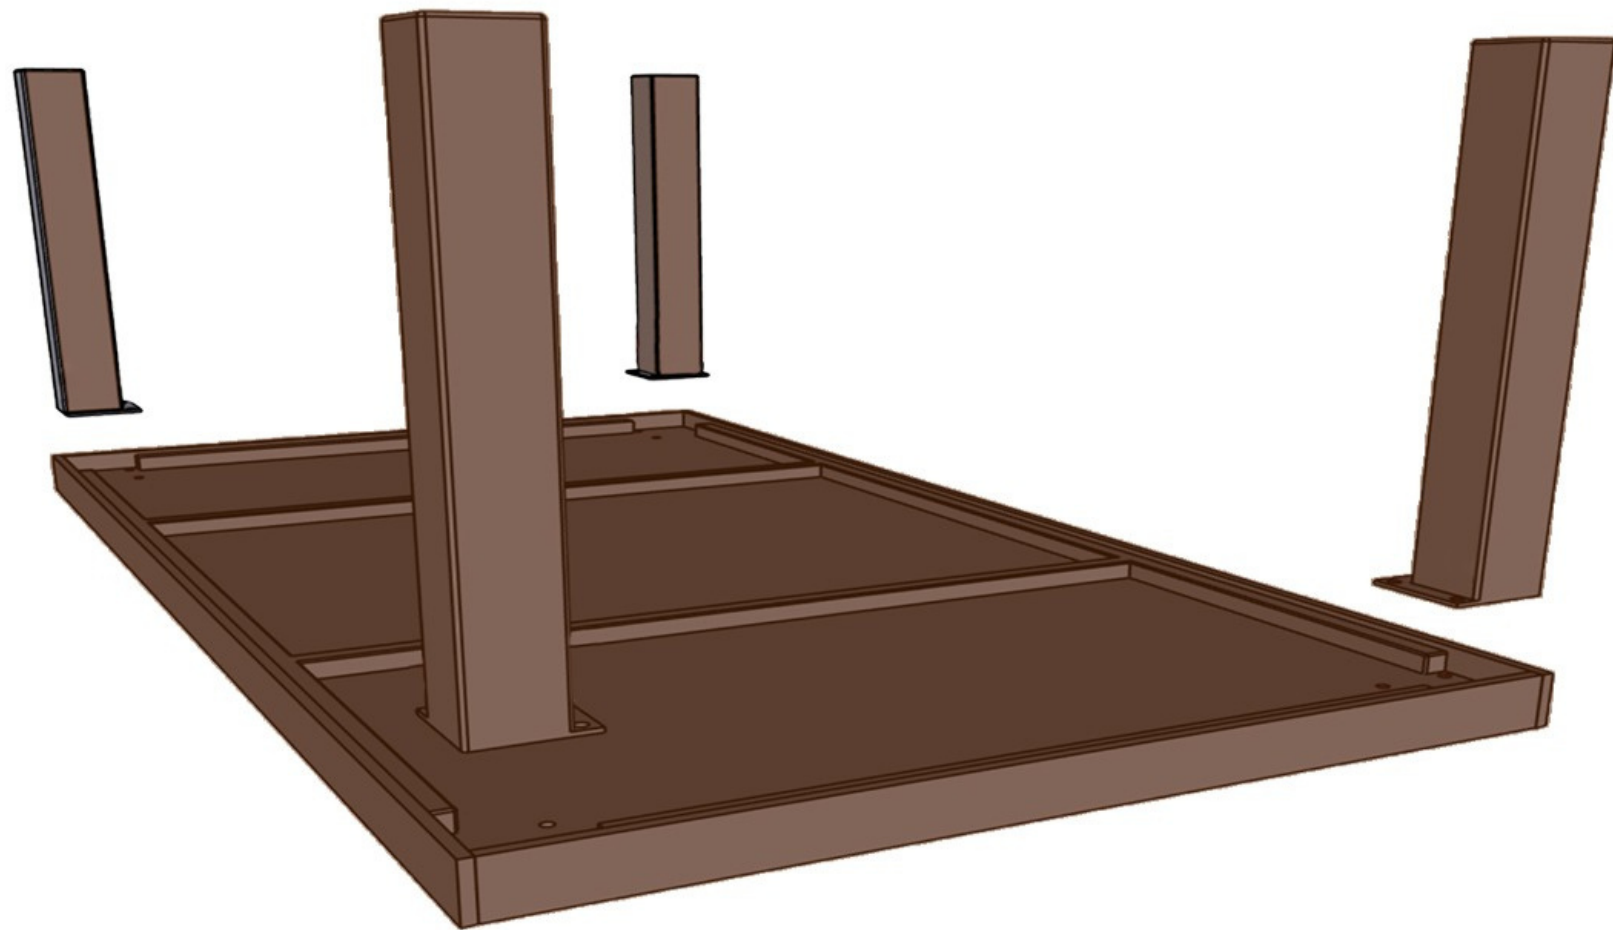

12 1.5" 5/16-18 bolts  
12 washers

### Required



Crescent wrench or 1/2 inch socket wrench

### Instructions

Align legs and tighten bolts fully

*Need anything else? As ever, we are at your service at [hello@kasecustom.com](mailto:hello@kasecustom.com).*