

# Toddler Guardrail Installation Diagram for Conversion Cribs

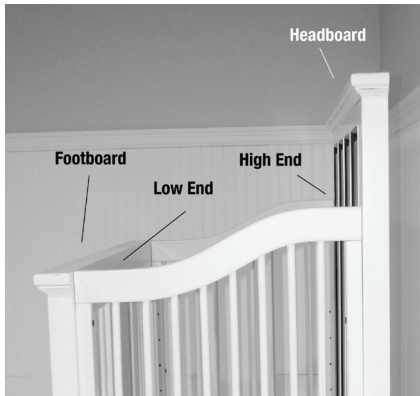
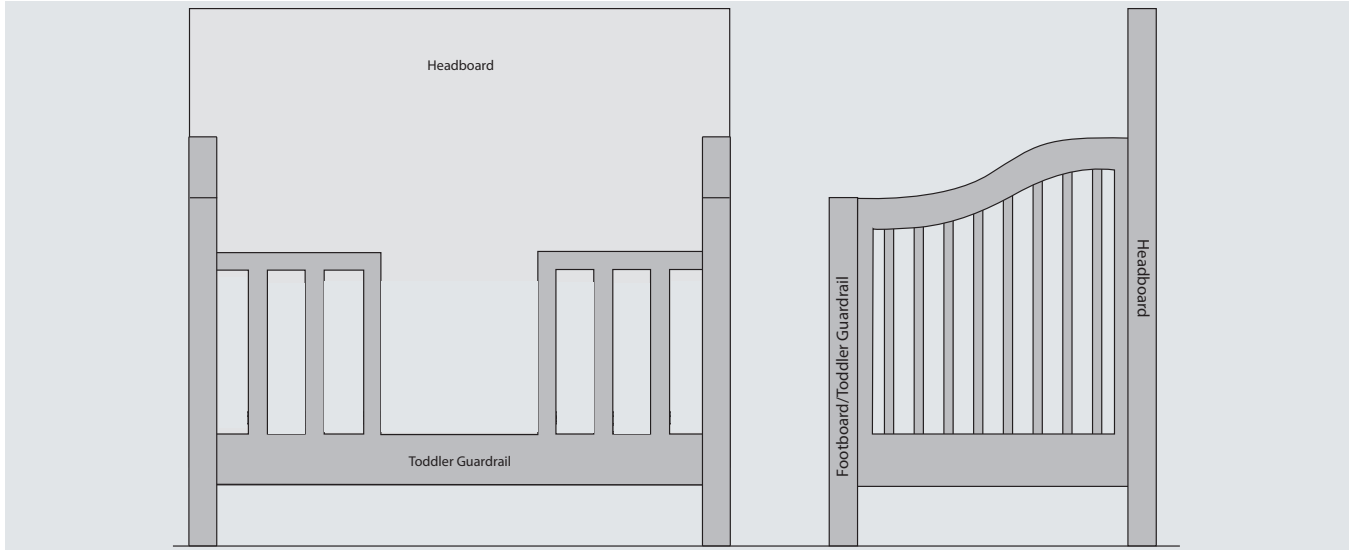


Figure 1



Figure 2

1. Uninstall existing crib footboard by removing the four allen bolts with the allen wrench (provided). (See Figure 1)

2. Replace crib footboard with your new Toddler Guardrail.

3. Ensure that the lock washers are placed on all four Allen bolts. (See Figure 2)

4. Replace the footboard with the Toddler Guardrail by fastening the four previously removed Allen bolts and lock washers back through the crib gates into the guardrail's pre-drilled holes.

## **⚠ WARNING:**

### **INFANTS HAVE DIED IN TODDLER BEDS FROM ENTRAPMENT.**

Openings in and between bed parts can entrap head and neck of a small child.  
NEVER use bed with children younger than 15 months.  
ALWAYS follow assembly instructions.